

COVER
TECHNICAL INFORMATION
FOR NSM-PHONOGRAPH
CD SILVER SKY

25 1/4" CD TECHNOLOGY

TECHNICAL INFORMATION, complet - Part-No. 174 831 -

NSM
REPARATEBAU
Dorn & Co. KG
6530 Bingen
Steinlandstraße 240
Telefon 06721/4070

PART-№
219 102

| | |
|----|-------------------------------|
| 1 | TECHNICAL INSTRUCTIONS |
| 2 | OPERATING INSTRUCTION |
| 3 | STATISTIC of SERVICE PROGRAMS |
| 4 | CONTROL UNIT |
| 5 | DISPLAY/ KEY BOARD |
| 6 | CENTRAL UNIT |
| 7 | OUTPUT STAGE |
| 8 | CD-CHANG |
| 9 | TITLE DRU |
| 10 | COIN and BILL ACCEPTOR |
| 11 | REMOTE CONTROL |
| 12 | LIGHT ORGAN |
| 13 | OUTPUT TRANSFORMER |
| 14 | TROUBLE SHOOTING |
| 15 | ACCESSORIES |
| 16 | |
| 17 | |
| 18 | |
| 19 | |
| 20 | |

GENERAL

The modern technology of this new NSM phonograph "CD SILVER SKY" with CD changer assures the highest functional reliability. A practical diagnostic system is available for maintenance and service.

In order to assure satisfactory operation at all times we recommend reading the technical descriptions carefully so that you are familiar with all service operations.

The following technical documents include:


- 1 The "TECHNICAL INSTRUCTIONS" with important information regarding set-up of the phonograph, technical data, location of the components, the "cabinet" parts list as well as the electrical plan and various wiring diagrams.
- 2 The "OPERATING INSTRUCTIONS" with explanations regarding play and settings as well as short instructions for statistics and service programs.
- 3 The "STATISTICS and SERVICE PROGRAMS" as well as test programs and error displays. The convenient service programs help the user in maintenance and control and permit the transfer of bookkeeping and technical data into the new NSM recording device and the printer "NSM DATAPRINT 2000".
- 4-13 The "UNIT DESCRIPTIONS" for control unit, display/keyboard, central unit, output stage, CD changer, title display, electronic coin mechanism, light organ and bill validator, remote control and output transformer with their functions and, where applicable, wiring diagram and parts list.
- 14 "TROUBLE-SHOOTING CHART", a description of errors, error displays as well as flow chart to determine errors.
- 15 "ACCESSORIES", information on genuine NSM accessories with instructions for installation and exercising options.

The information and illustrations contained in these technical documents are up to date at the time of publication.

SUBJECT TO TECHNICAL MODIFICATION WITHOUT OBLIGATION TO MODIFY EQUIPMENT ALREADY DELIVERED!

Copyright by
NSM Aktiengesellschaft, W6530 Bingen/Rhein 1, Germany

No reprint in full or part unless approved.

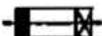 "Caution: Replace With Same Typ Fuses"

"Attention: Utiliser Un Fusible De Rechange de Même Typ".

The CD-Player with Laser pick-up used in this phonograph is in compliance with the regulations of the F.D.A.

Accession number B 320 425 Supplement 15

This equipment complies with the requirements in Part 15 of FCC Rules for a Class A Computing Device. Operation of this equipment in a residential area may cause unacceptable interference to radio and TV reception requiring the Operator to take whatever steps are necessary to correct the interference.

*TECHNICAL INSTRUCTIONS
FOR NSM-PHONOGRAPHS*

SILVER SKY

ES IV-CD TECHNOLOGY

NSM

Aktiengesellschaft
Saarlandstraße 240
6530 Bingen am Rhein
Telefon: 067 21/407-0
Telefax: 067 21/407 510

PART-№
219 103

INDEX

1. PLEASE READ INSTRUCTIONS
 - 1.1. Transport damages
 - 1.2. Keys
 - 1.3. Transport devices
 - 1.4. Power connection
 - 1.5. Title strips and CD's
2. LAYOUT OF UNITS
 - 2.1. Display / Keyboard
3. SPECIFICATIONS
 - 3.1. Electrical data
 - 3.2. Musik power
 - 3.3. Fuses
 - 3.4. Lighting
 - 3.5. Credit / Cash input
 - 3.6. Keyboard
 - 3.7. Display
 - 3.8. CD changer
 - 3.9. Loudspeakers
 - 3.10. Special features
 - 3.11. Dimensions
4. LOUDSPEAKER CONNECTION
5. SPARE PARTS LIST "CABINET"
6. OPERATING SCHEME ES IV-CD TECHNOLOGY
 - 6.1. WIRING DIAGRAM - ILLUMINATION

I. PLEASE READ INSTRUCTIONS

I.1. Transport Damages

If external damage due to transport is noticed, this should at once be recorded on the delivery slip and endorsed by the person making the delivery.

The manufacturer is not liable for damages caused during transport!

I.2. Key

One cabinet key and one cashbox key are taped to the front panel. The other keys are in the cashbox.

Upon opening the cabinet lock on the right side the lid may be lifted fully upwards.

I.3. Transport Devices

Devices for safety and protection during transport have to be removed before operating the phonograph.

Prior to any further transit the safety and protection devices have to be replaced.


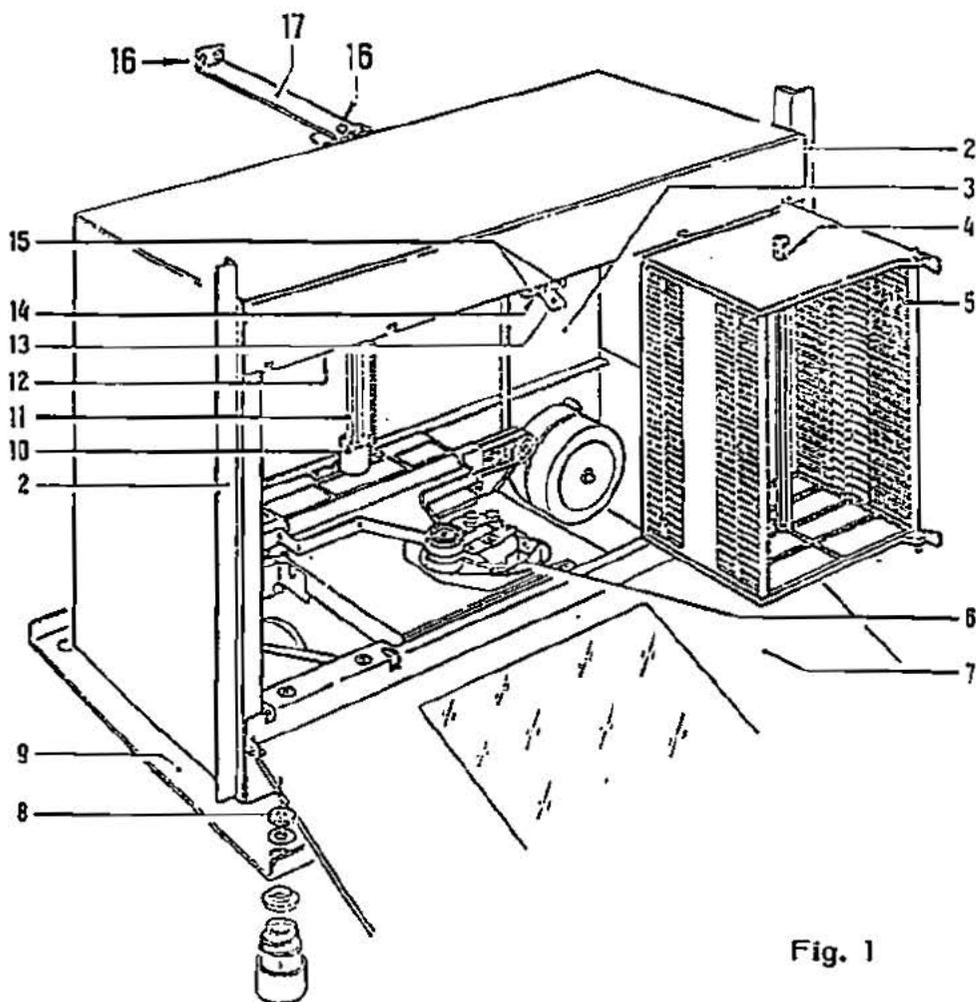


Fig. 1

- Take off securing screws (16) and holding bracket (17).
- After loosening fastening screw (14).

If the holding bracket of the PCB's (12) is to be loosened, the fastening screw has to be completely removed.

- Press the service keys (15) to the center and swing out the left and right magazine (5).
- Remove slotted plastic pipe from the lift axle (11), grip the lift close to lift axle (10) and pull up.
- Remove cover from playing mechanism. Remove foam padding (A) or rubber ring (B), if applicable, which protect the radial motor. Do not insert foam padding on the cable side if safety devices have to be installed for further transport.

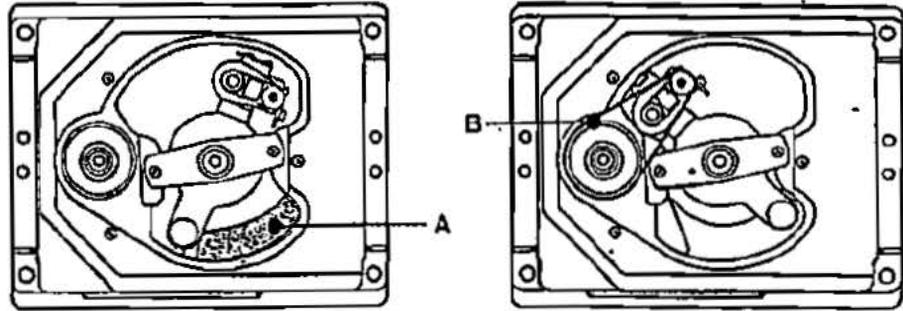

- Loosen CD changer by turning the four nuts (8) so far back from the bottom plate (9) that the changer moves freely.

Keep transport devices in a suitable location in cabinet for later transport!

Information for transport of CD changer:

When exchanging the changer, it may only be transported in the original packaging!

- Remove magazine, push the proper button (15) outwards and remove the unit.
Inserted CD's can be kept from falling out when the plastic pipe from the lift axle as well as a second one from the enclosed package is put through the opening (4) and all CD's of the magazines.
- Remove design parts: Take out front glass (7), take off side trim plates (2).
- Unscrew bottom plate from changer.
- Put safety devices in proper sequence.

1.4. Power Connection


The label on the power cord shows the voltage setting by the factory. For other voltages set voltage required on transformers.

Green-yellow of the three-wire power cord must be connected to the ground according to the international safety code. The line cord is located in a box on the rear of cabinet. To pull out the line cord the steel cover has to be removed (4 screws). Put the cable through the respective hole in the cover and put the cover back afterwards.

Check main voltage before connecting!

After plugging in the phonograph turn on the switch located at the rear of the cabinet (fluorescent lights should row light up).

1.5. Insert title strips and CD's

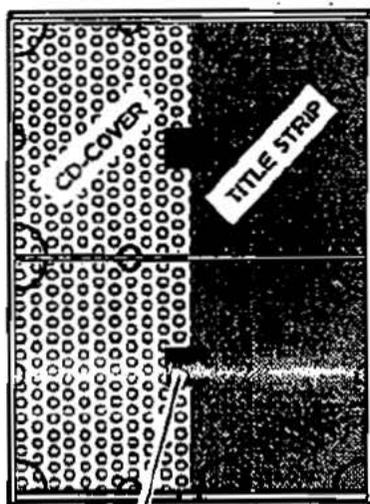

STICKER

This phonograph is equipped with a new title indication.

Insertion of CD cover and title strip is down as follows:

Insert CD cover on the left side of the title program display or push in.

If the covers are bigger than 120x120 mm, they need to be cut to size -please use only title cover-.

Insert title strip on the right side and secure with attached sticker.

The title program displays are moved by pressing the  key or the  key on the outside of the machine or the "TL" or "TR" key on the title display PCB.

CD Changer (Fig. 1): Push button (15) to the center, swing out the magazine, pull out tray and load with CD's. Observe the sequence of the magazine and title strip numbers.


Take care to push in the CD trays until they rest in center and do not hinder the lift.

Note: To take out the magazines push the button (15) to the outside; take out magazines one after the other!


The CD's can be protected against falling out, when transporting loaded magazines, by putting the plastic pipes (4) through the magazines and all loaded CD's.

LAYOUT OF UNITS

- OUTPUT TRANSFORMER
- CENTRALE CD
- OUTPUT STAGE
- CONNECTION UNIT
- CROSS OVER NETWORK
- TITLE INDICATION II
- DISPLAY/KEYBOARD
- RECEIVER FOR REMOTE CONTROL
- CONTROL UNIT CD
- COIN MECHANISM
- CD-CHANGER
- LIGHT GENERATOR/ORGAN

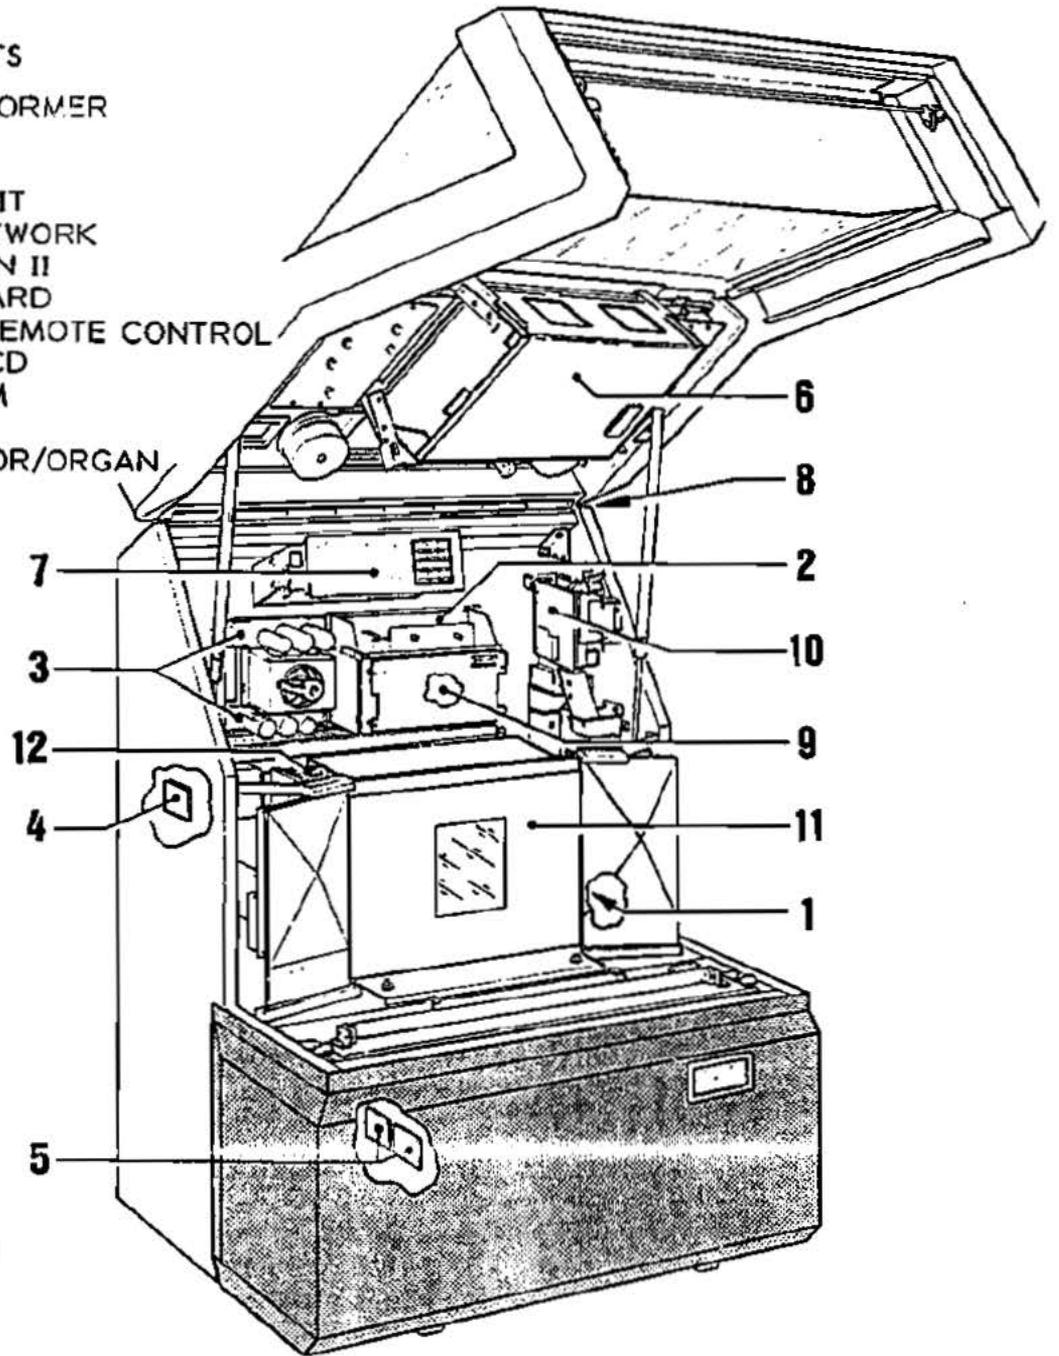

2.1. SELECTOR and DISPLAY PANEL

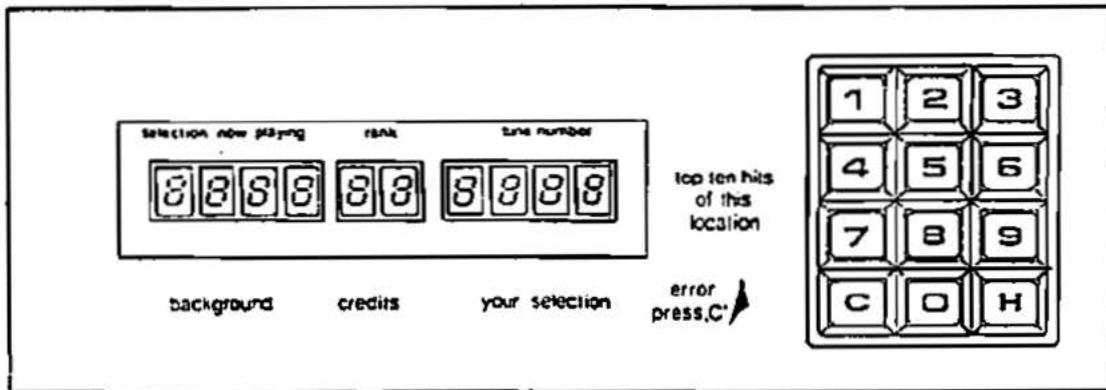

Display panel with displays 1, 2 and 3 as well as 12 button selector

Fig. 2

3. SPECIFICATIONS

3.1. Electrical Data

Main voltage: 100-200 V (exchangeable), 50/60 Hz

Power consumption
at stand by 170 W
at play 450 W

3.2. Musik Power

2 x 200 watts music power at 2 ohms

3.3. Fuses

Replace fuses only with those of same value!

3.4. Lighting

Lamps = 12 V / 2 W
1 fluorescent lamp = 16 W
2 fluorescent lamps = 13 W

3.5. Credit / Cash Input

Maximum credit display is 99.

Price list adjustable individually or as per table.

Free credit adjustment / permanent credit key-operated switch for free credits and background, elect.-mech. cash counter (optional).

3.6. Keyboard

10 number keys 0-9
1 correction key "C"
1 hit-step key "H"

3.7. Displays

Display 1 with 4 seven-segment LED's
Display 2 with 2 seven-segment LED's
Display 3 with 4 seven-segment LED's
1 lamp display "10 top hits"
1 lamp display "background"
1 lamp display "credit"
1 lamp display "your selection"
1 lamp display "error, press key "C"

3.8. CD changer

NSM CD changer for maximum 100 CD's, 5- or 3 inch disc player:

Philips CD-2-system with CDM-3-playing unit, servo panel for control of CDM-3.

3.9. Loudspeakers

2 loudspeakers P 300 4 ohms
2 loudspeakers P 175 8 ohms
2 loudspeakers P 135 8 ohms
2 loudspeakers Skk 10 4 ohms

3.10. Special Features

Integrated microphone preamplifier and connection socket for microphone with paging switch.

Computer-controlled amplifier protection for overload (mismatch).

3.11. Dimensions

| | |
|--------|-----------|
| Height | 56 inches |
| Width | 38 inches |
| Depth | 27 inches |

4. LOUDSPEAKER CONNECTION

The ES-IV amplifier supplies an output of 2 x 200 watts music power at 2 ohms per channel.

The impedance of the cabinet loudspeakers is 5,5 ohms, therefore, the cabinet speakers use 2 x 70 watts music power from the amplifier - only one half of the available power.

Therefore, additional loudspeakers can be connected (Fig. 1).

However, in this case the additional loudspeakers connected can not have an impedance of less than 3 ohms because otherwise the amplifier would be "mismatched" and the overload protection would operate.

If loudspeakers with a higher impedance are connected (Fig. 2), a number of speakers can be connected parallel. In that case, a loudspeaker with a higher impedance would naturally be lower in volume.

The ▼ = polarity must be maintained because otherwise bass reproduction would nullify itself.

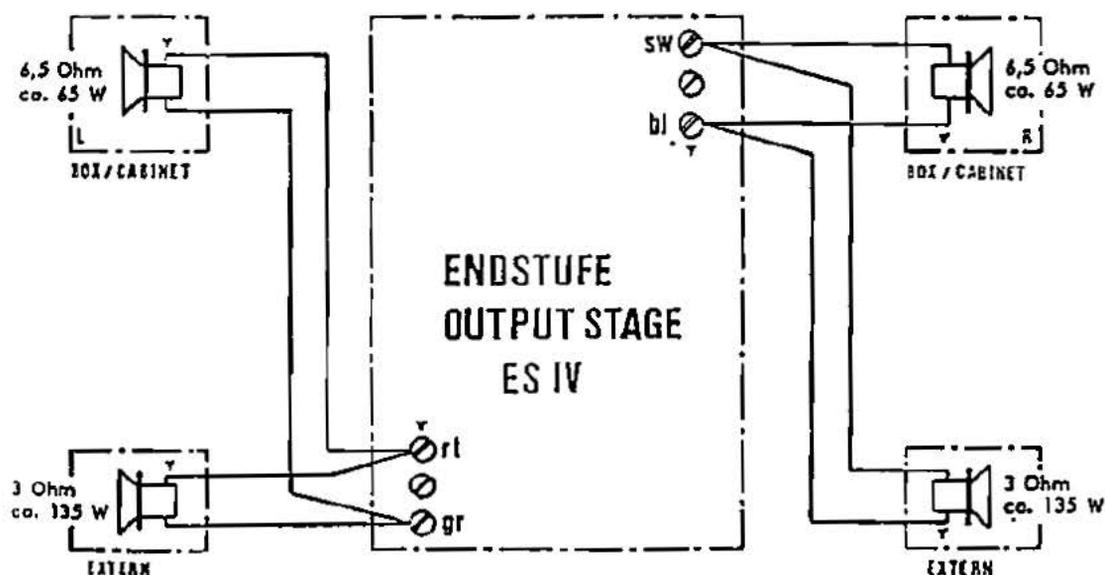


Fig. 1

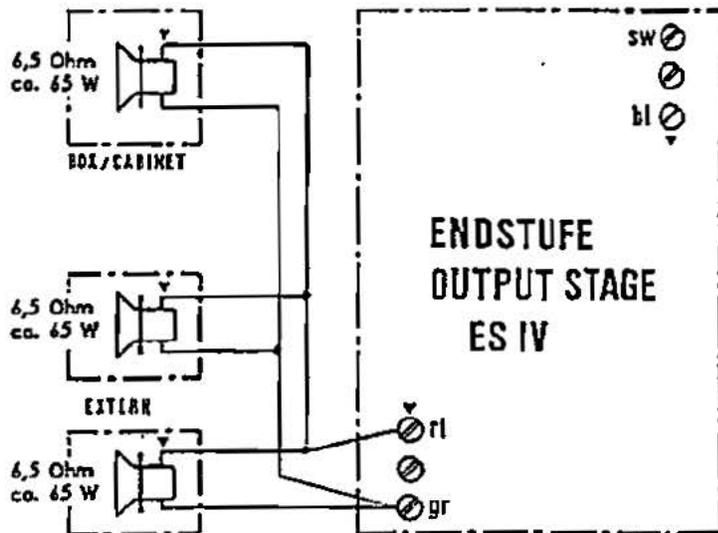


Fig. 2

Mono mode; sound system for separate rooms; see Fig. 3.

If the volume is to be controlled independently from 2 rooms, both cabinet speakers can be connected to one channel. The loudspeaker for the other room can then be connected to the free channel. For that a jumper has to be soldered at DR 202 (see cut-out PCB control unit). For this independent procedure a volume control with separate controls is necessary (see remote control).

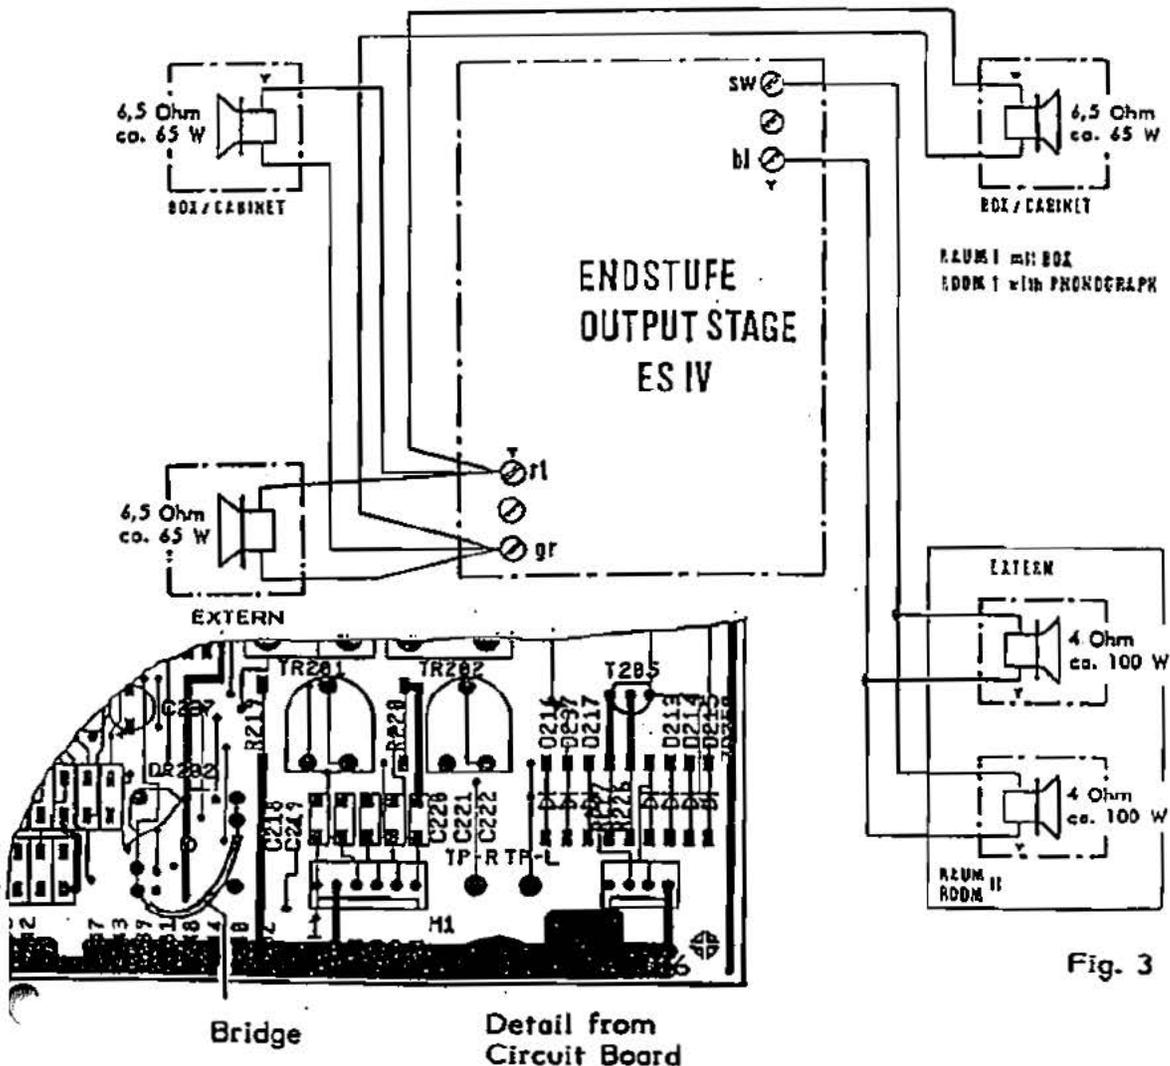


Fig. 3

Additional Loudspeakers and Separate Control

If even more speakers are to be connected whereby the total impedance drops below 2 ohms, an output transformer has to be used (see schematics "loudspeaker connection" and unit description "OUTPUT TRANSFORMER"). Cabinet speakers (Fig. 4) in serial connection result in lower volume!

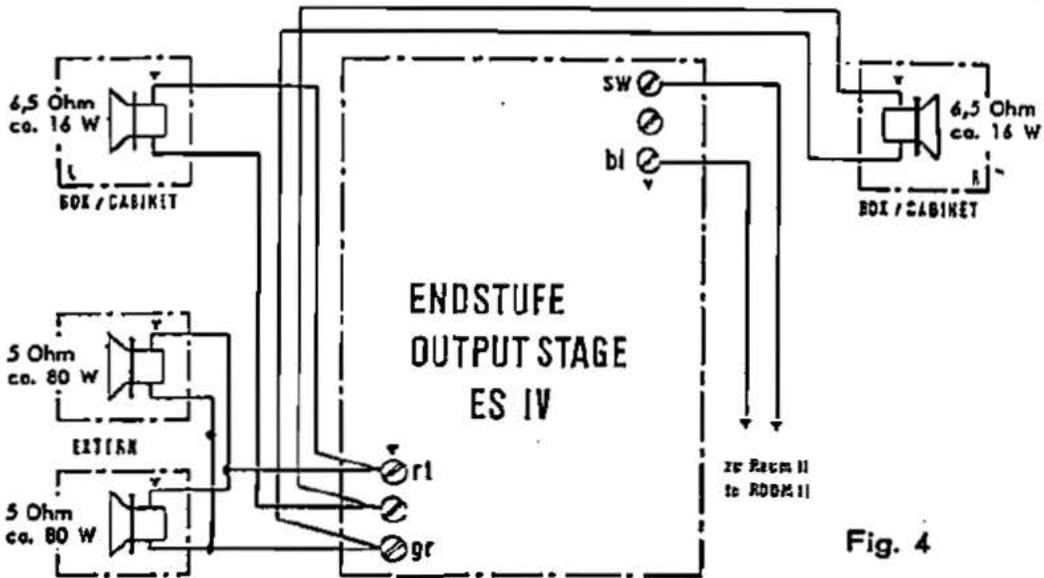


Fig. 4

An auxiliary amplifier can be connected for independent stereo control of other rooms as well as for increased power requirements.
See also unit description "Central Unit", connection of auxiliary amplifier, and "Accessories", tape recorder connection cable or CD-audio connection.

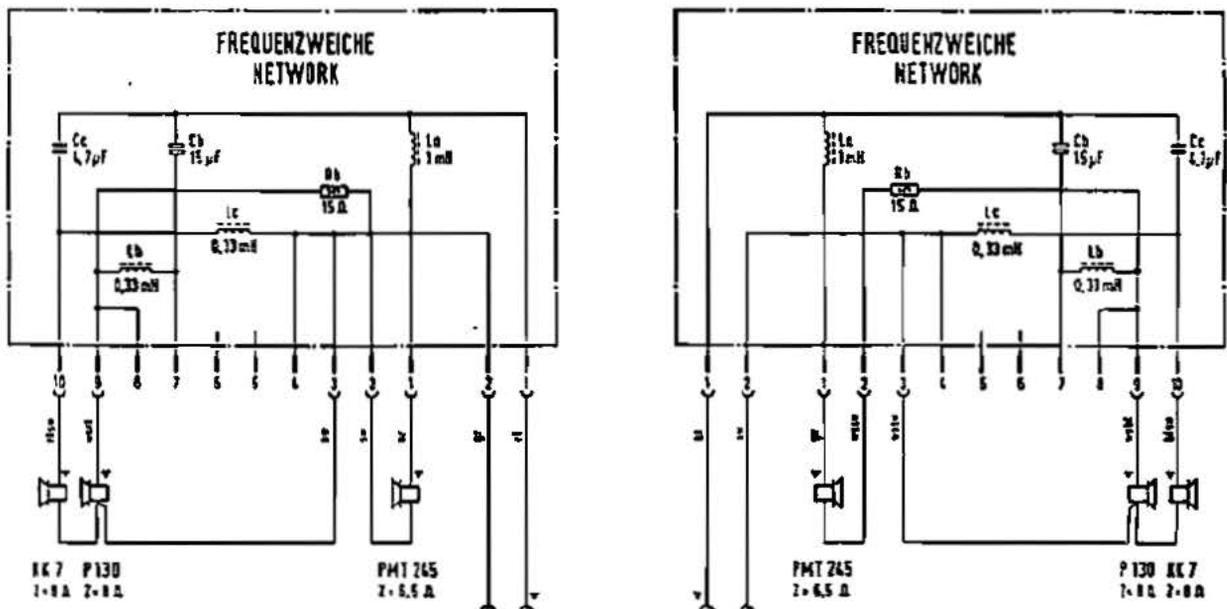



Fig. 5

Gesamtimpedanz $Z = 4,5 \Omega$
TOTAL IMPEDANCE $Z = 4,5 \Omega$
linker Kanal
LEFT CHANNEL


Gesamtimpedanz $Z = 4,5 \Omega$
TOTAL IMPEDANCE $Z = 4,5 \Omega$
rechter Kanal
RIGHT CHANNEL

Lautsprecher - Kombination
SPEAKER COMBINATION

Verstärker oder Ausgangsübertrager
AMPLIFIER OR OUTPUT TRANSFORMER

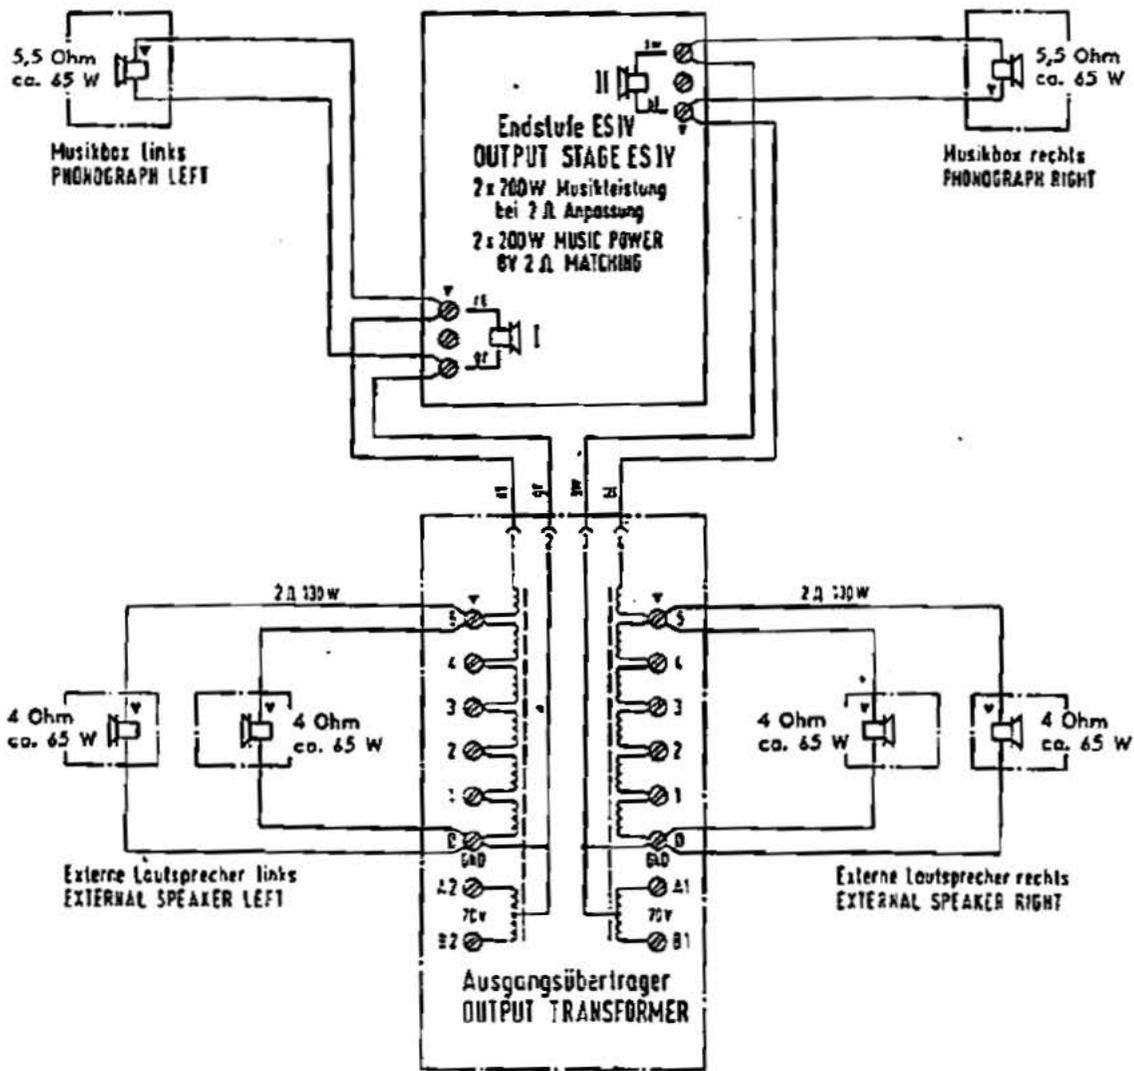

Anschlußschema für Ausgangsübertrager
CONNECTION DIAGRAM FOR OUTPUT TRANSFORMER

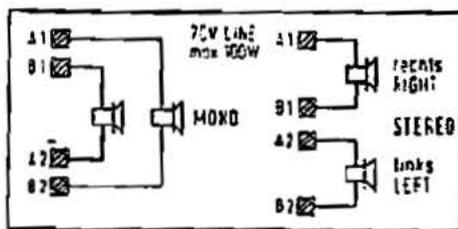

| Klemme TERMINAL POSITION | Lautsprecher SPEAKER | | | |
|--------------------------------|-------------------------|-------|------|-------|
| | 2,5 Ω | 4 Ω | 8 Ω | 16 Ω |
| 0 - 5 | 100 W | 70 W | 45 W | 22 W |
| 0 - 4 | 45 W | 30 W | 15 W | 8 W |
| 0 - 3 | 20 W | 15 W | 8 W | 4 W |
| 0 - 2 | 12 W | 7,5 W | 4 W | 2 W |
| 0 - 1 | 3 W | 1,8 W | 1 W | 0,5 W |

ÄNDERUNGEN IM SINNE DES TECHN. FORTSCHRITTES VORBEHALTEN,
JEDOCHE KEINE TECHN. VERPFLICHTUNG!
SUBJECT TO TECHNICAL MODIFICATION WITHOUT OBLIGATION
TO MODIFY EQUIPMENT ALREADY DELIVERED!





MUSIKAUTOMATEN
PHONOGRAPHS

ES IV - CD TECHNOLOGY

Lautsprecheranschluß
SPEAKER CONNECTION

Anschluß für max. Ausgangsleistung
CONNECTION FOR MAX. POWER OUTPUT

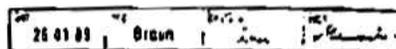

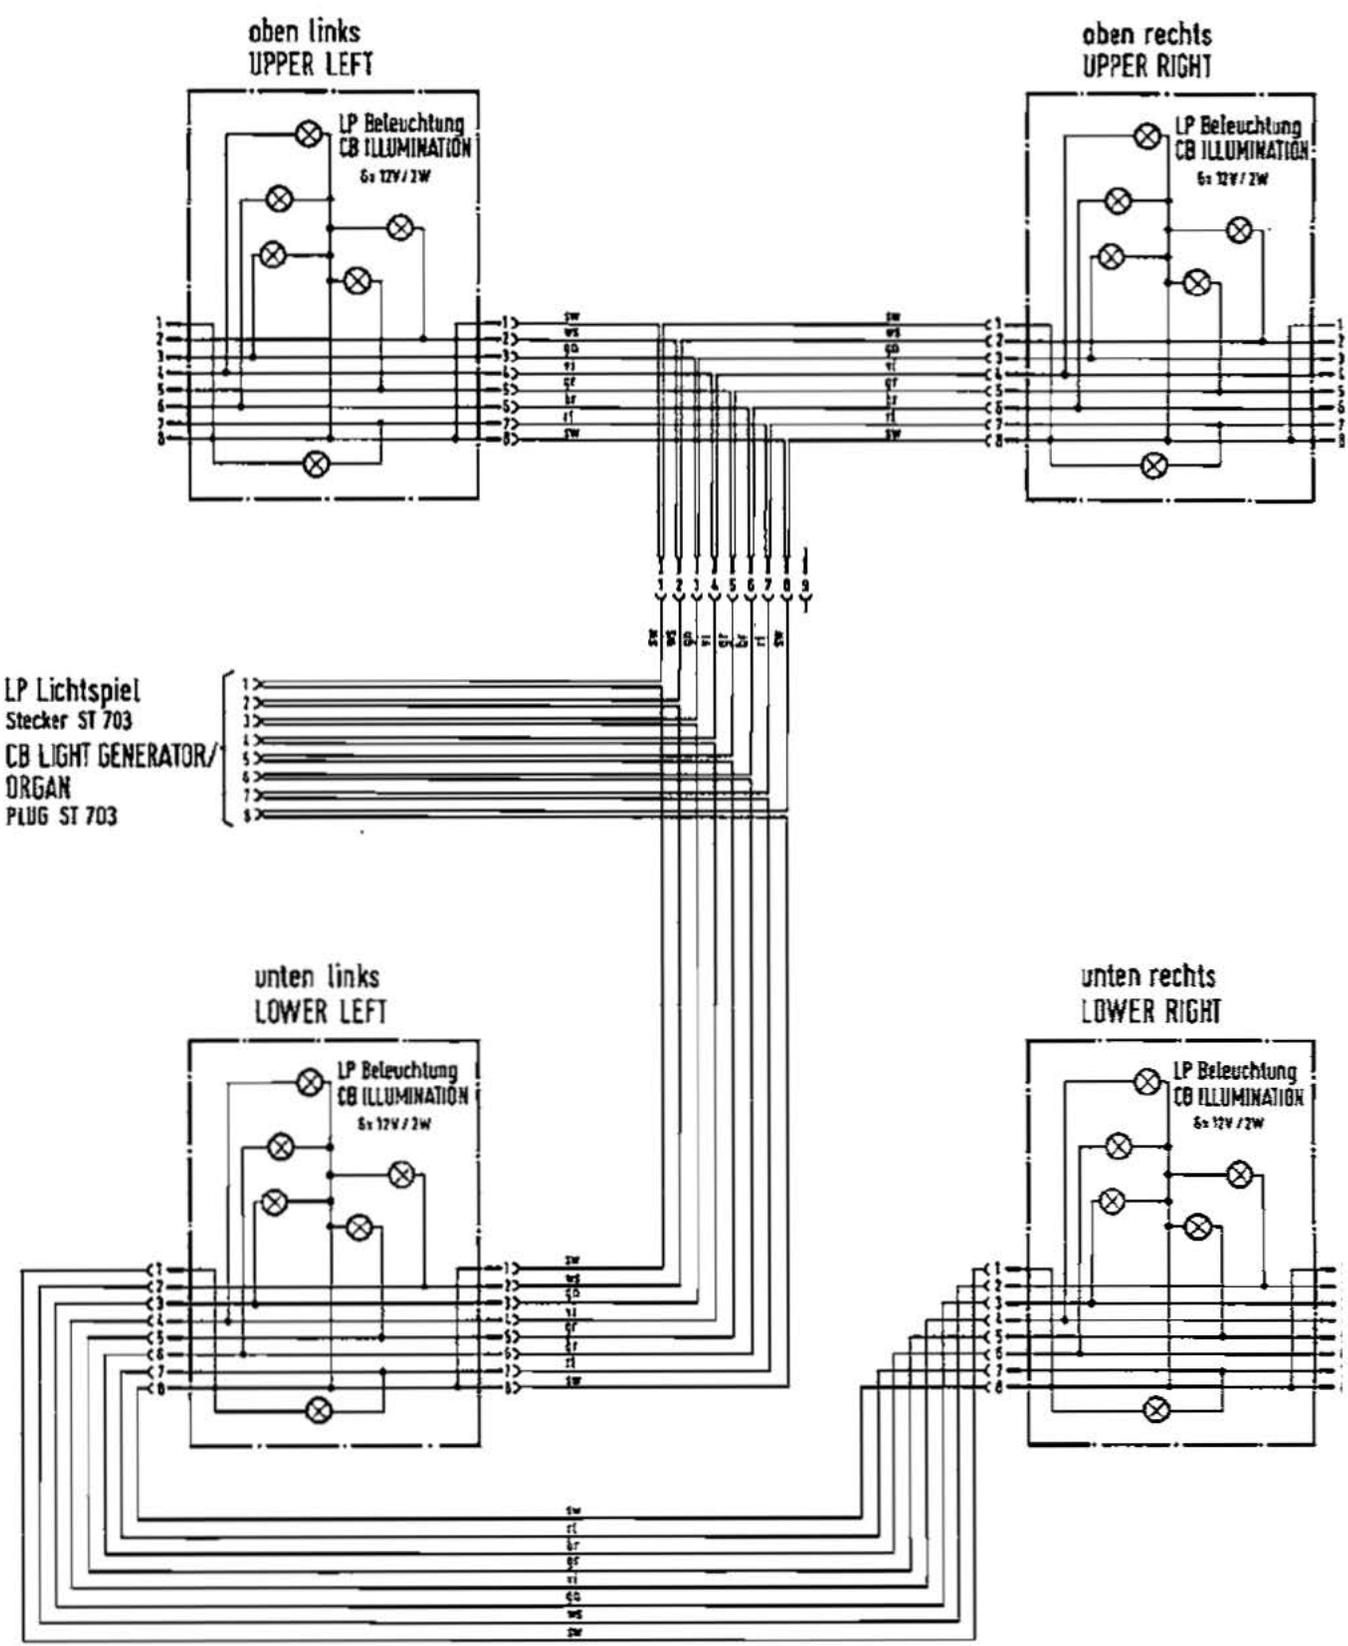

ÄNDERUNGEN IM SINNE DES TECHN. FORTSCHRITTES VORBEHALTEN, JEDOCH KEINE NACHRÜSTPFLICHT!
 SUBJECT TO TECHNICAL MODIFICATION WITHOUT OBLIGATION TO MODIFY EQUIPMENT ALREADY DELIVERED!

Farbangaben ohne Gewähr.
 COLOR INDICATION WITHOUT WARRANTY.

Farbspiegel
 COLOR CODE

| | | |
|----|---------|--------|
| ws | weiß | white |
| bl | blau | blue |
| br | braun | brown |
| ge | gelb | yellow |
| gr | grün | green |
| gr | grau | grey |
| or | orange | orange |
| ro | rosa | pink |
| rl | rot | red |
| sw | schwarz | black |
| vi | violett | violet |

MUSIKAUTOMATEN
 PHONOGRAPHS
ES IV - CD TECHNOLOGY

Schaltbild
 WIRING DIAGRAM
 Beleuchtung Lichtspiel
 ILLUMINATION LIGHT GENERATOR / ORGAN

SILVER SKY

| | | | | | | |
|-----|----------|-----|-------|-------|--------|------|
| Out | 14.08.93 | Grz | Braun | Braub | 2.2.94 | Lepr |
|-----|----------|-----|-------|-------|--------|------|

*SPARE PARTS LIST
FOR NSM-PHONOGRAPHS
SILVER SKY*

This spare parts list is applicable for NSM-Phonograph: SILVER SKY

Every spare part order should contain the following:

1. Model
2. Serial number
3. Quantity
4. Part number
5. Description

Example

| Model | Serial-Number | QTY | Part-No. | Description | Data |
|---------------|---------------|-----|----------|--------------|---------------------------------|
| SILVER SKY | 02 904 | 1 | 174 788 | LINE TRANSFO | CD-Player KX 4/6/8 D S 10 |
| | | 2 | 224 215 | BALLAST | |
| | | 1 | 225 040 | STARTER | |

ATTENTION!

Precise orders save unnecessary questions and bring the best results.

ORDER SPARE PARTS THRU YOUR NSM-DISTRIBUTOR!

Information and illustrations contained in this spare parts list, are correct at the time of going to press.

INDEX

| | |
|--------------|------------------------|
| Page 115 | UNITS and ACCESSORIES. |
| Page 116-119 | CABINET |
| Page 120-121 | LID |
| Page 122 | CABLE HARNESSSES |

SPARE PARTS LIST


| POS. | PART-No | DESCRIPTION | DATA | QTY |
|------|---------|--|-----------------|-----|
| | | <u>PHONOGRAPH - CD SILVER SKY</u> | | |
| | | <u>UNITS and ACCESSORIES</u> | | |
| | 174 873 | CB - CONTROL UNIT CD, ASSY | see Page 406 | 1 |
| | 173 664 | CB - DISPLAY CD, ASSY | see Page 504 | 1 |
| | 173 666 | CB - CENTRALE CD, ASSY | see Page 608 | 1 |
| | 171 701 | OUTPUT STAGE | 50 Hz | |
| | 171 702 | OUTPUT STAGE | 60 Hz | 1 |
| | 173 470 | CD-CHANGER 100 (without Design Pieces) | see Page 806 | 1 |
| | 209 795 | BACK COVER-LABEL | | 1 |
| | 173 938 | FRONT TRIMPLATE | | 1 |
| | 173 920 | SIDE TRIMPLATE | | 2 |
| | 174 729 | VIEW GLASS | | 1 |
| | 174 710 | CD-TITLE INDICATION II, ASSY | see Page 904 | 1 |
| | 174 913 | OUTPUT TRANS. with CABLE HARN. | | 1 |
| | 170 212 | VOLUME CONTROL, ASSY | | 1 |
| | 171 808 | IR-REMOTE CONTROL, ASSY | | 1 |
| | 217 817 | SENDER | | 1 |
| | 173 178 | RECEIVER | | 1 |
| | 171 883 | CONNECTING CABLE for RECEIVER | 1,5 METER | |
| | 170 459 | CONNECTING CABLE for RECEIVER | 5,0 METER | 1 |
| | 171 743 | REMOTE CONTROL | with 5 m CABLE | |
| | 172 077 | REMOTE CONTROL | with 25 m CABLE | 1 |
| | 224 223 | MICROFON | | 1 |
| | 171 880 | MICROFON CABLE | 10 m | |
| | 172 187 | MICROFON CABLE | 25 m | 1 |
| | 173 985 | WALLBOX-CONNECTING, ASSY | | 1 |
| | 172 025 | TAPE-CONNECTING CABLE | | 1 |
| | 116 435 | DEVICE SYSTEM, ASSY | NSM-DATA PRINT | 1 |
| | 173 348 | CASH COUNTER, ASSY | | 1 |
| | 174 648 | CB - AUDIO CONNECTION | | 1 |

SPARE PARTS LIST

| POS. | PART-№ | DESCRIPTION | DATA | QTY |
|------|---------|-------------------------------------|-----------------|-----|
| | | <u>PHONOGRAPH</u> <u>SILVER SKY</u> | | |
| 1 | 203 801 | CABINET | | 1 |
| 2 | 217 506 | ROLLER | | 4 |
| 3 | 170 857 | HANDLE | | 4 |
| 4 | 173 968 | TRANSO PLATE | (in REAR WALL) | 1 |
| | 217 772 | HINGE | | 1 |
| 5 | 223 418 | TRANSFORMER | | 1 |
| 6 | 174 788 | LINE TRANSFORMER, ASSY | (CD-PLAYER) | 1 |
| | 225 907 | TRANSFO-FUSE | 0,25 A | 1 |
| 7 | 174 501 | CASH FRAME | | 1 |
| 8 | 174 500 | CASH-DOOR | | 1 |
| 9 | 207 008 | CYL.-LOCK with KEYS | DOM | 1 |
| | 207 496 | CASH BAG | Typ 447-04-01 | 1 |
| 10 | 174 818 | COIN RETURN CUP | | 1 |
| | 174 499 | COIN LID | | 1 |
| | 172 474 | COVER | | 1 |
| 11 | 172 519 | NETWORK | | 2 |
| | 171 289 | SPACER | | 6 |
| 12 | 224 240 | LOUDSPEAKER | 4 OHMS | 2 |
| | 173 970 | DECOR RING | pmt 300 | 2 |
| 13 | 224 241 | LOUDSPEAKER | 8 OHMS | 2 |
| 14 | 224 242 | LOUDSPEAKER | 8 OHMS | 2 |
| | 173 971 | DECOR RING | P 175 | 2 |
| 15 | 174 838 | SPEAKER GRILL | P 135 | 1 |
| | 174 919 | PROFILE, RIGHT | | 1 |
| | 174 920 | PROFILE, LEFT | | 1 |
| 16 | 174 872 | FRAME | | 1 |
| 17 | 174 828 | GLASS, PRINTED | | 1 |
| 18 | 114 664 | FRAME FOR ADDRESS CARD | | 1 |
| | 215 008 | ADDRESS CARD | | 1 |
| 19 | 172 611 | PLATE, STAMPED | | 1 |
| | 171 928 | FLAT SPRING | | 1 |
| 21 | 172 410 | SUPPORT | | 1 |
| | 172 412 | BOLT | | 1 |
| | 170 069 | COIN RETURN LEVER | | 1 |
| | 170 031 | HOLDER | | 1 |
| | 171 905 | COIN CHUTE, ASSY | | 1 |
| | 172 461 | HOLDING BRACKET | | 1 |
| | 172 545 | COIN TUBE | COIN RETURN CUP | 1 |
| | 172 418 | HOLDING BRACKET | | 1 |
| | 172 546 | COIN TUBE | CASH BOX | 1 |

NSM-COIN
ACCEPTOR


SPARE PARTS LIST

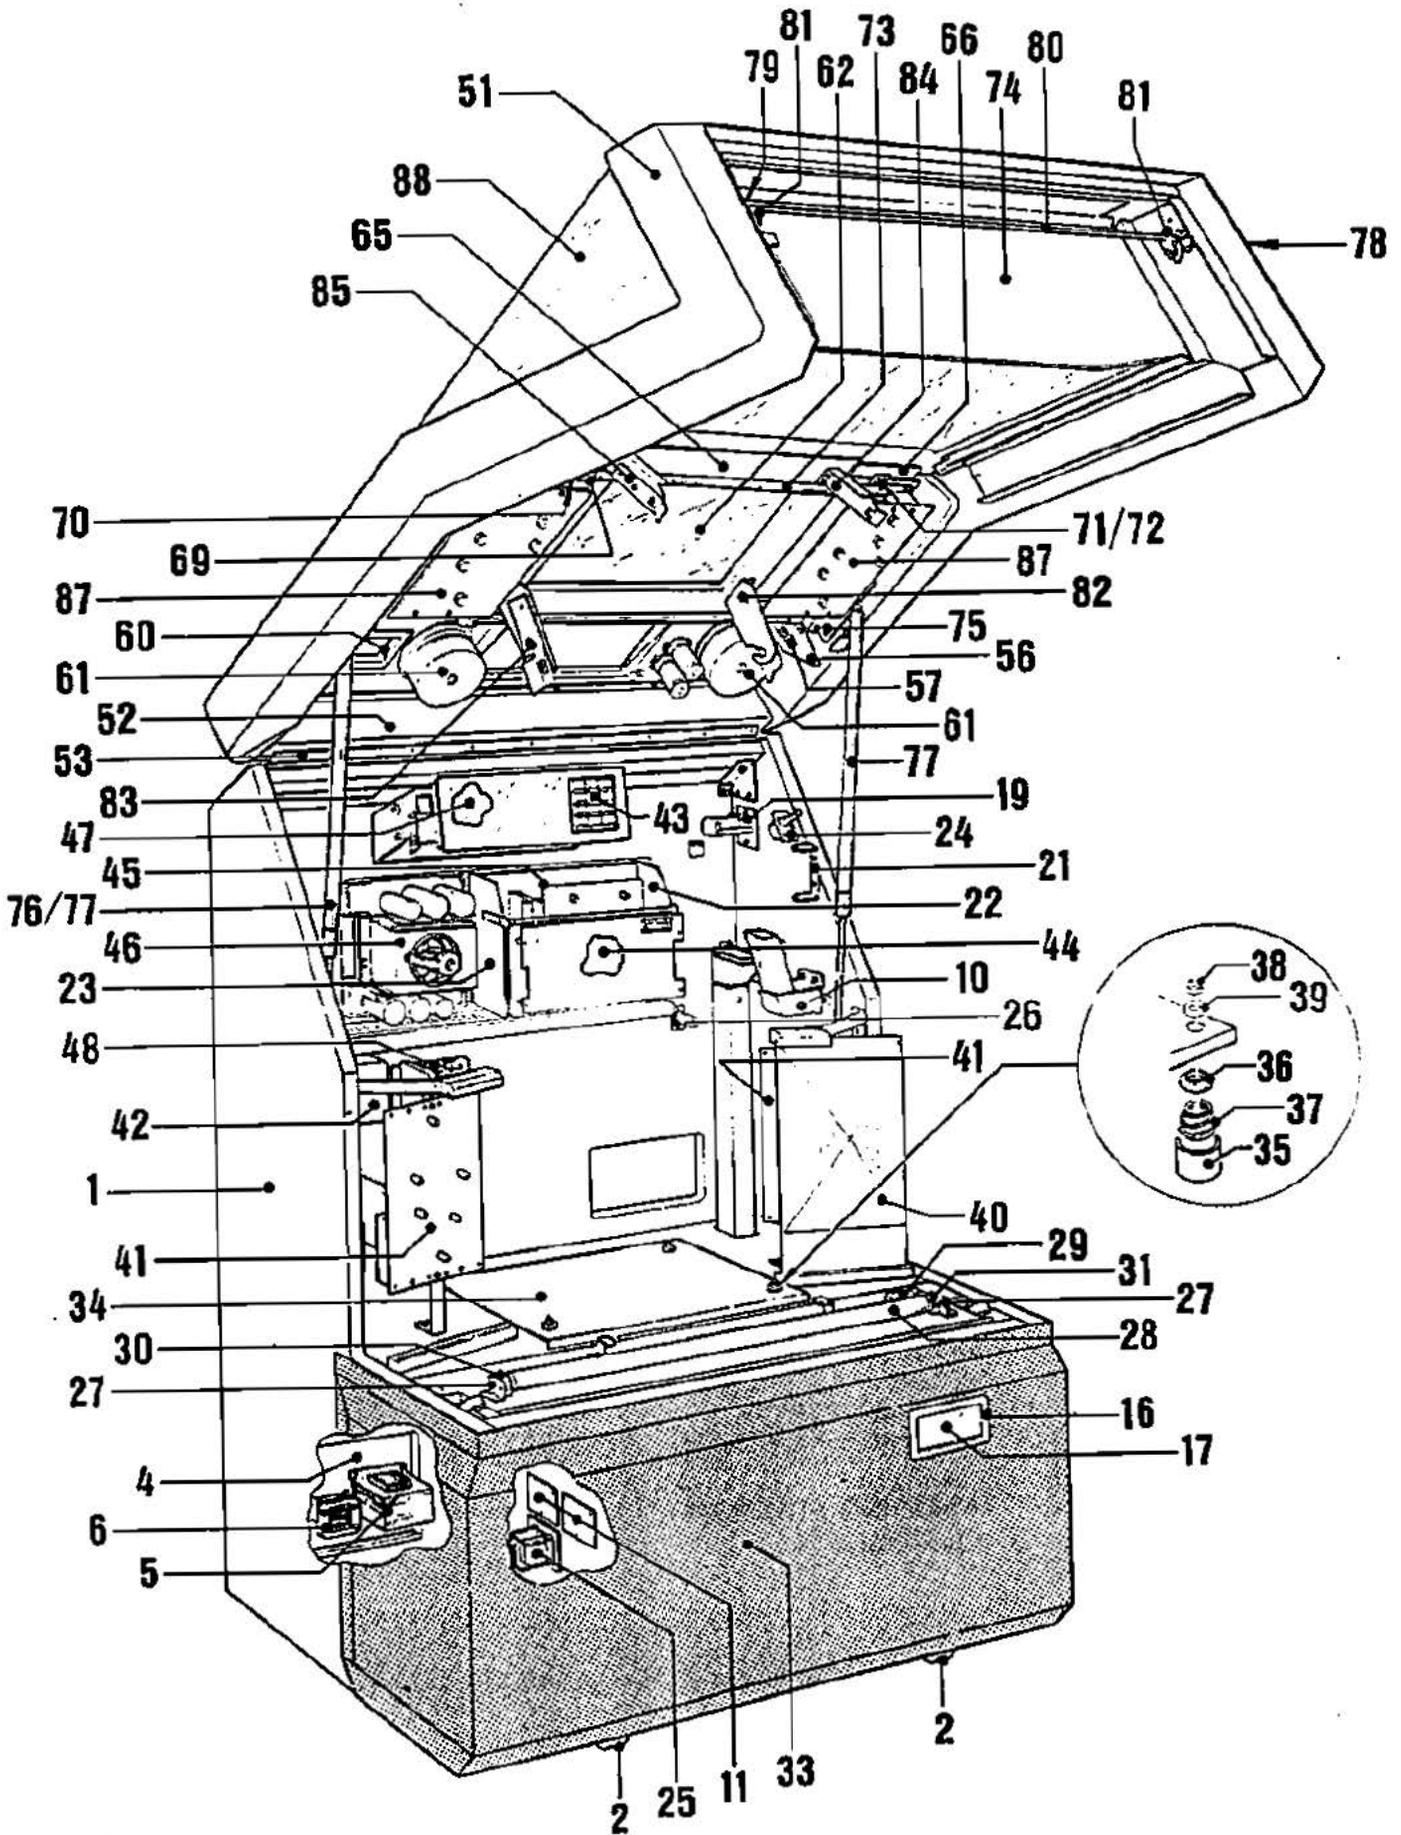

SPARE PARTS LIST

| POS. | PART-No | DESCRIPTION | DATA | QTY | |
|---------|---------|---------------------------------|----------|------------------|------|
| 21 | 172 571 | SUPPORT | | 1 | |
| | 172 572 | MOUNTING PLATE,STAMPED | | 1 | |
| | 172 183 | BRACKET | | 1 | |
| | 172 574 | COIN RETURN LEVER,STAMPED | | 1 | |
| | 172 576 | HOLDING BRACKET | | 1 | |
| | 172 577 | COIN TUBE | CASH BOX | 1 | |
| | 172 139 | CB MARS COIN ACCEPTOR | | 1 | |
| 22 | 173 722 | BRACKET,ASSY | RIGHT | for CONTROL UNIT | 1 |
| 23 | 173 723 | BRACKET,ASSY | LEFT | and CENTRALE | 1 |
| 24 | 172 724 | SWITCH PLATE | | 1 | |
| | 222 509 | PUSH BUTTON SWITCH | | 1 | |
| 25 | 223 379 | TRANSFORMER | | 1 | |
| | 045 497 | CLAMP BAR,ASSY | | 1 | |
| 26 | 174 252 | HOLDING PLATE | | 1 | |
| | 222 505 | KEY SWITCH | | 1 | |
| 27 | 172 441 | LAMP HOLDER,LOWER | | 2 | |
| 28 | 226 073 | FLUORESCENT LAMP | 50 Hz | 16 W | 1 |
| | 226 074 | FLUORESCENT LAMP | 60 Hz | | 1 |
| | 224 064 | BALLAST | 50 Hz | | 1 |
| | 224 188 | BALLAST | 50 Hz | | 2 |
| | 224 234 | BALLAST | 60 Hz | | 1 |
| | 224 221 | BALLAST | 60 Hz | | 2 |
| | 29 | 225 040 | STARTER | 220 V | S 10 |
| 225 343 | | STARTER | 117 V | S 2 | 3 |
| 30 | 225 756 | LAMP SOCKET | | 1 | |
| 31 | 225 757 | LAMP SOCKET with STARTER SOCKET | | 1 | |
| 34 | 174 765 | BOTTOM PLATE | | 1 | |
| 35 | 170 007 | SOCKET | | 4 | |
| 36 | 170 006 | GUIDE SPACER | | 4 | |
| 37 | 205 353 | CONE SPRING | | 4 | |
| 38 | 023 380 | HEX NUT | | 4 | |
| 39 | 170 005 | WASHER | | 4 | |
| 40 | 212 472 | SIDE GLASS | | 2 | |
| 41 | 206 774 | CB LIGHTING | | 2 | |
| | 174 833 | CABLE HARNESS, LIGHTING LOWER | | 1 | |
| 42 | 171 725 | JUNCTION PLATE,ASSY | 50 Hz | 1 | |
| | 171 726 | JUNCTION PLATE,ASSY | 60 Hz | 1 | |
| 43 | 173 900 | KEY BOARD,ASSY | | 1 | |
| 44 | 174 873 | CB CONTROL UNIT | | 1 | |
| 45 | 173 666 | CB CENTRALE CD | | 1 | |
| 46 | 171 701 | OUTPUT STAGE | 50 Hz | 1 | |
| | 171 702 | OUTPUT STAGE | 60 Hz | 1 | |
| 47 | 174 664 | CB DISPLAY CD | | 1 | |
| 48 | 171 653 | CB LIGHT ORGAN | | 1 | |
| 49 | 173 470 | CD-CHANGER 100 | | 1 | |

SPARE PARTS LIST

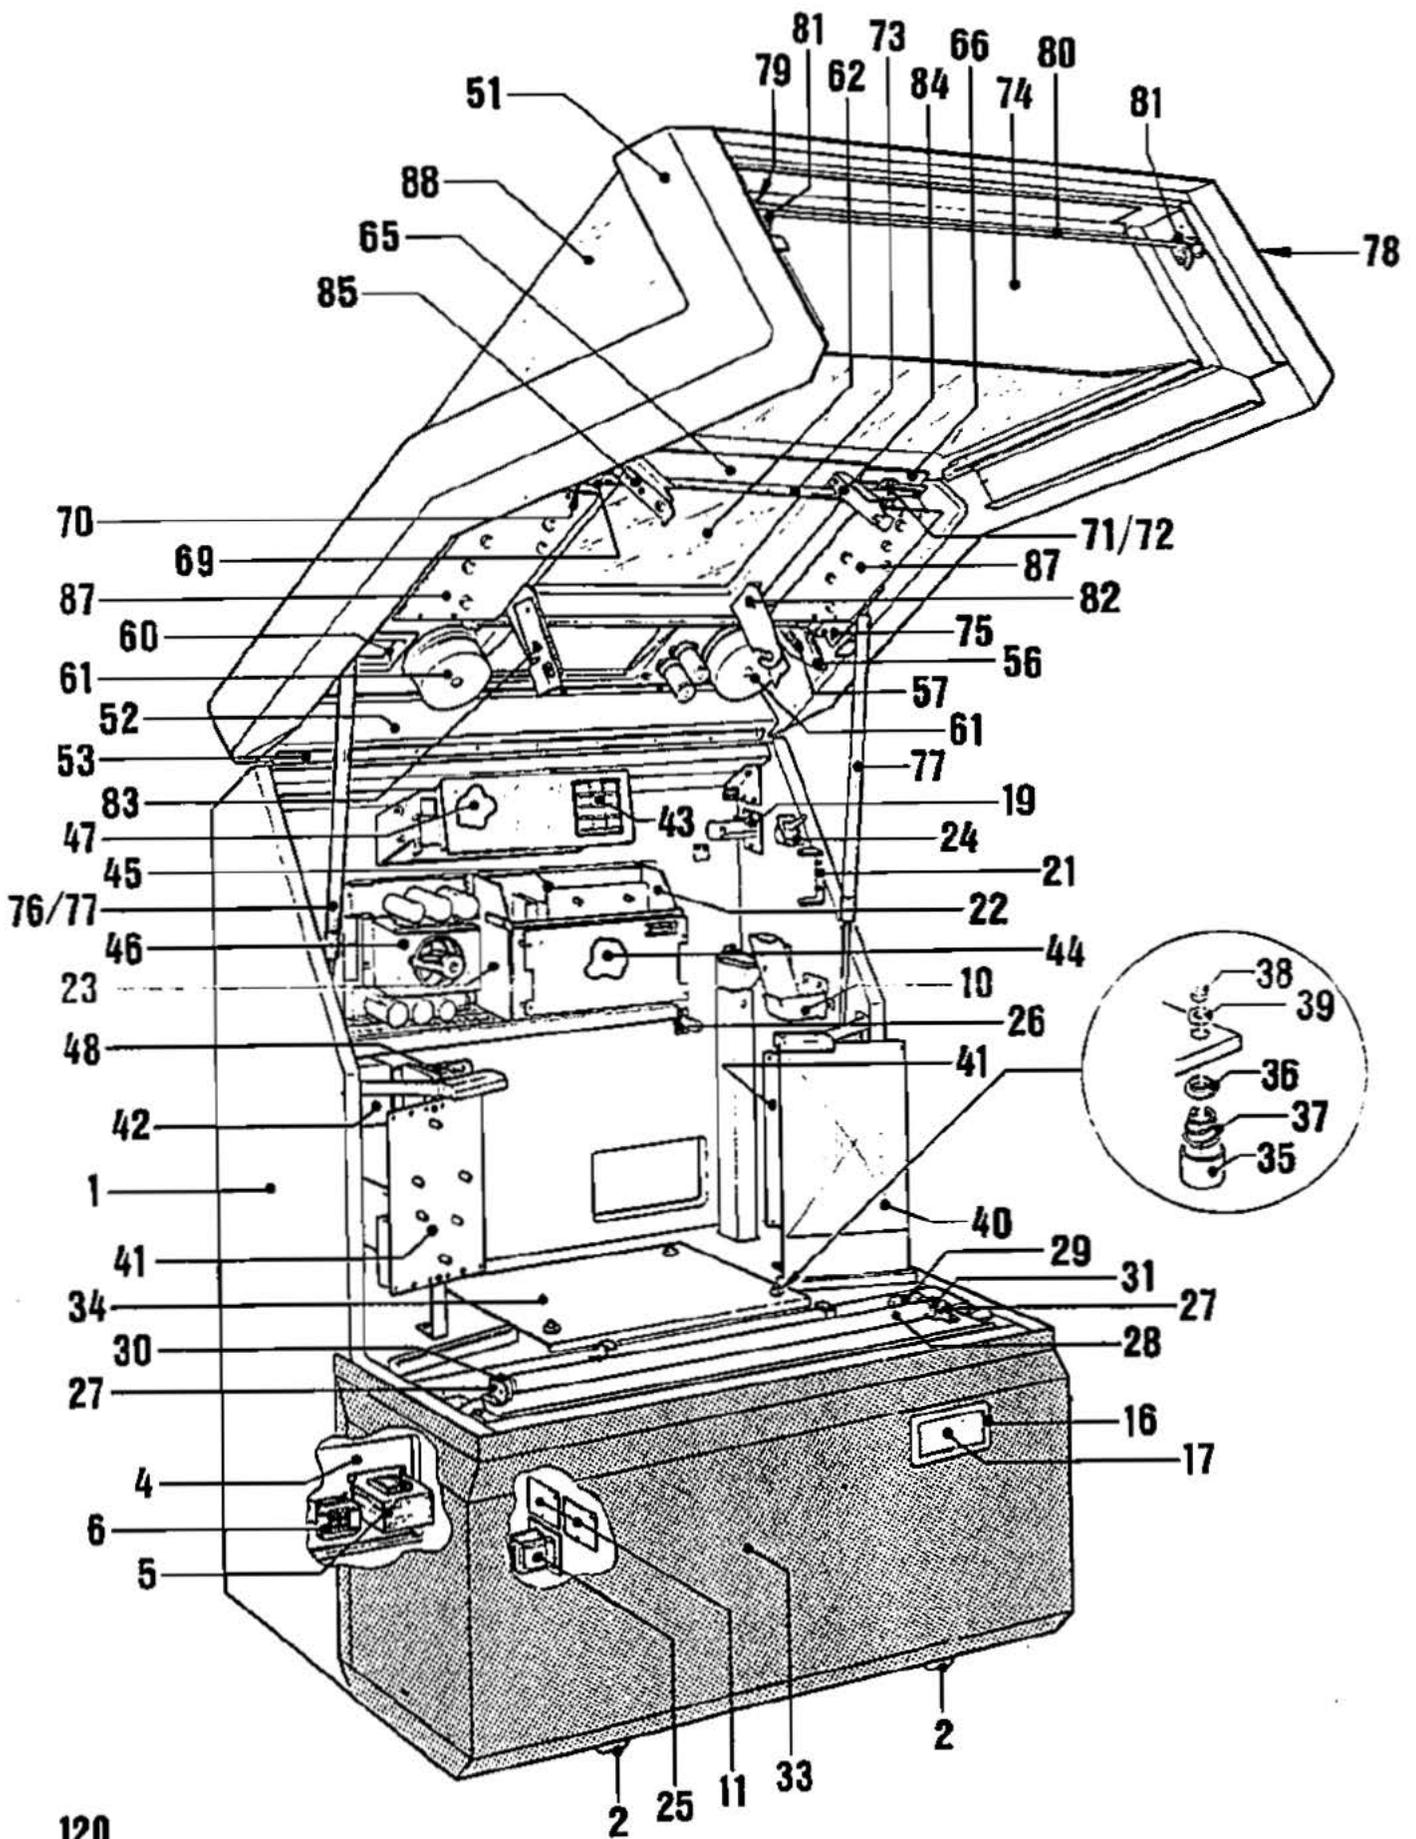

SPARE PARTS LIST


| POS. | PART-No | DESCRIPTION | DATA | QTY |
|------|---------|------------------------------|----------------|-----|
| | | COVER | | |
| 51 | 174 821 | COVER,PRE-MOUNTED | | 1 |
| 52 | 172 375 | BACK PLATE | | 1 |
| 53 | 206 297 | HINGE | | 1 |
| 54 | 172 502 | GLASS,PRINTED | COIN INSERT | 1 |
| 55 | 171 892 | COIN INSERT | | 1 |
| 56 | 174 716 | COIN CHANNEL | | 1 |
| 57 | 171 662 | COIN REJECT | | 1 |
| 58 | 174 849 | BACKPLATE,RIGHT | | 1 |
| | 209 065 | PROTECTIVE TISSUE | | 1 |
| 59 | 174 871 | BACKPLATE,LEFT | | 1 |
| | 209 066 | PROTECTIVE TISSUE | | 1 |
| 60 | 172 403 | CLOSING PLATE | DOLLAR BILL | 1 |
| 61 | 224 233 | LOUDSPEAKER | 4 OHMS SKK 10 | 2 |
| 62 | 204 916 | GLASS,UPPER | | 1 |
| | 217 507 | RUBBER PROFILE | 2x800/2x275 mm | |
| 64 | 174 448 | BUTTON,ASSY | | 2 |
| 65 | 174 803 | SUPPORT,ASSY | | 1 |
| 66 | 174 815 | PRESSURE PLATE | | 2 |
| 67 | 212 473 | GLASS,RIGHT | | 1 |
| 68 | 212 474 | GLASS,LEFT | | 1 |
| 69 | 115 840 | CAP,LEFT | | 2 |
| 70 | 174 805 | LAMP HOLDER,LEFT | | 2 |
| 71 | 115 841 | CAP,RIGHT | | 2 |
| 72 | 174 804 | LAMP HOLDER,RIGHT | | 2 |
| 73 | 226 075 | FLUORESCENT LAMP | 13 W | 2 |
| 74 | 204 917 | BOTTOM TRIMPLATE | | 1 |
| 75 | 172 479 | HOLDING BRACKET,RIGHT STAMP. | | 1 |
| 76 | 172 372 | HOLDING BRACKET,LEFT STAMP. | | 1 |
| 77 | 206 320 | PISTON ROD | | 2 |
| 78 | 217 814 | CYL.-LOCK | | 1 |
| | 217 992 | SPARE KEY | | - |
| 79 | 172 469 | BRACKET | | 1 |
| 80 | 172 447 | CLOSING RAIL | | 1 |
| 81 | 171 616 | CLOSING nose | | 1 |
| 82 | 174 698 | BRACKET,RIGHT UPPER STAMP. | | 1 |
| 83 | 174 699 | BRACKET,LEFT UPPER STAMP. | | 1 |
| 84 | 174 697 | BRACKET,RIGHT LOWER STAMP. | | 1 |
| 85 | 174 696 | BRACKET,RIGHT LOWER STAMP. | | 1 |
| 86 | 174 710 | CD TITLE INDICATION II | see PAGE 904 | 1 |
| 87 | 206 774 | CB LIGHTING | | 2 |
| | 225 533 | LAMP SOCKET | | 12 |
| | 226 056 | LAMP | 12 V 2 W | 12 |
| 88 | 204 936 | FRONT GLASS | ACRYL GLASS | 1 |
| | 174 834 | GLASS | GLASS | |
| | 206 333 | RUBBER PROFILE | 1595 long | 1 |
| | 206 334 | RUBBER PROFILE | 1300 long | 1 |

SPARE PARTS LIST

| POS. | PART-No | DESCRIPTION | DATA | QTY |
|------|---------|--|-------------------|-----|
| | | <u>CABLE HARNESS</u> | | |
| | 172 506 | DISPLAY | 10 prongs 1100 lg | 1 |
| | 172 508 | CENTRALE OUTPUT STAGE | 10 prongs 700 lg | 2 |
| | 174 908 | LOUDSPEAKER | | 1 |
| | 172 511 | CENTRALE -- LINE TRANSFORMER | | 1 |
| | 171 782 | CENTRALE -- CONTROL UNIT | 15 prongs 120 lg | 1 |
| | 171 783 | CENTRALE -- CONTROL UNIT | 12 prongs 120 lg | 1 |
| | 174 909 | FLOURESCENT LAMP 50/60 Hz | | 1 |
| | 173 958 | KEY- and CABINET SWITCH | | 1 |
| | 173 164 | CENTRALE -- CD PLAYER | | 1 |
| | 151 626 | CONTROL UNIT -- CD PLAYER | | 1 |
| | 173 963 | TRANSFORMATOR -- CD PLAYER | | 1 |
| | 174 910 | CENTRALE -- LP TITLE STRIP HOLDER | | 1 |
| | 173 966 | CD-AUDIO | | 1 |
| | 174 911 | TRANS. -- LIGHT ORGAN -- JUNCTION PLATE | | 1 |
| | 172 553 | CONTROL UNIT -- LIGHT ORGAN | | 1 |
| | 151 343 | CONTROL UNIT -- LIGHT ORGAN | 6 prongs 550 lg | 1 |
| | 174 728 | LINE TRANS. -- LAMP TRANS. | | 1 |
| | 174 916 | TITLE DRUM | | 1 |

Zum Netz-Transformator
TO MAINS TRANSFORMER

Nur bei 100V-127V
FOR 100V-127V ONLY

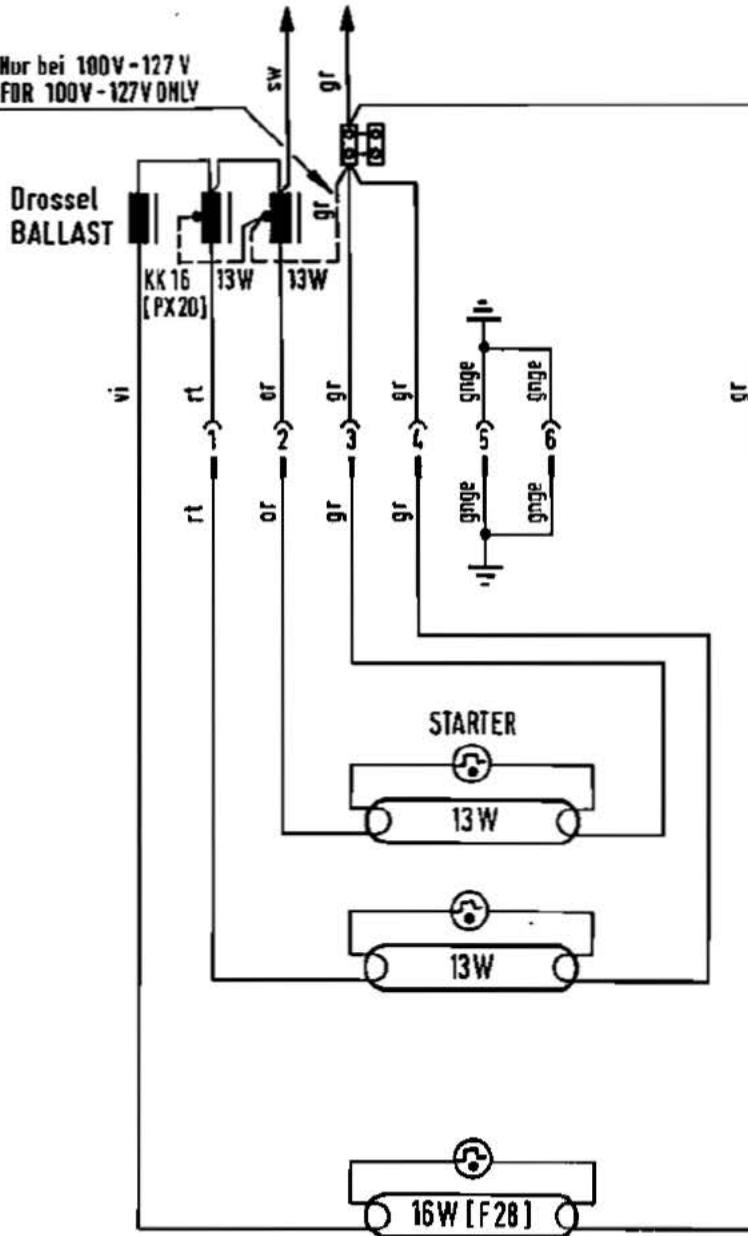

Leuchtstofflampen Haube
FLUORESCENT LAMPS COVER

Leuchtstofflampe Gehäuse
FLUORESCENT LAMP CABINET

Farb Spiegel
COLOR CODE

| | | |
|----|---------|--------|
| ws | weiß | white |
| bl | blau | blue |
| br | braun | brown |
| ge | gelb | yellow |
| gn | grün | green |
| gr | grau | grey |
| or | orange | orange |
| rs | rosa | pink |
| rt | rot | red |
| sw | schwarz | black |
| vi | violett | violet |

Farbangaben ohne Gewähr.
COLOR INDICATION WITHOUT WARRANTY.

ÄNDERUNGEN IM SINNE DES TECHN. FORTSCHRITTES VORBEHALTEN,
JEDOCH KEINE NACHRÜSTPFLICHT!

SUBJECT TO TECHNICAL MODIFICATION WITHOUT OBLIGATION
TO MODIFY EQUIPMENT ALREADY DELIVERED!



MUSIKAUTOMATEN
PHONOGRAPHS





ES IV - CD TECHNOLOGY

Schaltbild
WIRING DIAGRAM

Beleuchtung
ILLUMINATION

SILVER SKY

| | | | |
|------------------|---------------|-------------------------|---------------------------|
| Dat. 17.09.90 | Gez. Braun | Bearb. <i>Adiged</i> | Gepr. <i>J. H. ...</i> |
|------------------|---------------|-------------------------|---------------------------|

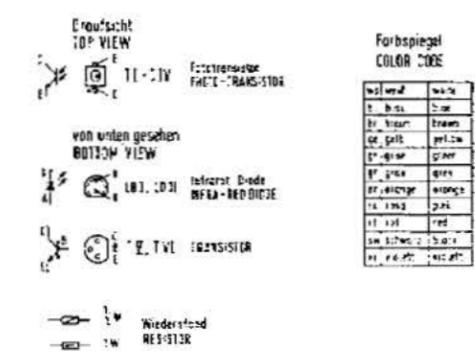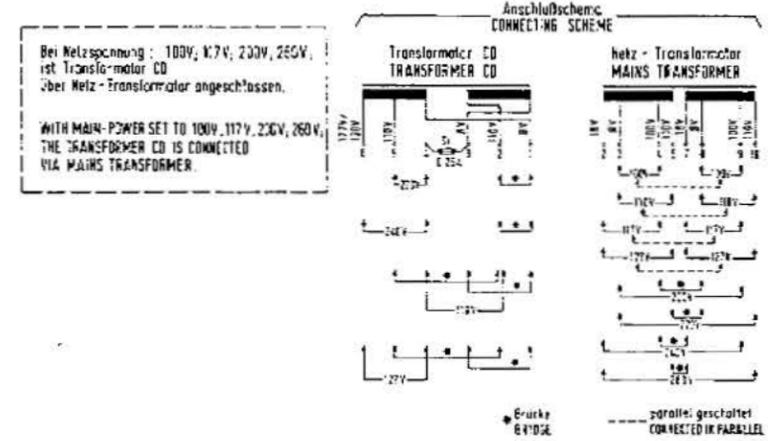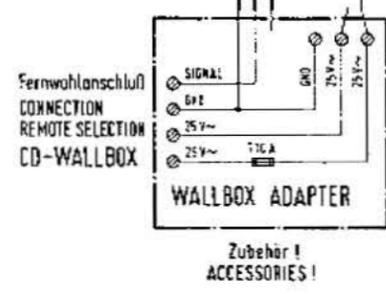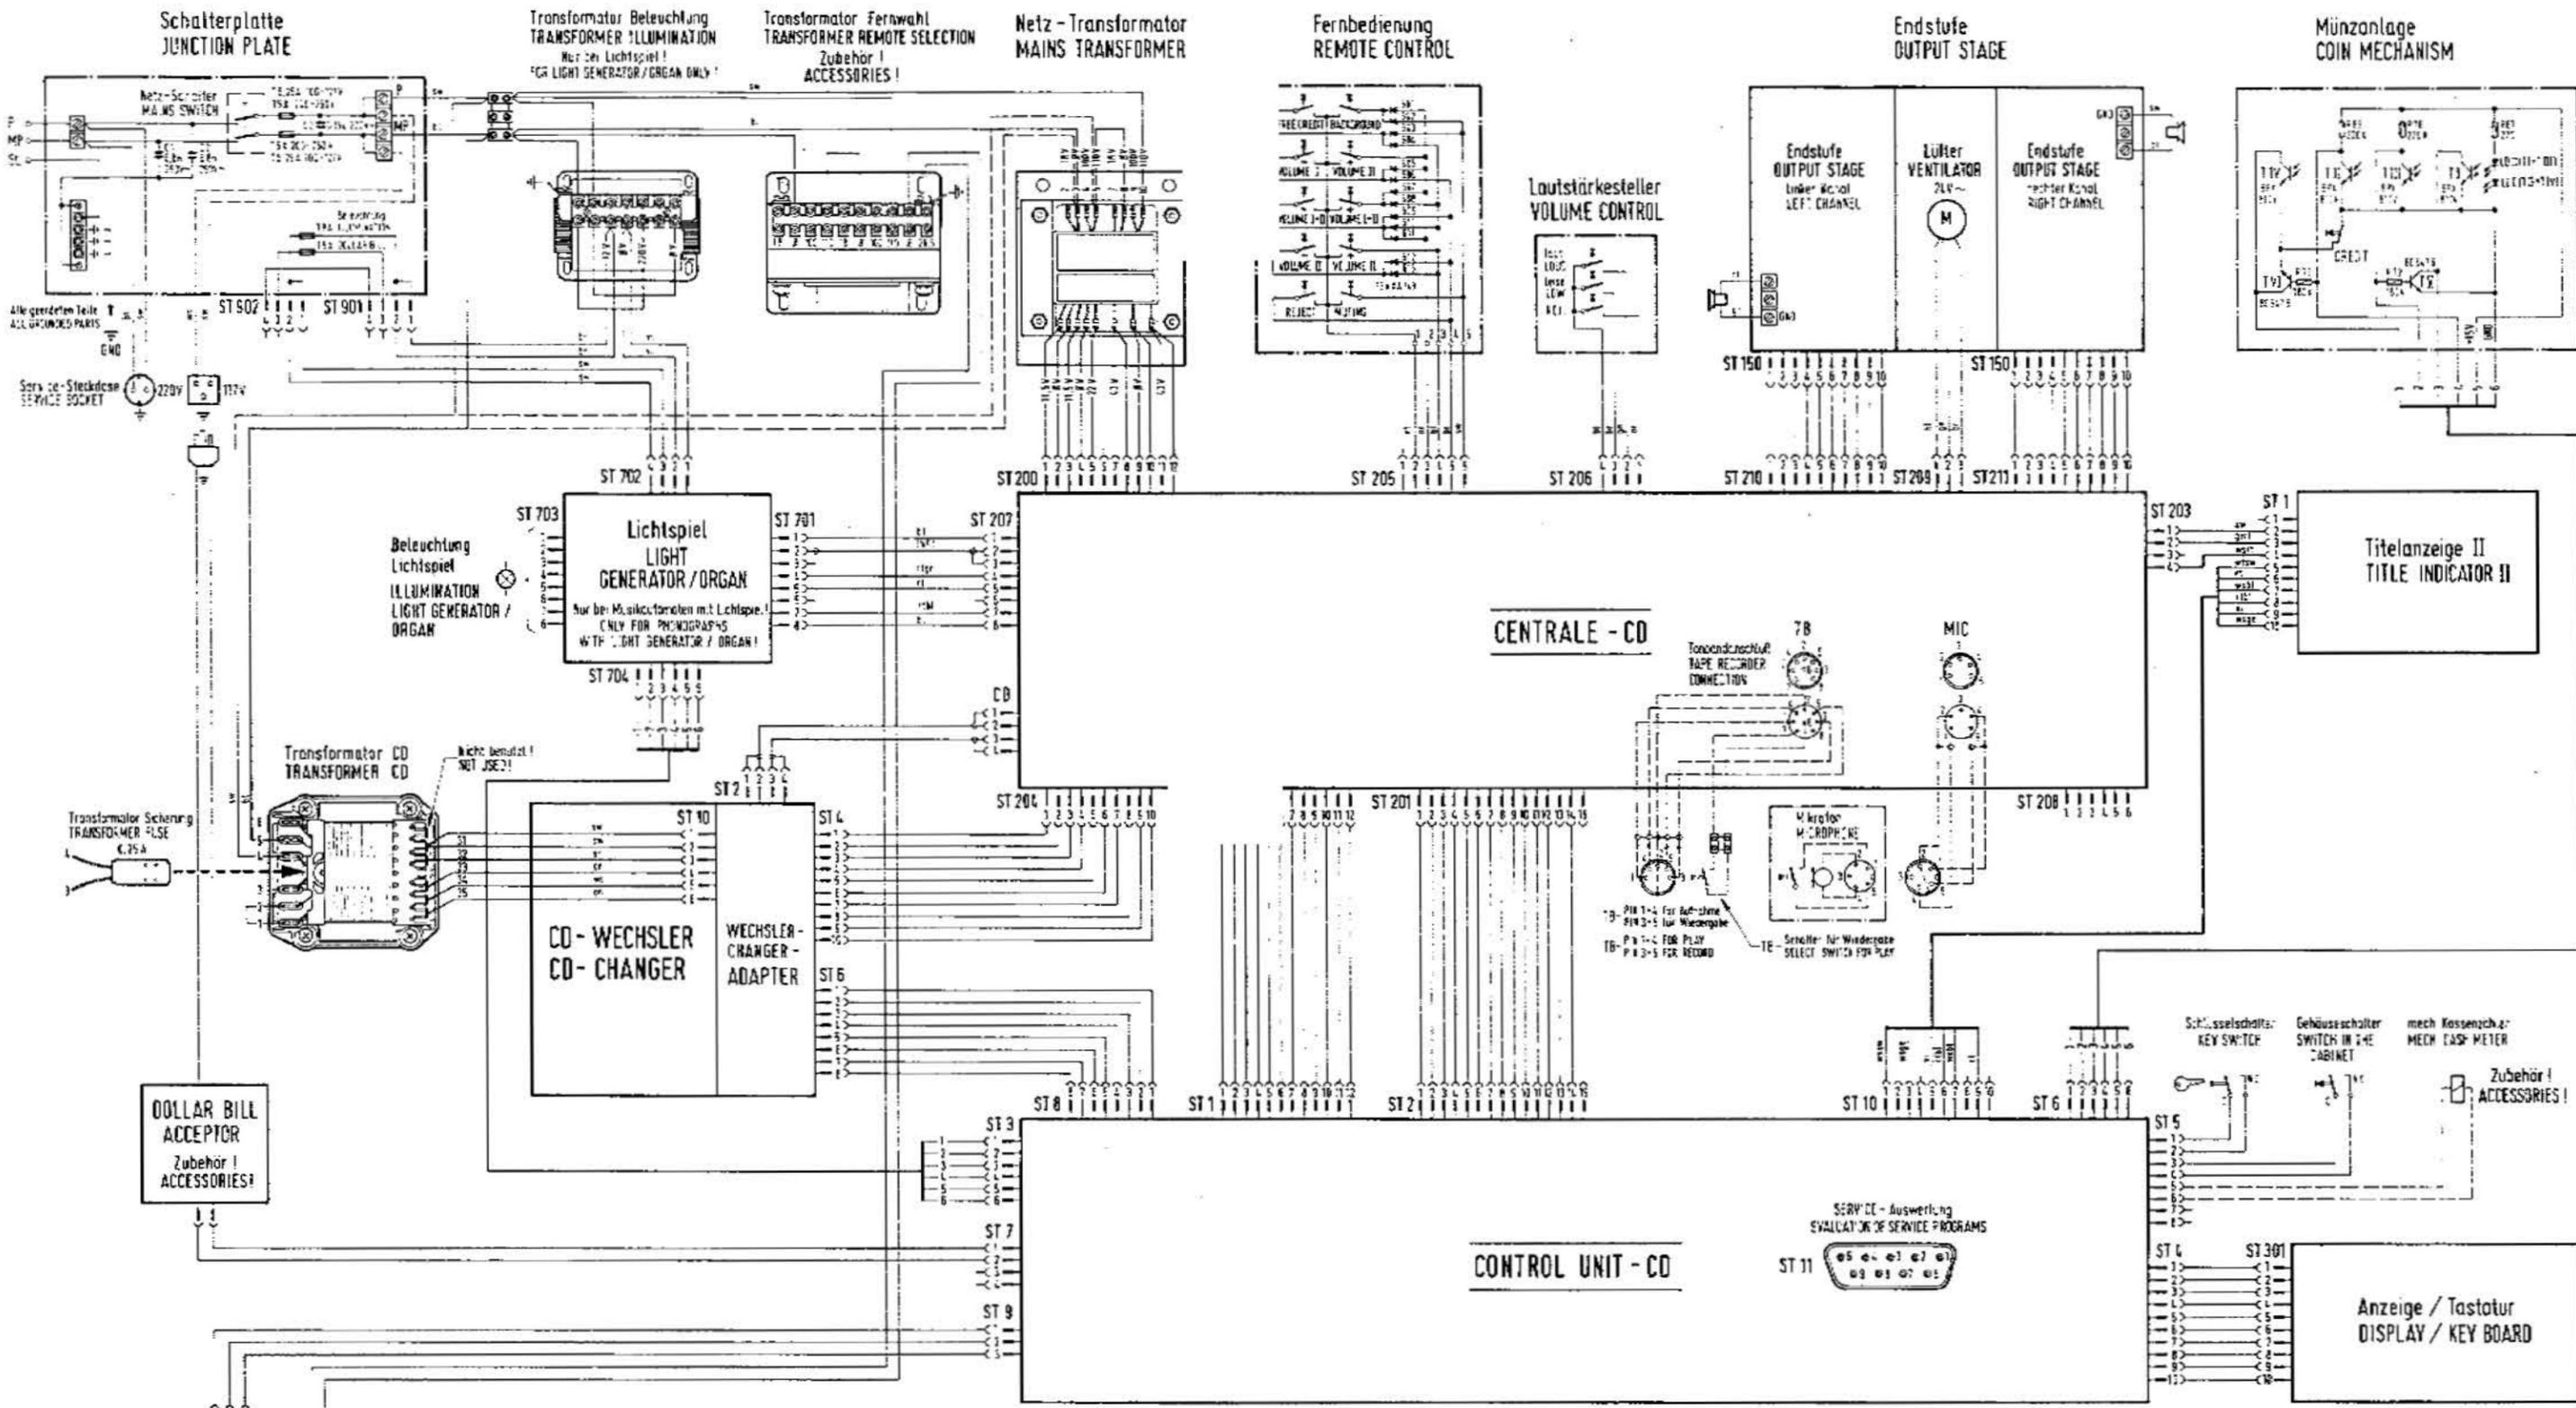

Geprüfter Anschluss 220V ~ ADJUSTED FOR CONNECTION 220V ~

Für alle anderen Spannungen Netztransformator umstellen FOR OTHER VOLTAGES RESOLDER POWER TRANSFORMER.

Gezeichnete Schalterstellung: Betriebsbereit. CONTACT POSITION: READY FOR SERVICE.

Alle Sicherungen: Frage. ALL FUSES: ASK.

Sicherungen nur durch solche mit gleichen Werten ersetzen. REPLACE FUSES ONLY BY THOSE OF THE SAME VALUE.

Farbhangabeh ohne Gewähr. COLOR INDICATION WITHOUT WARRANTY.

ÄNDERUNGEN IM SINNE DES BEW. FORTSCHRITTES VORBEHALTEN. EODEN KEINE NACHRUFPLICHT!

SUBJECT TO TECHNICAL MODIFICATION WITHOUT OBLIGATION TO MODIFY EQUIPMENT AS READY DELIVERED!

MUSIKAUTOMATEN PHONOGRAPHS **ES IV - CD** TECHNOLOGY

ELEKTROPLAN
OPERATING SCHEME

OPERATING INSTRUCTIONS

FOR NSM-PHONOGRAPHS

ES IV-CD TECHNOLOGY

NSM
Aktiengesellschaft
Wernerstraße 112
6530 Bingen am Rhein
Telefon: 067 21 / 407-0
Telefax: 067 21 / 407 510

PART-№ —
200 819 0

INDEX


1. PLAYING SEQUENCE
 - 1.1. Operation after switching on
 - 1.2. Standby
 - 1.3. Credits
 - 1.4. Selection
 - 1.5. Play mode

2. ADJUSTMENTS WITH REMOTE CONTROL
 - 2.1. Volume controls
 - 2.2. Muting
 - 2.3. Free credits
 - 2.4. Background music
 - 2.5. Key switch

3. SERVICE OPERATION - short program for price settings

4. CD change / cash collection

SELECTOR and DISPLAY PANEL

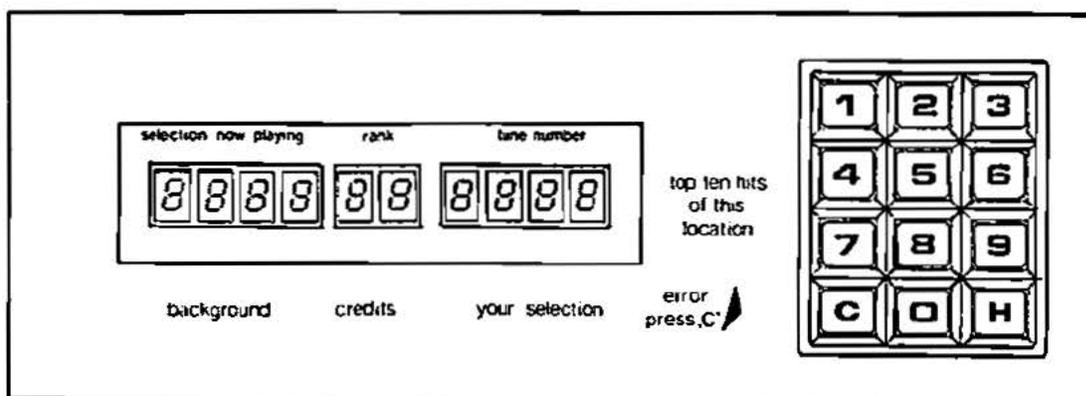

Display panel with displays 1, 2 and 3 as well as 12 button selector

1. PLAYING SEQUENCE

The functional sequence, starting with "power on," standby credit, selection and playing of selected title to the rest position is described below.

The technical assembly and the working together of the components can be seen in the "electronic schematics." Compare the descriptions with the illustration of the display/keyboard above.

1.1. Operation after Switching on

Immediately after switch-on the memory components - on the CONTROL UNIT - and all preprogrammed values are checked.

Display 1 shows then for 2 sec. the program index.

If an error is found during checking, error display Er xx is then shown for 2 sec.

With Er 31 (unverified memory contents) and Er 40 (price settings incorrect) Display 1 with Pxx shows the correct program step which needs to be reprogrammed. See description of service programs.

With other Er-displays, even during operation, proceed according to the instructions in "Trouble Shooting."

1.2. Standby

Hit display:

The microprocessor of the CONTROL UNIT figures out of the 30 titles just played before the ones played most.

On Display 3 the title numbers of the 10 most popular titles, whose rankings (1-10) are shown on Display 2, are changed in intervals of 2 sec. Also "10 top hits" lights up.

When pushing "H," the hit display can be stopped for 15 sec.; every press of the key causes an advance to the next hit.

Note: When the popularity counters are erased (program step P 10), the hit parade is erased, too. In that case "0" appears for ranking until records are played again.

Random Play:

In program step P24 a time interval can be set for random tune playing.

After expiration of set time the flip chart is advanced by 9 pages; then a random title is played.

Conditions for a random title to be played:

- Phonograph in standby mode
- No credit available
- Microphone switch not being used
- No muting
- Set time is expired

1.3. Credits (not for HIDE-AWAY)

See unit description "Coin and Bill Validation."

After insertion of a coin the "hit display" is interrupted, lamp "10 top hits" goes off and "credit" and "your selection" light up. Display 2 shows the number of credits.

For every selection credit is deducted.

If not enough credits are available for the selection, "credit" lamp flashes.

If no more coins are inserted within 16 sec. or no selector key is pressed, the mode changes to "hit display."

Free-credit switch (add. key), below the mechanical coin acceptor or on the adapter PCB with electronic coin validators, is only possible when the cabinet lid is open and the cabinet interlock switch is in service position (press add. button once = 1 credit). These credits are not registered statistically.

Starting with program index 0003 selections can be made without credits after pulling out the cabinet switch and going back to the regular program (2 x "C" key).

Attention! The machine is furnished with an interlock switch which must be manually set in service position (pull out). The switch resets automatically when closing the lid.

Note: Credits remain stored during "power off/on."

If the computer detects no activity on the phonograph within 1 hour, the stored credit is cancelled.

1.4. Selection

Title Selection: The four-digit number of the desired title has to be entered (2 digits each for disc and track). "Credit" and "your selection" light up. The selection can be corrected by pressing "C" up to 2 sec. after pressing the 4th digit.

Album Selection: When entering Track 00, all titles of a CD are automatically played (i.e. 0100 = all titles of Disc 01).

The number of credits which are deducted when selecting an album can be programmed in step P46.

When programming "0," album selection is blocked.

With open cabinet switch (interlock lever pulled out) no credit is deducted when selecting.

If the entry is incorrect, e.g. higher than the programmed number of CD tracks which can be selected or an unallowed selection of albums, "error" flashes. In that case, press "C" and repeat the selection.

One credit is deducted for each selection of a title. With album selections credits are deducted as per the programming in program step P46. If there is not enough credit available, "credit" lamp flashes.

16 sec. after selection "hit display" is switched on automatically again.

Note: If a background or random title is playing during selection, the volume is fading and the selected tune is being played.

When selecting a higher title number than recorded on the CD, the first title (track) of the CD will be played automatically.

1.5. Play Mode

After selection the microprocessor of the CONTROL UNIT moves the pickup of the CD changer to the selected CD and pulls it with its holder out of the magazine into the pickup. The pickup brings the CD to the disc player where it is then played.

Just before play the number of the title is shown on Display 1 ("selection now playing"). After the disc is played, the display is erased and the CD is transported back to its magazine space.

Note: If a error occurs with the CD changer or the player, "Er 7x" or "Er 6x" appears for 2 sec. In that case proceed according to the description in "Trouble Shooting".

Limiting Playing Time for a Title (Track)

In Service Program P30 the time that a title is to be played maximum can be set in minutes.

After expiration of this time the volume for that title is fading and then muted.

When setting "0" (default), there is no limit in playing time.

Sequence of Tunes Playing

In Service Program P31 one can set in which sequence the selected titles are played.

Settings: 0 = in sequence of selection (FIFO)
1 = in numerically increasing sequence
2 = random sequence

Limit of Playing Titles on the Same CD

One can set in Service Program P32 how many titles can be played consecutively on the same CD.

With 0 (default) there is no limit.

Attention!

When playing a test compact disc, the description that comes with the test disc is to be exactly adhered to. By any means, it is to be avoided to give sine signals with peak signal "0dB" at full volume level to the loudspeakers for more than 1 sec.

But also other unfiltered noises and high-frequency signals (which are only used for measuring purposes) can damage the amplifier and loudspeakers at full volume.

When checking channel separation, this test can only be done with a frequency of 1 KHz.

1.6. Title display

By pushing the keys respectively title holders are moved into the corresponding direction. Upon each key operation two new CD-covers including title-strips are shown. In case of a limitation of selectable CD's via service step P22 only the corresponding title holders are shown.

NOTE: A problem with the title display will initiate error code "Er 9x". Following instructions in paragraph 14 (trouble shooting).

2. ADJUSTMENTS WITH REMOTE CONTROL

The phonograph can optionally be equipped with cable-type remote control or infra-red remote control. All functions and the operation of both models are identical. Therefore, this description is valid for both of them.

The button-control box attached to the rear of the cabinet allows common control of both channels "+" or "-" and "REJECT".

Information about the functions of different controls is presented in the unit description "Remote Control".

Note: The button volume control is not present with wallboxes such as the "CD FIRE" or the "CD HIDE AWAY".

2.1. Volume Controls

We differentiate between two volumes:

- 1.) The normal volume of selected titles and random play titles
- 2.) The background volume of background titles

For selected titles and random titles or with microphone and tape mode the corresponding volume is adjustable; background volume only with background mode:

Key "I" for the left channel; Key "II" for the right channel; "+" = louder, "-" = quieter. When pushing center key (I+II), the channels are regulated together. If they were differently set, they are first "balanced" and regulated together.

When no selection is taking place, the volumes for the channels are shown in Display 3 during the adjustment in steps of "1" to "31".

At "muting" function "OFF" appears in Display 1; no more titles will be played until MUTING is cancelled.

The volume set at the end is stored during "power off".

The maximum possible volume for normal and background mode can be limited in service program P28 in steps of "1" to "31".

Note: To protect the amplifiers a check is made whether an overload occurs due to mismatching in 250 ms cycles.

Upon recognition of an error the volume of the corresponding channel is reduced step by step automatically by the computer until a non-critical point is reached.

2.2. Muting

The volume of both channels can be set at "0" by pressing the MUTING key; "OFF" appears on Display 1. Re-pressing of the MUTING key or a VOLUME "+" key causes the system to switch back to the previously set volume for both channels.

Note: With display "OFF" no more records are played until MUTING is switched off.

2.3. Free Credits

With an "open" key switch free credits programmed in program step P23 can be called up. The following free credits are possible depending upon the settings in step P23:

- 1.) Number of set free credits can be called up individually step by step.
- 2.) Unlimited free credits can be called up individually step by step.
- 3.) Permanent credit when pressing key "FREE CREDIT" for the first time (credit display "99"). When key "FREE CREDIT" is pressed again, permanent credit is blocked.

2.4. Background Music


With an "open" key switch the background mode can be switched on with the BACKGROUND key. "Background playing" lights up. When pressing this key again, the background mode is switched off. In the background mode "random" records are played from the upper area of the magazine. The area can be set in program step P25.

The records are played at a "specific" background volume which can be changed as desired during playing cycle from "0" up to maximum volume set in program step P28.

A "normal record," selected while background music is playing, interrupts the background disc and the selected tune is played at "normal volume."

2.5. Key Switch

A key switch at the side wall serves as protection against unauthorized calling up of free credits and switching on the background mode. When the key switch is "locked," settings from the remote control are disregarded. Key switch "open" permits programmed free credits to be called up and the background mode to be switched on.

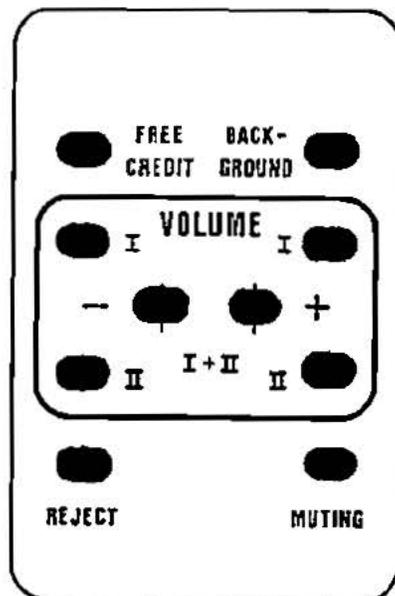

REMOTE CONTROL

3. Service Operation -Short Program for Price Settings-

This description is a summary of a section of the service program.
A detailed description and the corresponding tables are contained in chapter 1.3. "Price Settings" and 1.4. "Monetary Value Settings".

Practical example for setting the "plays per monetary unit" and the "monetary unit settings":
 1 play = 30 p
 2 plays = 50 p
 5 plays = 1 £

Setting the price table (plays/monetary unit):

| Programming information | Operation | Displays | | |
|---|-------------------|----------|-----|-----|
| | | 1 | 2 | 3 |
| Switch-over from play mode to service mode | pull out plunger | P01 | | xxx |
| | Press key(s) | | SP: | GW: |
| Select a program step | "C" | P | | |
| Direct selection of program step, Display of previous setting in P41. | "41", "H". | P41 | xx | xxx |
| New setting in P41 "1 play/30p". | "01", "02", "H". | P41 | 01 | 030 |
| Advance to next program step, Display of previous setting in P42. | "H" | P42 | xx | xxx |
| New setting in P42 "2 plays/50p". | "02", "050", "H". | P42 | 02 | 050 |
| Advance to next program step, Display of previous setting in P43. | "H" | P43 | xx | xxx |
| New setting in P43 "5 plays/1 £". | "05", "100", "H". | P43 | 05 | 100 |
| Advance to next program step, Display of previous setting in P44. | "H" | P44 | xx | xxx |
| For only 3 classes setting "00 000". | "00", "000", "H". | P44 | 00 | 000 |
| Advance to next program step, Display of previous setting in P45. | "H" | P45 | xx | xxx |
| For only 3 price classes setting "00 000" | "00", "000", "H". | P45 | 00 | 000 |

Caution! Press "C" key in the event of incorrect programming or when display flashes.

Press "C" key twice or close hood to return to standard program (play mode).

Monetary Value Settings:

The individual coin channels must be programmed for the associated monetary values in the corresponding program steps: Channel 1 for 20 pence in program step P51, channel 2 for 50 pence in program step P52, channel 3 for 10 pence in program step P53. Channel 4 (P54) and channel 5 (P55) are not used; both must be programmed with the monetary value "0".

Checking the monetary value settings: Select a program step between P50 and P55 (see description under "setting price table"). After inserting a certain coin the channel associated with the coin is displayed, e.g. 50 pence in channel 2: Display P52 050.

Changing the monetary value settings: As an example, the 20 pence slot (channel 1) is not to be used: First enter program step P51 as described in point 1. In the coin acceptor or on the adapter PCB of electronic coin validators the respective channel has to be blocked also so that these coins drop into the coin return.

| Programming information | Press keys | Displays | | |
|---|-------------|----------|----|-----|
| | | 1 | 2 | 3 |
| Direct selection of program step, Display of previous setting in P51. | See text. | P51 | xx | xxx |
| New setting; no coin conversion | "000", "H". | P51 | | xxx |

If the standard setting according to the table is to be used thereafter, first switch on program step P50 (as described previously).

| | | | | |
|---|-----------|-----|--|---|
| Ready for standard setting P50 through P55. | See text. | P50 | | |
| Program standard table 1. | "1", "H". | P50 | | 1 |

Press "C" key twice or close cabinet hood and return to standard program (play mode).

4. CD CHANGE/CASH COLLECTION

- Open machine and activate cabinet switch (pull out plunger) to enter into service mode. Display 3 automatically shows the least played CD.
- By pressing "1" successively, the next best CD is shown each time.
- Unlock magazine, swing out; pull out the corresponding CD holders to change CD's. After changing push back CD holders until they lock in.
- Change corresponding title cards, unlock flip-chart unit and flap down. Get desired program tables in position with the button on the PCB of the right-hand side of the unit.
- Read counters:
 - P03 = Cash total
 - P04 = Counter for plays
 - P05 = Number of selected titles
 - P06 = Number of selected albums
 - P07 = Number of free credits provided
 - P08 = Number of background CD's played
- Erase counters: P10, Code "1", counters P01 to P08 are erased.
- For more information see "Statistics and Service Programs", Section 1.1., Statistics Program, P01 to P12!

| | | | | | | | |
|--------------------------------|---|--------------------------------|-------------------------------------|--|-------------------------------|---------------------|---|
| P01 | Popularity beginning with least played CD upwards | | P02 | Pop. beginning with most played CD downwards | | BUTTON | |
| | No. of least played CD | | | No. of most played CD | | | 0 |
| | No. of next least played CD | | | No. of next most played CD | | | 1 |
| | Rank of CD displayed | | | Rank of CD displayed | | | 2 |
| | Times played | | | Times played | | | 3 |
| Information about a certain CD | | Information about a certain CD | | 4 | | | |
| P03 | Total cash in monetary units | | P04 | Counter of played titles | | 0 | |
| | Total cash cumulative in monetary units/100. | | | Counter of played titles accumulated | | 1 | |
| P05 | Number of selected title | | P06 | Counter of album selections | | | |
| P07 | Number of free credit | | P08 | Counter of played album titles | | | |
| P10 | Cancel of counters | | P12 | Transfer of NSM DATA PRINT **) | | | |
| | Popularity, HIT-Parade, Counter P03-P08, Credit | | | Counter P03-P08 | | 1, H | |
| | Popularity (P01, P02), HIT-Parade | | | Counter P03-P08, Settings P21-P56 | | 2, H | |
| | Counter P03-P08 | | | Popularity, Counter P03-P08 | | 3, H | |
| | Credit | | | Pop.counter P03-P08, Settings P21-P56 | | 4, H | |
| P11 | Data transfer and memory (storage *) | | | | | 1, H | |
| P20 | Autom. programming of the prog. steps P21-P39 according to table | | | | | 1, H | |
| P21 | Unit code | P22 | No. max. CD-Tracks to be selected | P23 | No. of free credits | x, H | |
| P24 | Random play interval | P25 | No. of CD's progr. f. backgr. music | P26 | Light gener. f. stand by ***) | x, H | |
| P27 | Light gener./organ for play ***) | P28 | Maximum volume | | | x, H | |
| P30 | Max. play time for a title *) | P31 | Sequence of plays *) | P32 | Max. titles in CD sequence *) | x, H | |
| P38 | Autorization with code numb. | P39 | Code number | | | x, H | |
| P40 | Autom. programming of the steps P41 thru P46 (play/cash value) according to table | | | | | x, H | |
| P46 | No. of credits for an album selection | | | | | x, H | |
| P50 | Autom. programming of the steps P51 thru P56 (coin value acceptance) to table | | | | | x, H | |
| P56 | Bonus credit for Bill | | | | | x, H | |
| P60 | Test programs | | | | | x, H | |
| P61 | Programming optional Numbers of CD-Tracks | | | | | xxxx, H | |
| P62 | Read-out of error code | | | | | 0; 1; 2; 3; 4, 1, H | |

*) from Progr.-Index 004;

**) from Progr.-Index 003;

***) if installed

Test Programs

| | | | | | | | | | |
|------------------------------|---|--------------------------------|----------------------|-----------------|--------------------------|---------|---|--------|------|
| | | | | (Interrupt/run) | | H | | | |
| P60 | Display 1 | | Display 2 | | Display 3 | | Error Display | | |
| | Display and light test: | | F 1 | | | | | 1, H | |
| | Input test: | | F 2 | | Part-No. | Bit-No. | | Status | 2, H |
| | Continuous Run 1 (playing continuously): | | F 3 | | Number of errors | | | 3, H | |
| | Continuous Run 2 (repeatedly playing): | | F 4 | | Number of errors | | | 4, H | |
| CD = Changer test: | "2" = Lift upwards | | "8" = Lift downwards | | "4" = Grip left | | OPTO stepper control OPSTP OPTO endposition OPEND OPTO grip right OPGRR OPTO pickup center OPPUM OPTO grip left OPGRL With Display "0" = lit up With Display "1" = darkened | | |
| | "6" = Grip right | | "5" = Return holder | | "0" = Keep lift position | | | | |
| "3" = Motor step, upwards *) | | "9" = Motor step, downwards *) | | | | | | | |
| P61 | Number of track numbers | | | | | xxxx, H | | | |
| P62 | Error code of least error | | | | | 0 | | | |
| | Error code of previous errors (up to 10) | | | | | 1 | | | |
| | No. of CD at which error occurred | | | | | 2 | | | |
| | Time in hrs./min. since "power on" or start of P60/3 or P60/4 when error occurs | | | | | 3 | | | |
| | Cancellation of stored error code | | | | | 4 | | | |

*) from Progr.-Index 004

Error Messages

| Er | Error | Action |
|----|-------------------------------|--|
| 0x | EPROM | Check or replace corresponding component or unit. See special information in "TROUBLE SHOOTING". |
| 1x | RAM | |
| 2x | Program | |
| 3x | Verification | |
| 4x | Price settings | |
| 5x | Coin mechanism/Bill validator | |
| 6x | CD-Player | |
| 7x | CD-Changer | |
| 8x | Wallbox-Connection | |
| 9x | Title Indication | |

SHORT INSTRUCTION:

For statistics and service programs; test programs, error displays.

* Detailed description in Section 3 "Statistics and Service Programs" as well as Section 14 "Trouble-Shooting".

STATISTIC-AND SERVICE PROGRAMS

FOR NSM-PHONOGRAPHS

ES IV-CD TECHNOLOGY

3

NSM

Aktiengesellschaft
Saarlandstraße 240
6530 Bingen am Rhein
Telefon: 067 21 / 407-0
Telefax: 067 21 / 407 510

PART-№
209 820

INDEX

- 1. SERVICE PROGRAM
 - 1.1. Statistics program
 - 1.1.1. Popularity beginning with least played title upwards
 - 1.1.2. Popularity beginning with most played title downwards
 - 1.1.3. Reading counters
 - 1.1.4. Erasing counters and credits
 - 1.1.5. Data transfer
 - 1.2. GENERAL SETTINGS
 - 1.2.1. Standard settings
 - 1.2.2. Code for NSM DATA PRINT
 - 1.2.3. Position settings
 - 1.2.4. Free credits
 - 1.2.5. Random discs
 - 1.2.6. Light organ/generator (only for phonographs with LP light generator)
 - 1.2.7. Volumes for normal and background titles
 - 1.2.8. Maximum playing time
 - 1.2.9. Sequence of CD's played
 - 1.2.10. Maximum of tunes played on the same CD
 - 1.2.11. Authorization
 - 1.2.12. Change of key code
 - 1.3. PRICE SETTINGS
 - 1.3.1. Standard settings
 - 1.3.2. Price table (plays/monetary value)
 - 1.4. MONETARY VALUE SETTINGS
 - 1.4.1. Standard settings
 - 1.4.2. Monetary values (for Channels 1 to 5)
 - 1.5. TESTING PROGRAMS
 - 1.5.1. Display test, Display 1 "P60"
 - 1.5.2. Entry test, Display 1 "P60"
 - 1.5.3. Continuous Run 1
 - 1.5.4. Continuous Run 2
 - 1.5.5. Test CD changer
 - 1.5.6. Selection of CD and track numbers

1. SERVICE PROGRAM

When opening the cabinet and activating the cabinet interlock switch (pull out plunger), the phonograph is automatically switched from play mode to service mode.

In the service mode the user has available many valuable and easy-to-use aid programs. There are five main sections:

1. Statistical programs which support the reading, evaluating, printing and erasing of all counters (P01 to P12).
2. Programs which permit a standard setting by the manufacturer as well as settings for customers of all machine parameters (P20 to P39).
3. Programs which make possible an individual setting of a price table, but also offer the selection of a standard table out of 20 tables altogether (P40 to P46).
4. Programs which make possible the individual coin value setting for five channels, but also permit programming of one standard setting available for many countries (P50 to P56).
5. Testing programs which support a quick functional test of units as well as locating an error on location (P60/P61).

At delivery the phonograph is "non-coded," e.g. all data and programs are accessible in the service mode. Of course, all confidential data - they are marked in the last column of the following table by an "X" - can be locked via entry of a 4-digit code number (P39).

Short Program

After opening the cabinet and activating the cabinet switch manually, the statistical program "popularity" is automatically turned on. Display 1 shows program step "P01," Display 3 shows the least played CD.

Continue on to the following program steps by pressing "H."

When desiring another program step, press "C," Display 1: "P."

After that one can select a program step directly by entering the desired program number and pressing "H."


Return to normal program by pressing "C" twice.

Information (read-out of counters) of certain program steps through entry of code numbers.

Additional functions of certain program steps through entry of a code number and "H."

Standard settings in program steps P20, P40 and P50 through entry of table number and "H" within that program step.

SELECTOR and DISPLAY PANEL

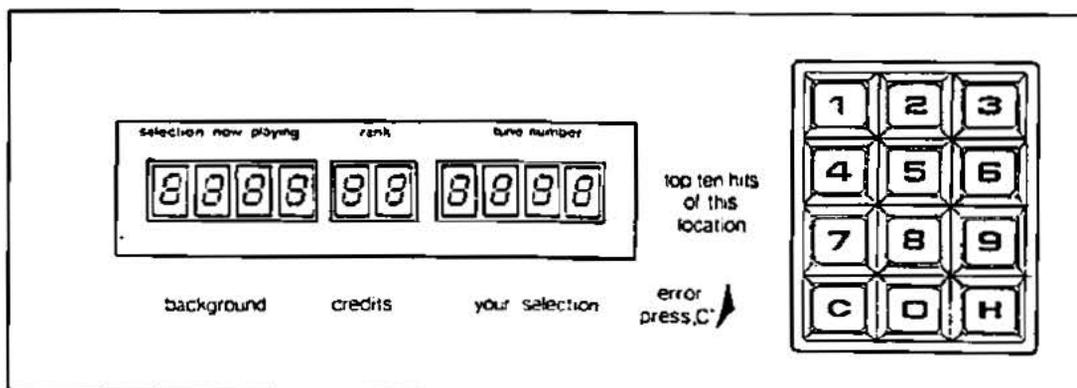

Display panel with displays 1, 2 and 3 as well as 12 button selector

1.1. Statistical program

1.1.1. Popularity-from least played title upward

| Display | Designation | Remarks |
|---------|--|---|
| P01 | Number of least played CD. | Enter number "0" (is switched on automatically) |
| | Number of next least played CD, etc. upwards to the most played CD. | Advance with "1". |
| | Rank of CD displayed. | Enter the number "2". The next display corresponds to the rank of this record. Example display "5" corresponds to the fifth least played record. |
| | Total of this CD played (max. 255). | Enter number "3" If a pop. counter is greater than 200 at "power off", all counters are divided by 2 (normalized). An "x" appears on display 2 until the counters are reset (the pop. dis- play is relative). |
| | Information on a certain CD. | Enter the number "4", the desired CD number and "H". The desired information on this CD can be called up as described previously with the keys "1" through "3". |

1.1.2. Popularity, from best title upwards

| | | |
|-----|--|---|
| P02 | Number of most played CD. | Enter number "0" (is switched on automatically). |
| | Number of next most played CD etc. down to the least played CD. | Advance with "1". |
| | Rank of CD displayed. | Enter the number "2". The next display corresponds to the rank of this record. Example display "5" corresponds to the fifth least played record. |
| | Total of this CD played (max. 255). | Enter number "3" If a pop. counter is greater than 200 at "power off", all counters are divided by 2. An "x" appears on display 2 until the counters are reset. Get actual popularity, multiply all by 2. |
| | Information on a certain CD. | Enter the number "4", the desired CD number and "H". The desired information on this CD can be called up as described previously with the keys "1" through "3". |

1.1.3. Counter read-out

| | | | |
|-----|--|---|---|
| P03 | Cash balance in monetary units (as pro- grammed by the settings in P51 through P55). 5 digits. | Enter number "0" (is switched on automatically). | x |
| | Cash balance-accumulated-5 digits. | Enter the number "1" Value shown must be multiplied by 100 to get total monetary units. | x |
| P04 | Play counter. | Enter number "0" (is switched on automatically). | x |
| | Play counter, accumulated | Enter number "1". | x |
| P05 | Number of selected title. | Enter number "0" (is switched on automatically). | x |
| P06 | Number of album selections. | | x |
| P07 | Number of free credits. | | x |
| P08 | Number of background titles. | | x |

1.1.4. Counter and credit reset

| Display | Designation | Remarks | |
|---------|--|---------------------------|---|
| P10 | Total reset of popularity (P01, P02) the HIT-parade, the counters P03 through P08 and credits. | Enter number "1" and "H". | x |
| | Resetting the popularity (P01, P02) and HIT-parade. | Enter number "2" and "H". | |
| | Resetting the counters (P03 through P08). | Enter number "3" and "H". | x |
| | Cancel credits. | Enter number "4" and "H". | |

1.1.5. Data transfer

| | | | |
|-----|---|--|--|
| P11 | Data transfer and memory (storage) with the NSM DATA PRINT. (from Progr. Index 004) | Plug DATA PRINT into "Service Socket" of control unit. Enter Code "1" and "H". Counters (P03-P08) and popularity will be transferred. Display 3 "E0" appears in case of error during data transfer. Also see description NSM DATA PRINT. | |
| P12 | Transfer to NSM-DATA PRINT. Note: If phonograph is "coded", only the de-coded values are printed out unless the code number is entered. (from Progr.-Index 003) | Plug printer into the "service socket" on the control unit. Enter "1" = counters (P03 through P08) or "2" = counters (P03 through P08), settings (P21 through P37, P39) or "3" = counters (P03 through P08), popularity (P01, P02) or "4" = counters, settings, popularity, if overflow has taken place, the popularity is relative, the multiplying of overflows is printed out also. If the printer does not operate, "E0" appears on display 3. | |

1.2. Specific Settings
1.2.1. Standard Settings

| Display | Designation | Remarks | |
|---|---|---|---|
| P20 | Programming of steps P21 through P39 (for factory setting see table 1). | Press "1" and "H". If values deviating from the table are desired, they can be entered according to the following program steps. | x |
| Standard table for specific settings in program step P20. The following table shows the basic setting (factory setting) of the phonograph. | | | |
| Tab.No. | Result in the individual program step: | | |
| | P21 0000 = unit code (for recording device) | | |
| | P22 0024 = maximum choice CD/track (100 CD's/24 tracks) | | |
| | P23 200 = free credits | | |
| | P24 15 = Interval for random play in minutes | | |
| | P25 10 = Number of CD's for background | | |
| | P26 1105 = light organ during standby | } Only for models with light organ/ luminous effects | |
| | P27 1000 = light organ during play | | |
| | P28 3116 = maximum Volume of both channels for coin-selected titles and background-CD | | |
| *) | P30 0 = No limit of playing time for a title | | |
| *) | P31 0 = Playing in sequence of selection | | |
| *) | P32 0 = No limit on playing titles on the same CD | | |
| | P39 0000 = code number (data and program settings not coded) | | |

*) from Progr.-Index 004

1.2.2. Code number for NSM DATA PRINT

| | | | |
|-----|--|--|---|
| P21 | Machine code number for NSM DATA PRINT | Enter code number between "0" and "9999" as well as "H". | x |
|-----|--|--|---|

1.2.3. Position Settings

| | | | |
|-----|--|---|--|
| P22 | Number of maximum choice CD's and tracks | Enter desired number between "0101" and "0099" as well as "H". CD-Nr. 00 = 100. Example for 100 CD's / 24 tracks: "0024" | |
|-----|--|---|--|

1.2.4. Free credits

| | | | |
|-----|-------------------------|--|---|
| P23 | Number of free credits. | Enter desired number and "H". "0" to "199" The number of free credits set can be released individually by the FREE CREDIT key on remote control. "200" An unlimited number of free credits can be set and released by the FREE CREDIT key on remote control. "201" The phonograph is continuously switched to "free credits" when the FREE CREDIT key is pressed (Credit Display "99"). The phonograph is switched back to operating mode when the FREE CREDIT key is pressed again. | x |
|-----|-------------------------|--|---|

1.2.5. Random title and Background

| | | | |
|-----|---------------------------------|--|---|
| P24 | Time interval for random title. | Enter desired time interval between "0" and "255" minutes, followed by "H". (No random titles are played when "0" is entered). | x |
| P25 | Number of background music-CD. | Enter desired number between "0" and "100", followed by "H". Background starts counting downwards starting with maximum number of CD's up (P22) to set number of background positions. With setting "0" no background operation. | x |

1.2.6. Light Console/Light Organ (Only for models with light organ/luminous effects)

| Display | Designation | Remarks | | | | x | |
|------------|--|-------------|-------------|-------------|-------------|---|---|
| | | A | B | C | D | | |
| P26 P27 | Luminous effects for "stand by mode" or Luminous effects for "play mode" | 0 ↓ 1 | 0 ↓ 3 | 0 ↓ 1 | 1 ↓ 5 | Setting "A" corresponds to the switching characteristics: "0"-slow to "1"-fast. Setting "B" corresponds to speed of intervals (0-3). Setting "C-D" corresponds to the various types of light effects "1" through "15". Complete entry with the "H"-button. | x |
| P26 P27 | Continuous light for "stand by mode" or Continuous light for "play mode" | 0 ↓ 3 | 0 ↓ 3 | 0 ↓ 0 | 0 ↓ 0 | Setting "B" corresponds to the desired brightness ("0" through "3"). Complete entry with "H"-button. | x |
| P27 | Light organ in "play mode". | 1 ↓ 3 | 0 ↓ 3 | 0 ↓ 0 | 0 ↓ 0 | Setting "B" is for the desired basic brightness ("0" through "3"). Complete entry with the "H"-button. | x |

1.2.7. Volumes for Regular and Background Music

| | | | |
|-----|-----------------|--|---|
| P28 | Maximum volume. | Enter two digits each for desired maximum volume of normally chosen and background titles as well as "H". e.g.: 31 24 └─ Background └─ Normal | x |
|-----|-----------------|--|---|

1.2.8. Maximum Playing Time

| | | | |
|-----|--|---|---|
| P30 | Maximum playing time for a title (from Progr.-Index 004) | Enter desired time in minutes between 0 and 99 and then press "H". With "0" no limit of playing time. | x |
|-----|--|---|---|

1.2.9. Sequence of CD's playing

| | | | |
|-----|--|--|---|
| P31 | Sequence of CD's playing (from Progr.-Index 004) | Enter Number 0, 1 or 2 and then press "H". 0 = in sequence of selection (FIFO) 1 = in numerically increasing sequence 2 = random sequence | x |
|-----|--|--|---|

1.2.10. Maximum of tunes played on the same CD

| | | | |
|-----|--|--|---|
| P32 | Maximum of tunes played on the same CD (from Progr.-Index 004) | Enter desired maximum number of tunes played and then press "H". With "0" no limit. | x |
|-----|--|--|---|

1.2.11. Authorization

| | | | |
|-----|----------------|---|---|
| P38 | Authorization. | Enter correct code number and "H". Each of the four digits is confirmed by "P". After closing with "H" "PPPP" is shown and the operator is thereby given authorization. Only the correct code number enables access to protected data. After closing of cabinet or going back to regular program by pressing "C" twice, the programs are protected again. | x |
|-----|----------------|---|---|

1.2.12. Code number

| | | | |
|-----|--------------|---|---|
| P39 | Code number. | Changing of code number is only possible when operator has been authorized in program step P38. Enter new code number and "H". Each digit is confirmed after entry with "P". After closing with "H" "PPPP" is shown. Possible entries between "0000" and "9999". If "0000" is programmed, the machine is not protected and access to all programs is possible without authorization. A programmed code number is not show anymore, so please remember your code number! | x |
|-----|--------------|---|---|

1.3. PRICE SETTINGS

1.3.1. Standard Settings, from Progr.-Index 004

| Display | Designation | Remarks | x |
|---|--|--|---------------|
| P40 | Programming of the program steps P41 through P46 (Standard setting). | Enter corresponding table No. and "H". If values deviating from those in the table are desired, they can be changed according to the following program steps (P41 through P46). | x |
| <p>Standard settings for plays per monetary value in program step P40. The result of the programming of a table ("0" through "20") shows the number of plays per monetary value allocated to the program steps P41 through P45. The monetary values are programmed in monetary value units as they are set in P50 through P55; example table 17, P41: If no bonus is to be given for a high monetary value, it is sufficient to program only the small monetary value, the total of the small values results in the larger value; example table 17: 1 x 25 c = 1 play + 100 c = 7 plays. Standard settings for P46 = "0".</p> | | | |
| Table- No. | Display of Program Number P41 Sp/Gw P42 Sp/Gw P43 Sp/Gw P44 Sp/Gw P45 Sp/Gw | Remarks/ as set by the factory | |
| 0 | 00 000 00 000 00 000 00 000 00 000 | no coin conversion in this setting. | |
| 1 | 01 050 01 050 01 050 01 050 01 050 | New Zealand 1 play = 50 c | (NZ) |
| 2 | 01 020 01 020 01 020 03 050 03 050 | Belgium 1 play = 20,- Bfr 3 plays = 50,- Bfr | (B) |
| 3 | 01 005 01 005 03 010 03 010 07 020 | If desired, please adjust 1 play = 5,- 3 plays = 10,- 7 plays = 20,- | |
| 4 | 02 050 02 050 05 100 05 100 12 200 | Austria 2 plays = 5,- 8S 5 plays = 10,- 8S 12 plays = 20,- 8S | (A) |
| 5 | 02 010 02 010 05 020 05 020 12 050 | Germany 2 plays = 1,- DM 5 plays = 2,- DM 12 plays = 5,- DM | (D) |
| 6 | 01 050 01 050 01 050 03 100 03 100 | USA 1 plays = 2x 25 c 3 plays = 4x 25 c | (USA) |
| 7 | 02 010 02 010 02 010 12 050 12 050 | Norway 2 plays = 1,- Kr 12 plays = 5,- Kr | (N) |
| 8 | 01 010 01 010 03 020 03 020 03 020 | Venezuela 1 play = 1,- Bol 3 plays = 2,- Bol (7 plays = 5,- Bol) | (YY) |
| 9 | 01 010 01 010 03 020 03 020 10 050 | Ireland 1 play = 10 p 3 plays = 20 p 10 plays = 50 p | (IR) |
| 10 | 03 010 03 010 07 020 07 020 18 050 | Switzerland 3 plays = 1,- sfr 7 plays = 2,- sfr 18 plays = 5,- sfr | (CH) |
| 11 | 01 030 01 030 02 050 02 050 05 100 | United Kingdom Denmark 1 play = 30 p 2 plays = 50 p 5 plays = 1 £ | (GB) (DK) |
| 12 | 01 020 01 020 01 020 03 050 03 050 | Jugoslavia (Din) Finland (mk) 1 play = 2x 1,- 3 plays = 5,- | (YU) (SF) |
| 13 | 01 020 01 020 03 050 03 050 07 100 | Union of South Africa (c) France (Fr) 1 play = 20 c 3 plays = 50 c 7 plays = 1,- R | (SAU) (F) |
| 14 | 01 040 01 040 02 060 03 080 04 100 | Australia 1 play = 2x 20 c 2 plays = 3x 20 c 3 plays = 4x 20 c 4 plays = 1 Dollar | (AUS) |
| 15 | 01 025 01 025 01 025 01 025 01 025 | Canada Dutch Antilles 1 play = 25 c 4 plays = 1 NAF | (CAN) (NA) |
| 16 | 01 025 01 025 01 025 05 100 05 100 | Spain (pts) 1 play = 0,25 5 plays = 1,- | (E) |
| 17 | 01 050 01 050 03 100 03 100 18 500 | USA 1 play = 50 c 3 plays = 1 \$ 18 plays = 5 \$ | (USA) |
| 18 | 01 100 01 100 03 250 03 250 07 500 | Netherlands 1 play = 4x 25 c 3 plays = 2,5 hfl 7 plays = 5 hfl | (NL) |
| 19 | 01 100 01 100 03 200 03 200 05 300 | Japan 1 play = 100 Yen 3 plays = 2x 100 Yen 5 plays = 3x 100 Yen | (J) |
| 20 | 01 040 01 040 01 040 03 100 03 100 | Italy 1 play = 2x 200 L 3 plays = 2x 500 L | (I) |

1.3.2. Price List (Number of Selections/Monetary Value)

| Display | Designation | Remarks | x |
|---------|---|--|---|
| P41 | Number of selections per coin (smallest value). | Enter desired number of plays coin (smallest value) and "H". Entry sequence: 2 digits for number of plays. 3 digits for corresponding coin e.g. 01 020 correspond to one play for 20 pence. Largest programmable number of plays up to 63, price list from 005 to 995. | x |
| P42 | Operating and display are analogous to program step P41 | Note: All five program steps must be programmed with the price classes in the sequence or their priority. For less than 5 price classes program more than once or set to "00 000". | x |
| P43 | | | x |
| P44 | | | x |
| P45 | | | x |
| P46 | Number of required credits for one album. | Enter desired number and "H". At "0" no album selection allowed. | x |

1.4. MONETARY SETTINGS

1.4.1. Standard Settings

| | | | |
|-----|--|--|---|
| P50 | Programming of the program steps P51 through P55 (Standard setting). | Enter corresponding table and "H". If values other than those in the table are desired, they can be changed according to the following program steps (P51 through P55). | x |
|-----|--|--|---|

The monetary value settings in the individual program steps are associated with the corresponding coin channel: P51 for channel 1; P52 for channel 2, etc. to P55 for channel 5. This table shows the coin values for the corresponding channel in the currency of the country in columns P51 through P55. Standard setting of P56 = "0".

| Table- No. | Display of Program Number | | | | | Remarks/ as set by the factory |
|---------------|-----------------------------------|-----------------------------------|-----------------------------------|--------------------------|--------------------------|---|
| | P51 (Channel 1) | P52 (Channel 2) | P53 (Channel 3) | P54 (Channel 4) | P55 (Channel 5) | |
| 0 | 000 | 000 | 000 | 000 | 000 | no coin conversion in this setting |
| 1 | 010 1,- DM 1 Bol 1,- sfr | 050 5,- DM 5 Bol 5,- sfr | 020 2,- DM 2 Bol 2,- sfr | 000 -,- -,- -,- | 000 -,- -,- -,- | Germany Venezuela Switzerland (YV) (D) (CH) |
| 2 | 050 5 S | 200 20 S | 100 10 S | 000 -,- | 000 -,- | Austria (A) |
| 3 | 020 200 L | 010 100 L | 050 500 L | 000 -,- | 000 -,- | Italy (I) |
| 4 | 000 -,- -,- -,- | 050 5 mK 5 Kr 5 Din | 010 1 mK 1 Kr 1 Din | 000 -,- -,- -,- | 000 -,- -,- -,- | Finland Norway Jugoslavia (N) (SF) (YU) |
| 5 | 025 25 c | 250 2,5 hfl | 100 1 hfl | 000 -,- | 000 -,- | Netherland (NL) |
| 6 | 000 -,- | 100 1,- NAF | 025 0,25 NAF | 000 -,- | 000 -,- | Netherland Antillen (NA) |
| 7 | 000 -,- | 020 20 Bfr | 005 5 Bfr | 000 -,- | 000 -,- | Belgium (B) |
| 8 | 010 1 Fr 1 dkr | 050 5 Fr 5 dkr | 100 10 Fr 19 dkr | 000 -,- -,- | 000 -,- -,- | France Denmark (DK) (F) |
| 9 | 020 20 p | 050 50 p | 010 10 p | 000 -,- | 000 -,- | United Kingdom/Ireland (GB) (IR) |
| 10 | 010 10 c | 050 50 c | 025 25 c | 000 -,- | 100 1 Dollar | USA (USA) |
| 11 | 000 -,- | 025 25 c | 000 -,- | 000 -,- | 100 1 Dollar | Canada (CAN) |
| 12 | 020 20 c | 100 1 R | 050 50 c | 000 -,- | 000 -,- | Union of South Afrika (SAU) |
| 13 | 100 1 Dollar 100 Yen | 050 50 c 50 Yen | 020 20 c 20 Yen | 000 -,- -,- | 000 -,- -,- | Australia Japan (J) (AUS) |
| 14 | 000 -,- | 025 25 pts | 100 100 pts | 000 -,- | 000 -,- | Spain (E) |

Monetary Setting for electr. Coin Acceptor see chapter 10,
Program Table 209 955

| Table- No. | Display of Program Number | | | | | Remarks/ as set by the factory | | |
|-----------------------|---------------------------|---------------------------------|---------------------------|---------------------------------|---------------------------------|-----------------------------------|-------------------------------------|---------------------|
| | P51 (Channel 1) | P52 (Channel 2) | P53 (Channel 3) | P54 (Channel 4) | P55 (Channel 5) | | | |
| electr. Coin Acceptor | 15 | 100 10 Fr 1 £ | 020 2 Fr 20 p | 010 1 Fr 10 p | 050 5 Fr 50 p | 000 -,- -,- | France United Kingdom | (F) (GB) |
| | 16 | 050 5,- DM | 010 1,- DM | 000 -,- | 020 2,- DM | 000 -,- | Germany | (D) |
| | 17 | 050 5,- sfr 500 L 50 c | 010 1,- sfr (100 L) | 005 1/2 sfr (50 L) 5 c | 020 2,- sfr 200 L 20 c | 000 -,- -,- -,- | Switzerland Italy New Seeland | (I) (CH) (NZ) |
| | 18 | 000 -,- | 050 5 dkr | 010 1 dkr | 100 10 dkr | 000 -,- | by 3-Channel Denmark | (DK) |
| | | 100 10 dkr | 010 1 dkr | 000 0,25 dkr | 050 5 dkr | 000 -,- | by 4-Channel (02) Denmark | (DK) |
| | | 100 10 dkr(new) | 050 5 dkr | 010 1 dkr | 100 10 dkr (old) | 000 -,- | by 4-Channel (1 A) Denmark | (DK) |
| | 19 | 200 20 S | 050 5 S | 010 1 S | 100 10 S | 000 -,- | Austria | (A) |
| 20 | 025 25 c | 250 2 1/2 hfl | 500 5 hfl | 100 1 hfl | 000 -,- | Netherland | (NL) | |

1.4.2. Monetary Values (Allocated to coin channels 1 through 5)

| Display | Designation | Remarks | x |
|---------|--|---|---|
| P51 | Coin value channel 1. Monetary Setting for electr. Coin Acceptor see chapter 10, Program Table 209 955 Operation and display are analogous to program step P51. | Enter desired coin value for channel 1 and "H". Example: "010" corresponds to 10p, "020" to 20p and "100" corresponds to 1 £. Note: When a coin is inserted in the program steps P50 through P55 the channel assigned to this coin is automatically displayed on display 1; P51 for channel 1, etc. to P55 for channel 5. Not used channels are set to "0". The programmed monetary units for P51 through P55 must correspond to the unit programmed by the cash counter (P03), e.g. 050 units for 50p, 020 units for 20p and 100 units for 1 £. | x |
| P52 | | | x |
| P53 | | | x |
| P54 | | | x |
| P55 | | | x |
| P56 | Bonus credits for bills. | Enter desired number and "H". When a dollar bill is inserted (Channel 5/P55), the programmed value is added to the credit. | x |

1.5. TEST PROGRAMS

The displays in this program step acts as test aids for testing the phonograph. In the event of a malfunction the defective unit can be determined or a malfunction resulting from incorrect settings can be recognized in a simple manner with the aid of these tests. Certain displays are aids for the adjustment of the playing mechanism.

Switch on test program: Open cabinet lid pull out interlock cabinet switch
 Display 1 shows "P01", press letter "C".
 Display 1 shows "P".
 Press number 60 and H, Display 1 shows "P60".

1.5.1. Display Test, Display 1 "P60"

This program tests the lights and displays on the display circuit board. After starting "F1" (first function test) appears on display 2.
 The test is run through in steps: 1. All 5 display lights together.
 2. The digits are switched on one after another individually with "8".
 3. The display lamps 1 through 5 individually.
 4. Displays together, running through the numbers "0" through "9".
 The "F1" is displayed for approx. 2 seconds before the test repeats, itself.

| Designation | Remarks |
|--------------------------------|---|
| Display test -continuous test- | Enter "1" and "H". Display 2 "F1". |
| Stop test sequence | Enter "H". The light "10 top hits" comes on. |
| Continue test sequence | Enter "H" again. The light "10 top hits" goes off. |
| Terminate test. | Enter "C" once, display 1 "P60" or actuate cabinet switch, the unit returns to the regular program. |


1.5.2. Input Test, Display 1 "P60"

In the following test the functions of all entries of Input Ports 1-6 can be tested:
 Port 1, Port 2: Control unit
 Port 3 : Keyboard (Display Board)
 Port 4, Port 5: Pickup Driver
 Port 6 : Title Indication
 Every input change is shown on the display as follows:


| | |
|-----------------|--|
| Input Test | <p>Enter "2" and "H", Display 2 "F2" (second function test) Display</p>  <p>Bit information (Switch Status 1 or 0) Bit Number (0 to 7) Port Number; 1 = Control Unit IC 8 2 = Control Unit IC 9 3 = Keyboard IC 304 4 = Pickup Driver IC 1 5 = Pickup Driver IC 2 6 = Title Indication IC 1</p> <p>Meaning of the displays: "F 2" = Input Test "1" = Port 1 (IC 9) "6" = Bit 6 (Key Switch) "0" = Switch Status 0 (closed)</p> <p>Instructions: The accuracy of the inputs from the keyboard can be checked due to the entry connections simply by selecting a title!</p> |
| Terminate test. | Enter "C" 1, display "P60" or actuate cabinet switch, the phonograph returns to the normal program. |

1.5.3. Continuous Run 1



The machine is switched to continuous run. Now every CD is played continuously for 16 sec. beginning with the first selection. All errors of the CD changer or CD player are registered.
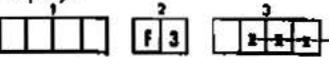
| | |
|------------------|--|
| Continuous Run 1 | <p>Enter "3" and "H", Display 2 "F3". After that select the CD with which to begin. Display:</p>  <p>Number of errors</p> |
| Terminate test. | Actuate housing switch. |

1.5.4. Continuous Run 2
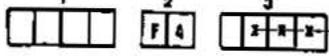
| | |
|--|--|
| The machine is switched to continuous run. All selected titles are played for 16 sec. All errors of the CD changer or player are registered. | |
| Continuous Test 2 | Enter "4" and "H", Display 2 "F4". The select any title. Displays:  Number of errors |
| Terminate test. | Actuate housing switch. |

1.5.5. CD changer Test
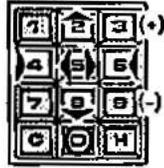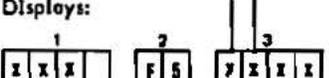
| All functions of the changer can be tested individually. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|---|-------|----------|---|-----------------------|---|--------------|---|----------------|---|-----------|---|------------|---|---------------|---|-----------------------------|------|-----------------------------------|------|-------------------------------------|----------------------|-------|-------------------|-------|-----------------|-------|--------------------|-------|----------------|-------|
| CD changer test | <p>Enter "5" and "H", Display 2 "F 5".</p> <table border="1"> <thead> <tr> <th>Input</th> <th>Function</th> </tr> </thead> <tbody> <tr><td>1</td><td>CD-Player, Start/Stop</td></tr> <tr><td>2</td><td>Lift upwardw</td></tr> <tr><td>8</td><td>Lift downwards</td></tr> <tr><td>4</td><td>Grip left</td></tr> <tr><td>6</td><td>Grip right</td></tr> <tr><td>5</td><td>Return holder</td></tr> <tr><td>0</td><td>Stop lift at magazine space</td></tr> <tr><td>3 *)</td><td>Motor steps, upwards (per 0,5 mm)</td></tr> <tr><td>9 *)</td><td>Motor steps, downwards (per 0,5 mm)</td></tr> </tbody> </table> <p>Keep in mind the code numbers for the individual changer functions as per the following keyboard illustration:</p>  <p>The time in sec. during which the lift position is held. The lift position is held after every function for 2 sec., by touching "0" for 10 sec.</p> <p>Displays: </p> <table border="0"> <tr> <td>OPTO stepper control</td> <td>OPSTP</td> </tr> <tr> <td>OPTO end position</td> <td>OPEND</td> </tr> <tr> <td>OPTO grip right</td> <td>OPGRR</td> </tr> <tr> <td>OPTO pickup center</td> <td>OPPUM</td> </tr> <tr> <td>OPTO grip left</td> <td>OPGRL</td> </tr> </table> <p>Meaning of displays: OPTO lit up = "0", OPTO darkened = "1".</p> | Input | Function | 1 | CD-Player, Start/Stop | 2 | Lift upwardw | 8 | Lift downwards | 4 | Grip left | 6 | Grip right | 5 | Return holder | 0 | Stop lift at magazine space | 3 *) | Motor steps, upwards (per 0,5 mm) | 9 *) | Motor steps, downwards (per 0,5 mm) | OPTO stepper control | OPSTP | OPTO end position | OPEND | OPTO grip right | OPGRR | OPTO pickup center | OPPUM | OPTO grip left | OPGRL |
| Input | Function | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | CD-Player, Start/Stop | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | Lift upwardw | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 8 | Lift downwards | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | Grip left | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6 | Grip right | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 | Return holder | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Stop lift at magazine space | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 *) | Motor steps, upwards (per 0,5 mm) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 9 *) | Motor steps, downwards (per 0,5 mm) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OPTO stepper control | OPSTP | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OPTO end position | OPEND | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OPTO grip right | OPGRR | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OPTO pickup center | OPPUM | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OPTO grip left | OPGRL | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Terminate test. | Actuate housing switch. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

*) from Progr.-Index 004

1.5.6. Track selection of CD test records

| | | |
|-----|--|--|
| P61 | Track selection of CD test records (more than 15 tracks per record). | Select the required CD record and track number and press "H". e.g. 0123 - Disc 01, Track 23. The selected title will be stored and played after returning to play mode. |
|-----|--|--|

1.5.7. Read-out of errors

| | | |
|-----|---|--|
| P62 | Error code of last error (see descr. error displays). | Enter "0". (Is automatically switched on). |
| | Error code of previous errors (see descr. error displays). | Advance with key "1". Up to max. 10 errors. |
| | At error code 6x no. of CD at which error occurred. At error code 9x no. of cover at which error occurred. | Enter "2". |
| | Time since power on or start of test P60/3 or P60/4 when error occurs. | Enter "3". Display in hrs., min. |
| | Cancellation of stored error code. | Enter "4", "1" and "H". |

UNIT DESCRIPTION

CONTROL UNIT

FOR NSM-PHONOGRAPHS

ES IV-CD TECHNOLOGY

4

NSM

Aktiengesellschaft
Saarlandstraße 24D
6530 Bingen am Rhein
Telefon: 067 21 / 407-0
Telefax: 067 21 / 407 510

PART-No -
209 821 I

INDEX

1. FUNCTION
- 1.1. Control unit
- 1.2. Processor
- 1.3. Reset
- 1.4. Low voltage recognition and power off
- 1.5. I/O (input/output)
- 1.6. Output enable
- 1.7. Service plug

Spare parts list

Schematics CONTROL UNIT CD

1. FUNCTION

1.1. CONTROL UNIT

The heart of the control and credit unit is a microprocessor from the proven Rockwell 6500 family. All unit functions such as keyboard, display, remote control, carriage (light generator / organ), coin mechanism, title indication etc. are controlled by this unit.

Different types of malfunctions are recognized and reported as such on the display. All statistical data such as phonograph status, price adjustments and bookkeeping data are stored in the CONTROL UNIT. These as well as credits remaining are stored when the power is switched off.

Connection of the NSM DATA PRINT is provided at Plug 11.

A number of service programs allow the read-out of statistical data, individual as well as test programs.

1.2. Processor

The processor consists primarily of the microprocessor IC 1, the EPROM IC 2, the battery RAM IC 3 and the I/O component IC 4. Address coding occurs via IC 12.

The tact generator consists of a quartz oscillator with Q 1 (4 MHz) and the frequency divider (1:4) IC 14.

1.3. Reset

The Zener diode ZD 2 with transistors T 1 and T 2 serves to activate the reset when U (+ 5 V) is less than 4,6 V. Transistor T 2 with its antenna connection serves to recognize static discharges and interferences.

When T 2/C is LOW, reset is activated via IC 16, Pin 10, Pin 11. If T 2/C is HIGH, reset remains stored for approx. 200 msec. over the subsequent monoflop 1/2 IC 13 with timing components R 14, C 19 via IC 16, Pin 9.

1.4. Low Voltage Recognition and Power Off

Resistors R 15, R 16, R 18 form a voltage divider for low voltage recognition.

R 17 and D 6 generate a hysteresis when the voltage rises again. The positive edges (10 msec. at 50 Hz, 8.3 msec. at 60 Hz) coming from T 3/C retrigger the monoflop 1/2 IC 13 with timing components R 20, C 20 (approx. 20 msec.) and IC 13, Pin 4 at LOW. This signal is monitored by the processor via IC 4, Pin 6. When IC 4, Pin 6 is HIGH, the program is prematurely deactivated.

1.5. I/O (Input/Output)

All I/O operations are controlled via a serial bi-directional interface (IC 4, Pin 18 = CLOCK; IC 4, Pin 19 = DATA). IC 18 selects the different input channels; IC 11 decodes the load impulses for the output channels.

Output: IC 5 and IC 6 are output ports.

Resistors R 22-40 together make two D/A converters. The DC signals obtained thereby control the volume and are conducted to the amplifiers via plugs ST 2, Pin 2, Pin 3.

Input: IC 8 and IC 9 are input ports.

The resistors, in sequence to the input pins, protect the CMOS components.

Serial interfaces are available:

At ST 3 for control of the light generator

At ST 4 for display and keyboard

At ST 8 for control of CD changer

At ST 10 for control of Title Indication.

1.6. Output - Enable

A clock signal is sent by IC 4, Pin 5. Capacitor IC 26 is charged and keeps IC 15, Pin 8 at LOW.

If the clock signal does not occur, IC 15, Pin 14 is LOW and OE of IC 5 and IC 6 is inactive (outputs in tree state).


OE also become inactive via D 1 when reset (IC 16, Pin 11) becomes LOW.

1.7. Service Plug

Plug ST 11 serves to connect with the NSM DATA PRINT.

CONTROL UNIT CO

NSM

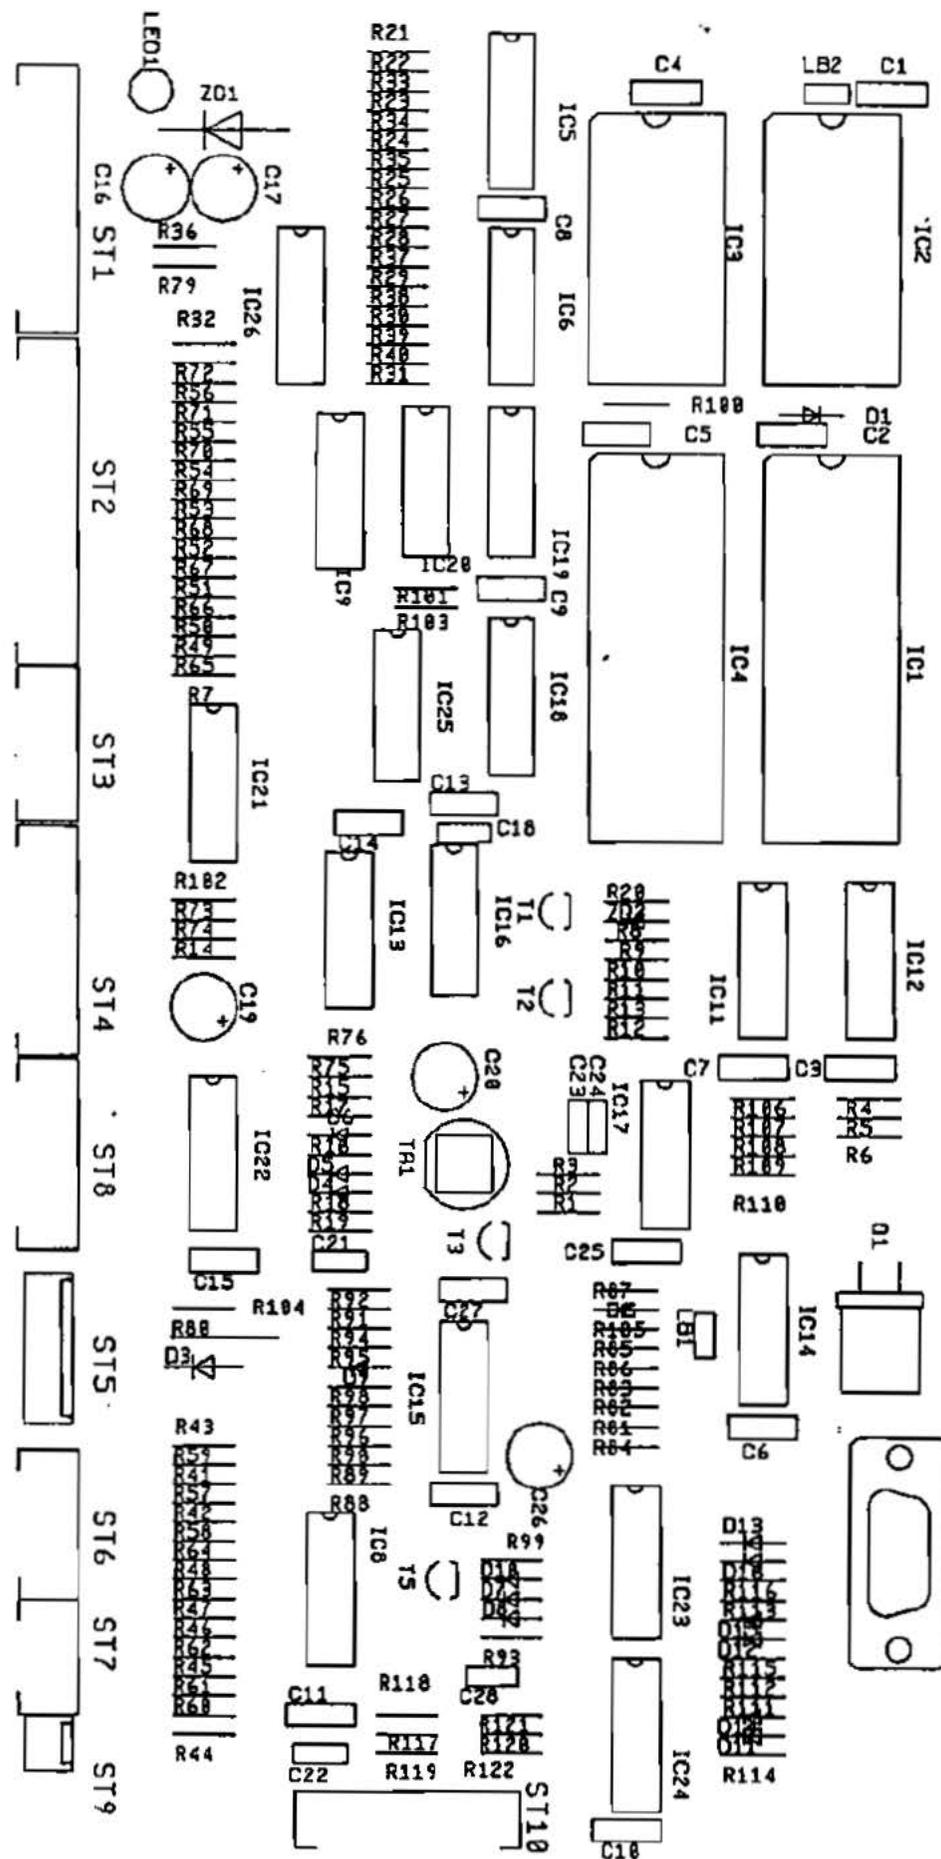

SPARE PARTS LIST


| POS. | PART-No | DESCRIPTION | DATA | QTY |
|-------------|---------|---------------------------------|-----------------|-----|
| | 174 873 | <u>CB-CONTROL UNIT CD, ASSY</u> | | 1 |
| ST 07 | 225 651 | PIN PANEL | 4 prongs | 1 |
| ST 03, 06 | 225 652 | PIN PANEL | 6 prongs | 2 |
| ST 08 | 225 653 | PIN PANEL | 8 prongs | 1 |
| ST 04 | 225 654 | PIN PANEL | 10 prongs | 1 |
| ST 01 | 225 655 | PIN PANEL | 12 prongs | 1 |
| ST 02 | 225 656 | PIN PANEL | 15 prongs | 1 |
| ST 09 | 225 439 | PIN PLUG | 3 prongs | 1 |
| ST 05 | 225 444 | PIN PLUG | 8 prongs | 1 |
| ST 11 | 225 828 | D-SUBMINIATUR-CONNECTOR | SLEEVE 9 prongs | 1 |
| Q 1 | 221 535 | OSCILLATOR QUARTS | 4 MHz | 1 |
| IC 3 | 222 446 | IC-SOCKET | 24 prongs | 1 |
| | 231 423 | IC-MEMORY | MK 48 Z 12-20 | |
| IC 2 | 222 447 | IC-SOCKET | 28 prongs | 1 |
| | 175 102 | IC-MEMORY | AM 27 256 DC | |
| IC 1, 4 | 222 448 | IC-SOCKET | 40 prongs | 2 |
| IC 1 | 231 413 | IC-MICROCOMPUTER | R 65 C 02 - P 2 | 1 |
| IC 4 | 231 415 | IC-MICROCOMPUTER | R 65 C 22 - P 2 | 1 |
| IC 8, 9 | 221 763 | IC-CMOS | HEF 4021 B | 2 |
| IC 5, 6 | 221 771 | IC-CMOS | HEF 4094 B | 2 |
| IC 21-23 | 221 541 | IC-CMOS | F 4049 BC | 3 |
| IC 16 | 221 665 | IC-TTL | SN 74 LS 00 | 1 |
| IC 19 | 221 525 | IC-TTL | SN 74 LS 03 | 1 |
| IC 17 | 221 652 | IC-TTL | SN 74 LS 04 | 1 |
| IC 14, 20 | 221 705 | IC-TTL | SN 74 LS 74 A | 2 |
| IC 13 | 221 792 | IC-TTL | SN 74 LS 123 | 1 |
| IC 12 | 221 653 | IC-TTL | SN 74 LS 139 | 1 |
| IC 18 | 221 852 | IC-TTL | SN 74 LS 151 | 1 |
| IC 11 | 221 796 | IC-TTL | SN 74 LS 138 | 1 |
| IC 15 | 221 813 | IC-LINEAR | LM 339 | 1 |
| IC 26 | 221 497 | IC-LINEAR | ULN 2003 A | 1 |
| D 3 | 221 115 | SI-DIODE | 1 N 4004 | 1 |
| D1,2,4-16 | 221 114 | SI-DIODE | 1 N 4148 | 16 |
| ZD 1 | 221 539 | TRANZORB DIODE | IC TE-5 | 1 |
| ZD 2 | 221 948 | ZENER-DIODE | ZPD 3,9 | 1 |
| LED 1 | 221 466 | LIGHT EMITTING DIODE | LR 3160-F | 1 |
| T 1, 2 | 221 757 | TRANSISTOR | BC 547 B | 2 |
| T 3, 5 | 221 283 | TRANSISTOR | BC 212 B | 2 |
| C 22 | 220 181 | CER.-CAPACITOR | 47 pF | 1 |
| C 23 | 220 242 | CER.-CAPACITOR | 68 pF | 1 |
| C 24 | 220 185 | CER.-CAPACITOR | 270 pF | 1 |
| C 18, 28 | 220 263 | CER.-CAPACITOR | 1000 pF | 2 |
| C 21 | 220 341 | CER.-CAPACITOR | 4700 pF | 1 |
| C1-15,25,27 | 220 334 | MKT-CAPACITOR | 0,1 µF 63 V | 17 |
| C19,20,26 | 220 159 | LYTIC | 4,7 µF 63 V | 3 |
| C 17 | 220 162 | LYTIC | 10 µF 63 V | 1 |
| C 16 | 220 160 | LYTIC | 100 µF 10 V | 1 |

SPARE PARTS LIST

| POS. | PART-№ | DESCRIPTION | DATA | QTY |
|--|---------|-------------|----------------|-----|
| R8,9,116 | 221 600 | RESISTOR | 100 OHM 1/4 W | 3 |
| R12,19,79 | 221 099 | RESISTOR | 470 OHM 1/4 W | 3 |
| R 93 | 221 622 | RESISTOR | 820 OHM 1/4 W | 1 |
| R10,87 | 221 029 | RESISTOR | 1 KOHM 1/4 W | 1 |
| R 13 | 221 031 | RESISTOR | 2,2 KOHM 1/4 W | 1 |
| R2-6,102-104, 106-110 | 221 033 | RESISTOR | 3,3 KOHM 1/4 W | 13 |
| R84,88,89,94, 100,101,105, 113 | 221 034 | RESISTOR | 4,7 KOHM 1/4 W | 8 |
| R 1, 15 | 221 172 | RESISTOR | 8,2 KOHM 1/4 W | 2 |
| R11,18,20,47,74, 76,82,83,90-92, 111,112,114,115 | 221 035 | RESISTOR | 10 KOHM 1/4 W | 16 |
| R16,21,27,33- 40,73,75,85 | 221 604 | RESISTOR | 22 KOHM 1/4 W | 14 |
| R 17 | 221 601 | RESISTOR | 27 KOHM 1/4 W | 1 |
| R22-26,28-32, 41-72,98,99 | 221 038 | RESISTOR | 47 KOHM 1/4 W | 44 |
| R14,81,86,95 | 221 048 | RESISTOR | 100 KOHM 1/4 W | 4 |
| R 80 | 221 273 | RESISTOR | 10 OHM 1/2 W | 1 |

Fernwahlschloß
CONNECTION REMOTE SELECTION WALLBOX

SERVICE-Auswertung
EVALUATION OF SERVICE PROGRAMS

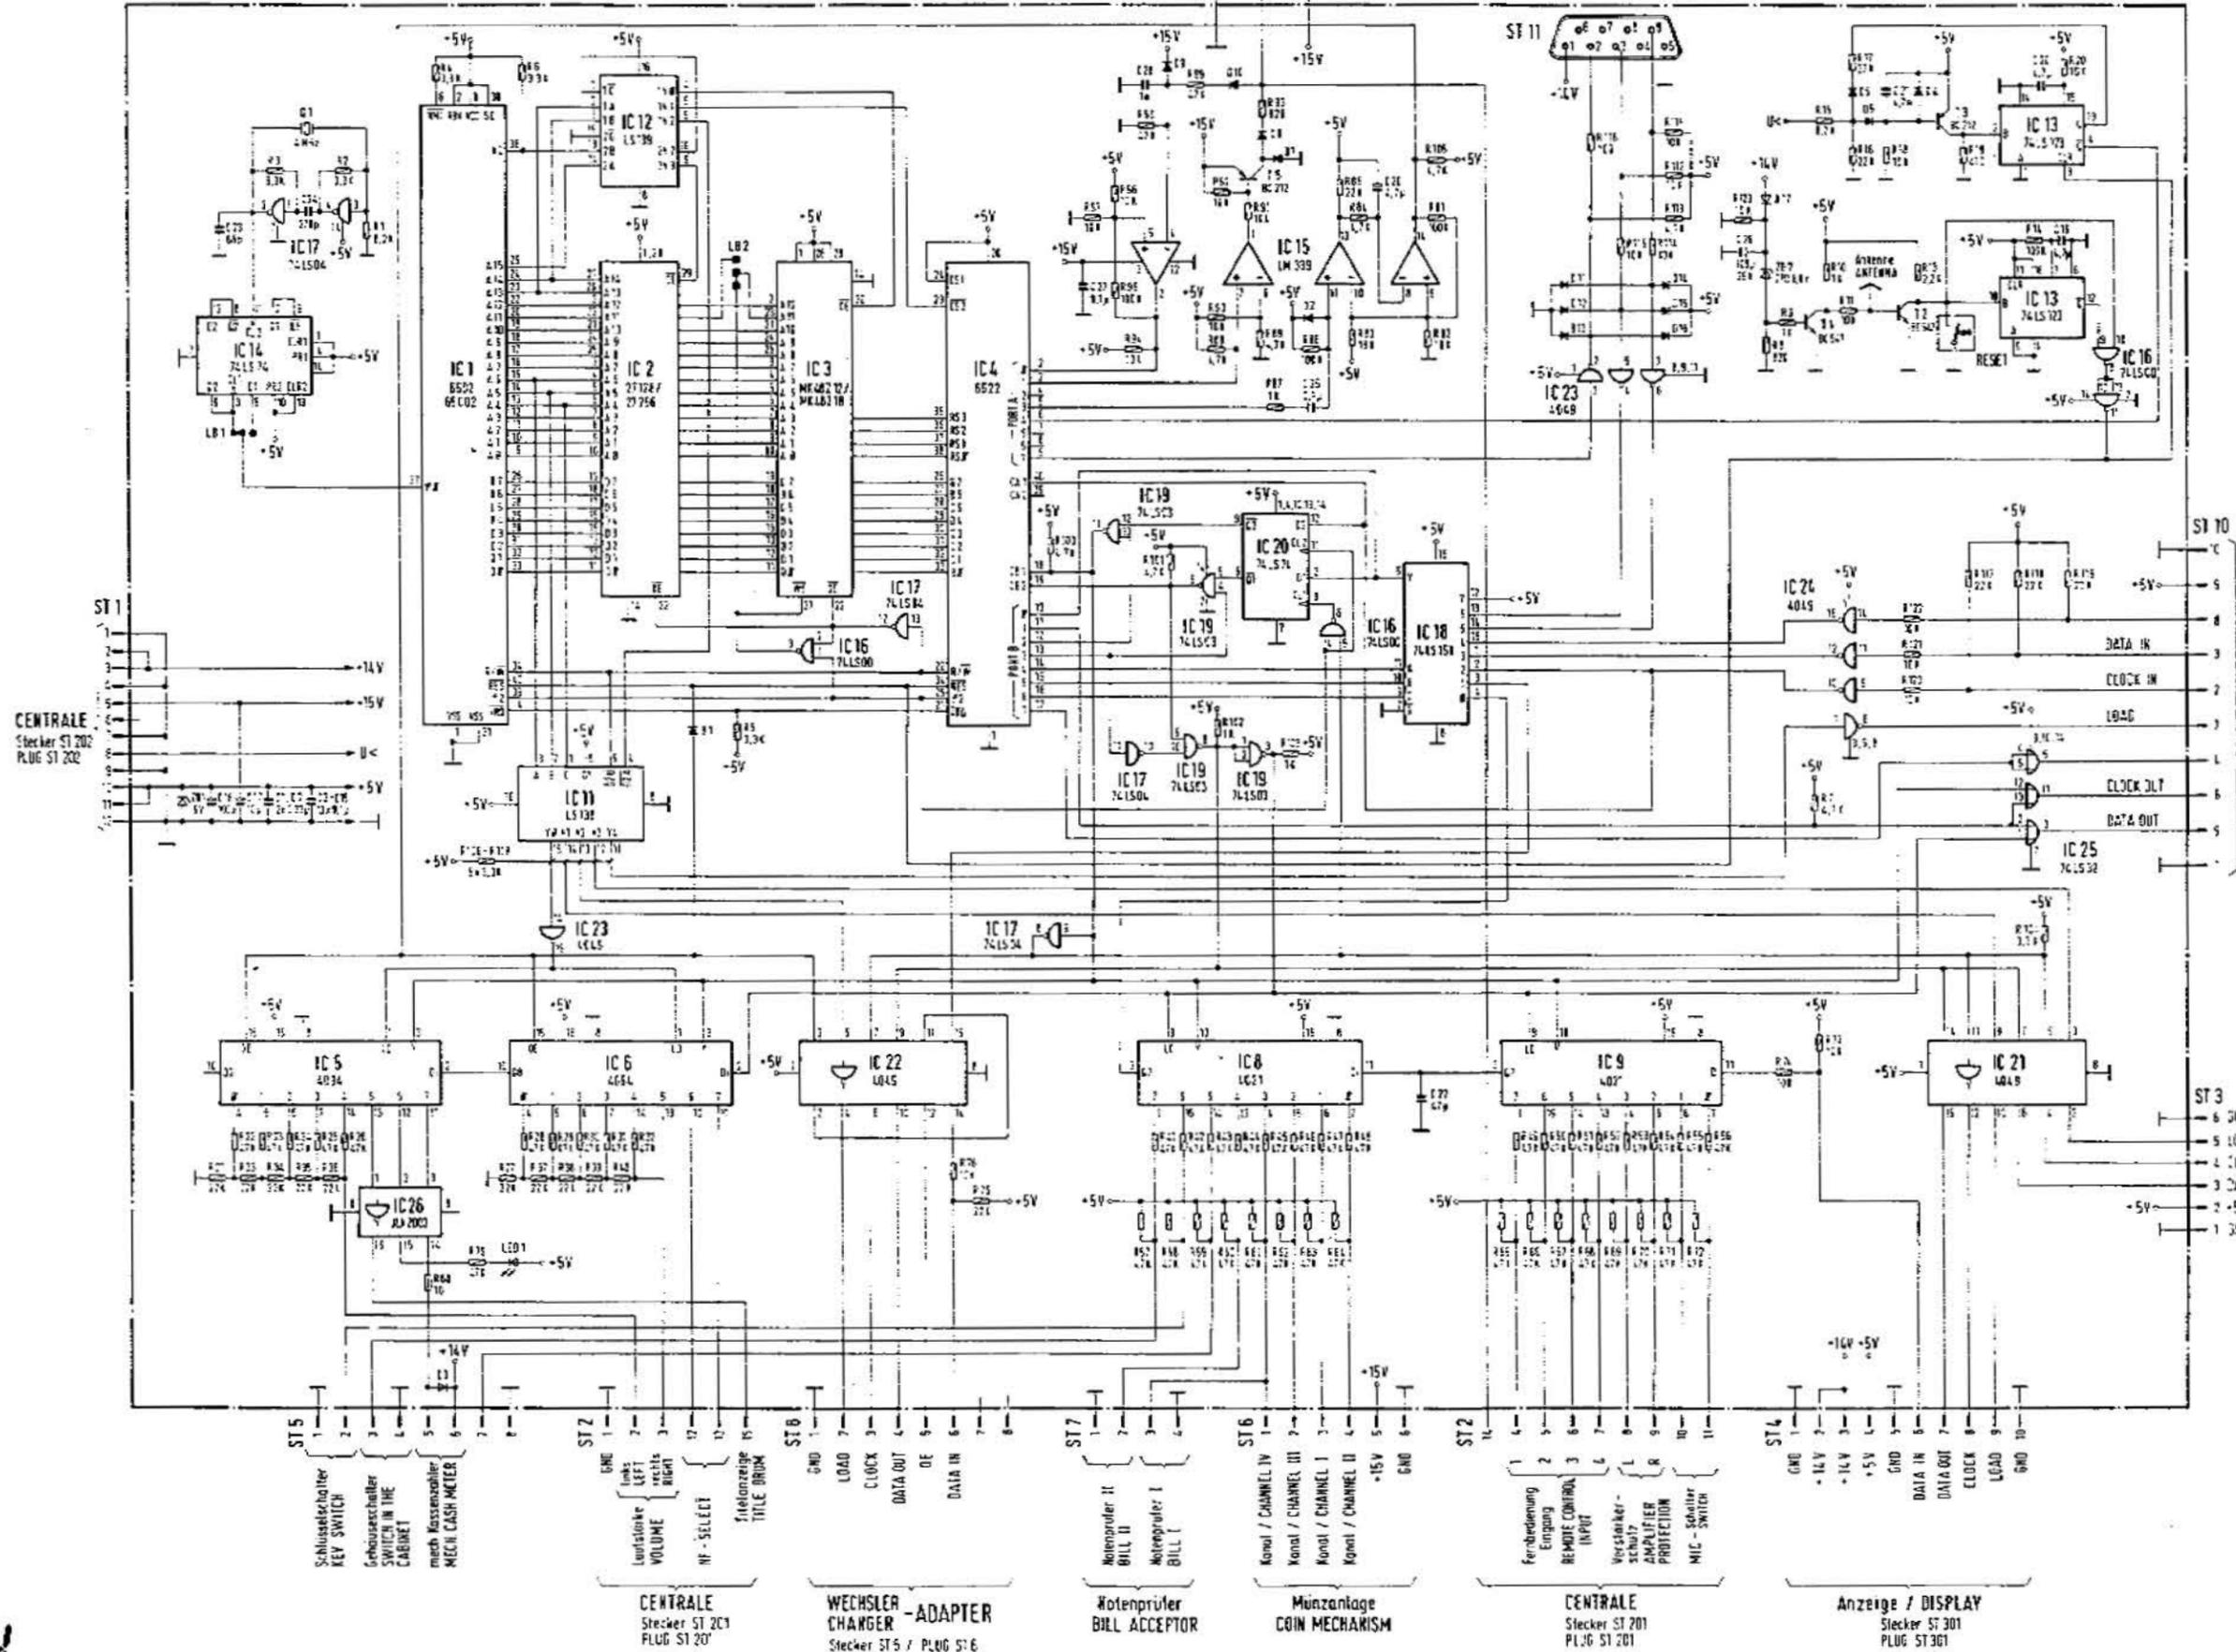

Titelanzeige II
TITLE INDICATOR II
Stecker ST 1
PLUG ST 1

Lichtspiel
LIGHT GENERATOR / ORGAN
Stecker ST 20
PLUG ST 20

MUSIKAUTOMATEN
PHONOGRAPHS **ES IV-CD** TECHNOLOGY

Schaltbild
WIRING DIAGRAM **CONTROL UNIT CD**

12 05 33 Broun

209 803 A

4

UNIT DESCRIPTION

DISPLAY / KEYBOARD

FOR NSM-PHONOGRAPHS

ES IV-CO TECHNOLOGY



NSM
APPARATEBAU
GmbH & Co. KG
6530 Bingen
Saarlandstraße 2-40
Telefon 067 21/4070

PART-No-
209 822

INDEX

- 1. FUNCTION
- 1.1. Display
- 1.2. Keyboard

Spare parts list

1. FUNCTION

1.1. Display

The shift registers IC 301 through IC 303 are the output ports for the display control.

The display is operated in the multiplex mode.

The segment information is prepared for one digit with IC 302 and IC 303 via drivers IC 308 and IC 309.

The transistors T 303 through T 305 are controlled by IC 307 via IC 301 and switch on the appropriate multiplex level for 4 milliseconds.

Resistors R 332 to R 345 determine the segment current.

Lamps L 1 to L 5 are controlled statically via IC 307, Pin 12 and 14 and IC 306, Pin 19, 11, 12.

Resistors R 325 to R 329 limit the transient current.

The load signal for the output shift registers is monitored by circuit IC 306, Pin 4 and 13, R 306, C 303, D 301.

During the duration of the load signal the display is dark.

C 303 is discharged via D 301 and IC 306, Pin 13.

OE of IC 301 to IC 303 becomes LOW and thereby inactive.

If no load signal occurs, OE becomes inactive via R 305.

Capacitor C 302 avoids lighting up of the digits after switching on.


1.2. Keyboard


IC 301 is an input port for the keyboard which is connected to plug St 302.

The circuit with diodes D 302 - D 307 and transistors T 306, T 307 codes the keyboard matrix to a 4-bit signal combination.

SPARE PARTS LIST

| PDS | PART-No | DESCRIPTION | DATA | QTY |
|---|---------|--------------------------------|----------------|-----|
| | 173 664 | CIRCUIT BOARD-DISPLAY CD, ASSY | | 1 |
| ST 302 | 225 663 | PIN PANEL | 8 PRONGS 90° | 1 |
| ST 301 | 225 664 | PIN PANEL | 10 PRONGS 90° | 1 |
| AZ 1-8 | 231 416 | DISPLAY | TD SL 5150 | 10 |
| | 173 384 | TUBUS | | 1 |
| | 171 629 | HOLDER | | 4 |
| IC 310 | 221 573 | IC-VOLTAGE | 12 V 1 A | 1 |
| IC 301-303 | 221 771 | IC-CMOS | HEF 4094 B | 3 |
| IC 304 | 221 763 | IC-CMOS | HEF 4021 B | 1 |
| IC 306-309 | 221 497 | IC-LINEAR | ULN 2003 A | 4 |
| D 301-307 | 221 114 | SI-DIODE | 1 N 4148 | 7 |
| ZD 301 | 231 079 | ZENER-DIODE | ZPD 4,7 | 1 |
| T 301-305 | 231 240 | SI-TRANSISTOR | BC 636 F | 5 |
| T 306, 307 | 221 283 | SI-TRANSISTOR | BC 212 B | 2 |
| C 303-307 | 220 334 | MKT-CAPACITOR | 0,1 µF 63 V | 5 |
| C 308, 309 | 220 332 | MKT-CAPACITOR | 0,33 µF 63 V | 2 |
| C 302 | 220 249 | LYTIC | 1 µF 63 V | 1 |
| C 301 | 220 162 | LYTIC | 10 µF 63 V | 1 |
| R 301 | 221 611 | RESISTOR | 10 OHM 1/4 W | 1 |
| R 306,332-350 | 221 627 | RESISTOR | 1,2 KOHM 1/4 W | 20 |
| R 302-304,307-309, 314-317,319-323,354 | 221 033 | RESISTOR | 3,3 KOHM 1/4 W | 16 |
| R 310-313 | 221 038 | RESISTOR | 47 KOHM 1/4 W | 4 |
| R 305 | 221 009 | RESISTOR | 1 MOHM 1/4 W | 1 |
| R 325-329 | 231 366 | MET.-RESISTOR | 10 OHM 1/4 W | 5 |
| | 173 900 | KEY BOARD, ASSY | | 1 |

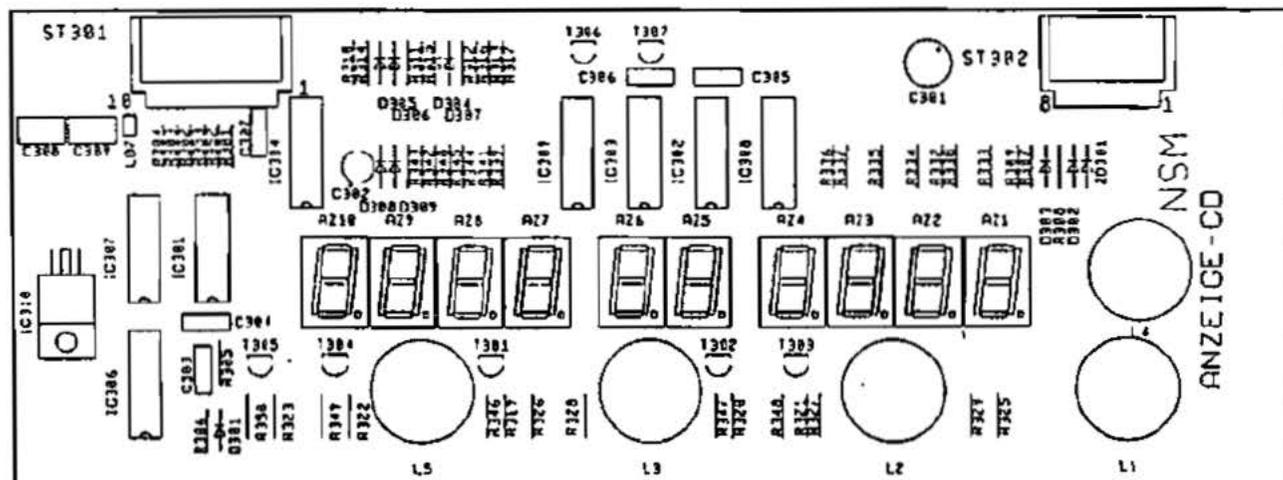


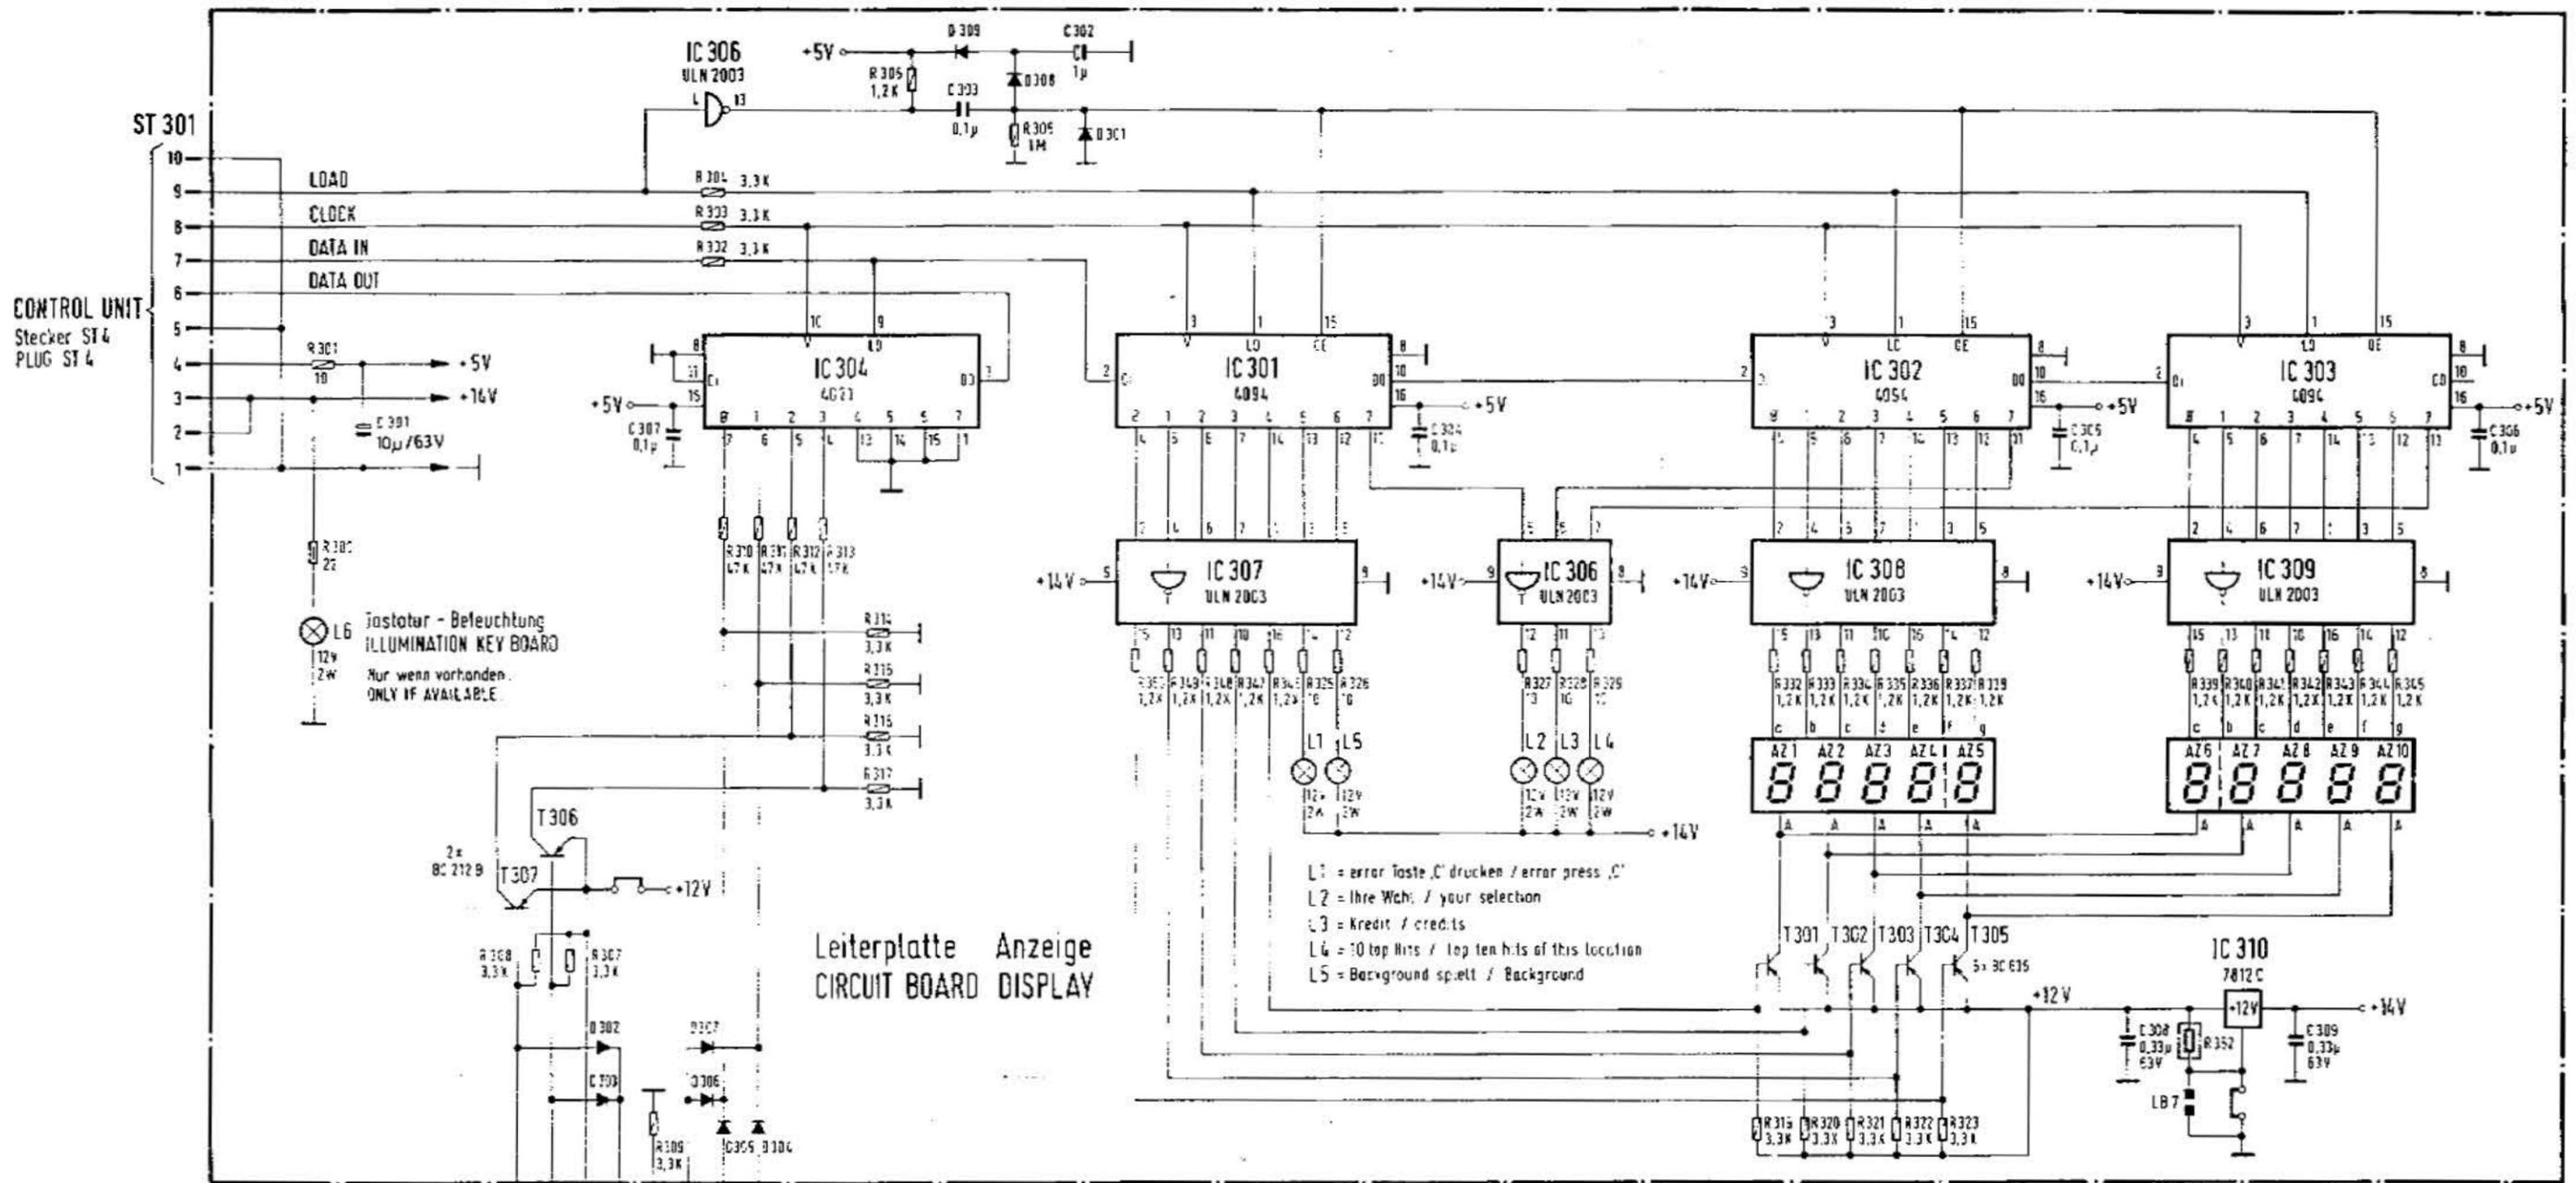

Taster - Beleuchtung
 ILLUMINATION KEY BOARD
 Nur wenn vorhanden.
 ONLY IF AVAILABLE.


Leiterplatte Anzeige
CIRCUIT BOARD DISPLAY

- L1 = error taste / C drücken / error press / C'
- L2 = Ihre Wahl / your selection
- L3 = Kredit / credits
- L4 = 10 top hits / top ten hits of this location
- L5 = Background spielt / Background

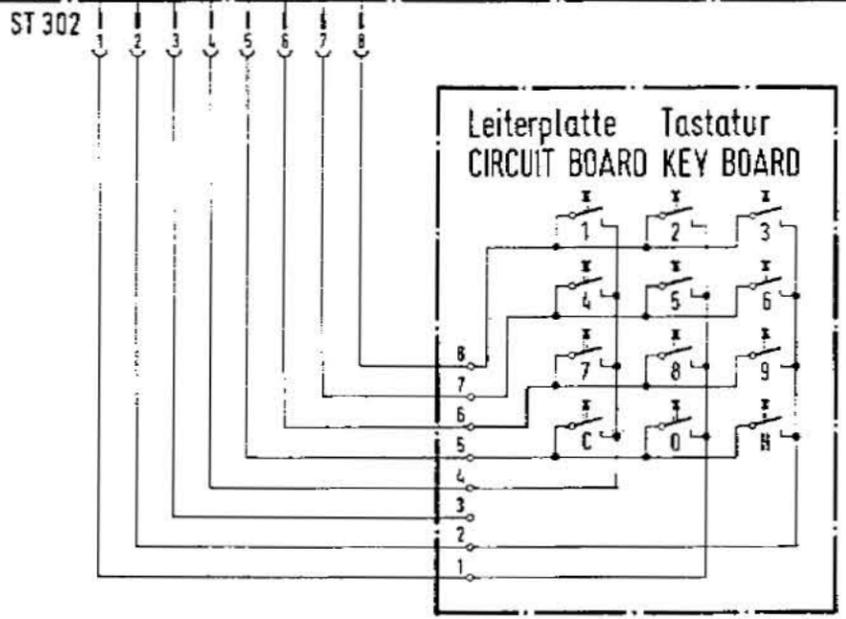

Leiterplatte Tastatur
CIRCUIT BOARD KEY BOARD



Draufsicht: Display
 TOP VIEW: DISPLAY

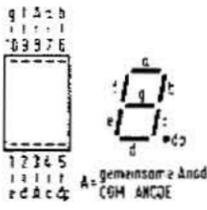

Draufsicht: Spannungsregler IC 310
 TOP VIEW: VOLTAGE REGULATOR IC 310



von unten gesehen
 BOTTOM VIEW

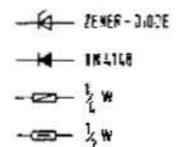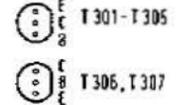

gerasterte Bauteile sind nicht eingebaut!
 DOTTED COMPONENTS ARE NOT INSTALLED!

ÄNDERUNGEN IM SINNE DES TECHN. FORTSCHRITTES VORBEHALTEN,
 JEDOCH KEINE NACHRÜSTPFLICHT!
 SUBJECT TO TECHNICAL MODIFICATION WITHOUT OBLIGATION
 TO MODIFY EQUIPMENT ALREADY DELIVERED!

MUSIKAUTOMATEN
 PHONOGRAPHS **ES IV-CD** TECHNOLOGY

Schaltbild Anzeige / Tastatur
 WIRING DIAGRAM DISPLAY / KEY BOARD

1st DL DT 99 Ger Braun Rev3 Weyl Gp1 Mann

804/209 822

UNIT DESCRIPTION

CENTRAL UNIT

FOR NSM-PHONOGRAPHS

ES IV-CD TECHNOLOGY

NSM

Aktiengesellschaft

6530 Bingen am Rhein
Telefon: 06721/407-0
Telefax: 06721/407 510

PART-№
209 623

6

Index

1. FUNCTION
 - 1.1. Power supply
 - 1.2. Amplifier
 - 1.3. Signal path
 - 1.4. Adjustment of controls
 - 1.5. MIC socket, microphone connection
 - 1.6. TB socket
 - 1.6.1. Tape recorder connection
 - 1.6.2. Connection of auxiliary amplifier
2. Adjustment instructions for trimmer of central unit and output stage
3. Repair aid
 - 3.1. Output stage
 - 3.2. Control of volume and muting
 - 3.3. Tracing sound signal

1. Function

The power supply, fan controls, stereo amplifier with inputs for microphone, CD and tape are all integrated on one circuit board. The output stages and the fan are connected to the central unit via ST 209, ST 210, ST 211. The music power per channel is 200 watts when matched to a loudspeaker impedance of 2 ohms.

1.1. Power Supply

The power transformer supplies 22 V, 2 x 11,5 V and 2 x 43 V from three separate secondary coils. The supply voltage for the output stages is supplied with 2 x 43 V by a two-way rectifier (D 206) and the center tap of the transformer.

The supply voltage for the voltage regulator VR 201, + 5 V is supplied with 2 x 11,5 V by a two-way rectifier (D 201/202) and the center tap on the transformer. The low voltage recognition is accomplished by D 204 and D 205. Fusing is accomplished with Si 201 and Si 202. Fusing for the output stage is accomplished with Si 204 and Si 205.

The non-controlled voltage +14 V for the display and key illumination is being picked up at capacitor C 201.

The control voltage of +15 Va, for the pickup driver, coin mechanism, control unit, remote control, luminous effects as well as the supply voltage for the preamplifier of +15 Vb, are supplied by the 22 V transformer coil and rectified by D 207 through 210 and VR 203. Fusing is accomplished by Si 203.

The LED's indicate the following supply voltages at the same intensity:

LED 201 = + 5 V

LED 202 = + 60 V

LED 203 = + 15 V a

LED 204 = + 15 V b

The TRIAC TIC 200 controls the output stage fan depending upon the operational state of the amplifier (REJECT); i.e. the fan only runs when the amplifier is not muted.

1.2 Amplifier

The stereo amplifier is equipped with two tone control IC's, one AF switch IC, 50 diodes and 17 transistors.

The output stage is designed without induction coils or transformers and is therefore ironless.

At full volume level the music power is 200 watts per channel.

1.3 Signal path

The input signal MIC goes to microphone amplifier T 230 and background mixer of TA, TR 231 to Pins 4 and 8 of IC 230. The TB input is connected to Pins 3 and 7. The CD input is connected to Pin 2 and Pin 6.

In the play mode the signal goes from Pin 2 to Pin 15 respectively through Pin 6 and Pin 9.

When the microphone switch is actuated, the signal goes from Pin 4 to Pin 15 or from Pin 8 to Pin 9.

In the tape mode (TB/Pin 6 to ground) the signal goes from Pin 3 to Pin 15 or Pin 7 to Pin 9 when the switch is actuated. In the MIC, CD or TB stage, muting is switched off regardless of the operating state of the phonograph. The stage "MIC" has priority switching.

From the AF switch (IC 230) the signal goes via an AVC (automatic volume control) T 250, T 251 at Pin 9 of the tone control IC 251 with associated bass booster. Treble control is accomplished with TR 252 and bass control with TR 253. The control voltage for the volume and muting is on Pin 5; approx. 2,5 V at full volume, approx. 0 V while muting.

The DC signal for the volume setting is supplied by the control unit.

Signal Output Pins 3 and 6 of IC 251 are routed through a network to the driver stage for the output stage.

The parallel complementary power Darlington transistors T 151 through T 154 in the output stage allow a minimum loudspeaker impedance of 2 ohms.

Quiescent current compensation and thermic stabilization is accomplished with T 150, the quiescent current setting with TR 250. The amplifier is equipped with three protective circuits against overload mismatching, thermic overload.

1) T 155 acts as a threshold switch for the electronic fuse. When the emitter current of the output transistors exceeds a certain value, T 252 is switched through by T 155 switching on the muting and thereby limiting the current.

2) The actuation of the electronic fuse at collector T 252 is controlled by the control unit.

When its fuse is tripped a number of times within a certain period, the volume is reduced automatically by one step each time until the electronic fuse is no longer activated.

3) The thermal switch on the heat sink switches off the power supply to the output stage when the heat sink temperature reaches approx. 90 C (cooling malfunctioning). LED 150 is dark. The switch-on point (following cooling down) is approx. 60 C (switch-on hysteresis).

The terminating impedance at the loudspeaker output should not be less than 2 ohms. In the case of mismatching (less than 2 ohms), or short-circuit in the loudspeaker cable, the limiting circuit is actuated.

The result is distorted sound reproduction or reduction of the volume. After elimination of the mismatch the amplifier is ready for operation and the volume can be readjusted.

The volume difference between the two channels is compensated at the factory by setting the levelling potentiometer TR 254.

1.4 Adjustment of Controls

TR 230 = microphone volume
TR 231 = music fade-in for microphone mode
TR 252 = treble control
TR 253 = bass control

TR 230 for setting the microphone amplifier:
This adjustment is dependent upon the position of the phonograph in relation to the microphone and required microphone volume. In case of feedback while paging, the control must be turned counterclockwise or the microphone be positioned in another direction to the speakers.

TR 231 for music fade-in in microphone mode:
There the desired music volume level during paging can be controlled.

TR 252 R and TR 252 L, treble controls, are to be set according according to the locations.
The maximum position is suggested in acoustically balanced rooms only.

TR 253 R and TR 253 L, bass controls, must also be set according to the locations and the desired bass reproduction.

1.5 MIC socket, Microphone Connection

A dynamic microphone with an impedance of 200 ohms - 600 ohms with switch for relay control can be used.

NSM option accessories:

| | |
|------------------|-------------------------------|
| Microphone | Order No. 224 223 |
| Connection cable | Order No. 171 880 (10 m long) |

1.6 TB Socket

1.6.1. Tape Recorder Connection

The TB socket allows the music from the phonograph to be recorded on a tape recorder as well as music from a tape recorder to be played by the phonograph.

The AF signal (analog signal) for recording with a tape recorder is on Contacts 1 and 4 and can be connected directly with a stereo diode cable; Contacts 2, 7 and 8 (8 is ground).

1.6.2. Connection of Auxiliary Amplifier

An auxiliary amplifier can be connected to the TB socket. The AF signal can be fed directly from the TB socket (Contacts 1 and 4) to the input of the amplifier with a stereo diode cable. The input sensitivity of the external amplifier should be 200 mV at a minimum input impedance of 47 K ohms.

Note: A stereo diode cable with a 5-pin plug is suitable for the above connections. In this plug Pin 1 must be connected to Pin 1; 3 to 3; etc.

The stereo recording cable is not suitable because in such cables Pin 1 is connected to 3 and 4 to 5 (crossed.)

2. Adjustment Instructions for Trimmer of Central Unit and Output Stage

TR 150 for quiescent current adjustment of the output stage: The quiescent current must be set to 40 mA + 5 mA. After replacement of the output transistor T 151 through T 154 a correction may be required.

Important! Muting is to be switched off for measuring and setting. The lift will be put in play position, the volume control is set at 0 and Si 150 or the thermal switch are replaced by an ampere meter.

TR 201 and TR 202 for adjustment of volume control voltage:

Maximum volume for regularly selected titles in program step P 28 must be programmed to "31" (full volume).

Take measurements at test points TP-L and TP-R to ground; nominal value = 2,6 V (factory setting).

The internal resistance of the measuring instrument must be greater than 1 M ohm!

After replacement of IC 251 a correction may be required.

TR 254 R and TR 254 L, level controls for adjustment of the total amplification: Set at factory to correspond to the output voltage of the CD player.

Muting must be switched off. Volume, treble and bass set to maximum.

The output voltage on the loudspeaker connection with a load of 4 ohms is approx. 10 V = 25 W power per channel, with the AVC at full level. At minimum impedance of 2 ohms the RMS output corresponds to 100 W RMS or 200 W music power at disc playing.

3. Repair Aid

Amplifier integrated in central unit ES IV

Malfunction: No sound, no output power:

It is assumed that LD 201 to LD 204 glow with the same intensity and that the power supply is therefore O.K., the CD is on the CD player being played, and normal volume was set in program step P28 to "31."

3.1. Output Stage

LD 150 on the output stage circuit board is dark. Malfunction probably located in the output stage; check Si 150 and replace if required. If the fuse blows again, the output transistors are defective.

Remove output stage unit, pull out cover plates on the bottom. Check for short-circuit on transistors T 151/T 152 and T 153/T 154 with ohmmeter. Since the transistors are connected in parallel, it is only possible to test them in pairs.

For individual testing one transistor must be unsoldered from the defective pair. After replacement of the defective transistors the quiescent current must be readjusted with TR 150 according to the adjustment instructions.

3.2. Control of Volume and Muting

In the play mode approx. 2,6 V must be measured on Pin 5 of IC 251 (for full volume).

If the voltage is near 0 V, T 252 or the control "volume L and R" from the computer must be checked (reject line).


3.3. Tracing Sound Signal

Trace the sound signal arriving at CD plug according to the table.

The point where the signal is missing is probably the cause of the malfunction.

| AF Signal Point | Cause of Malfunction When Signal Missing |
|-----------------------------------|--|
| C 237, C 238 | IC 230 |
| IC 251 L/R Pin 9 | T 250 / T 251 (AVC) |
| R 269 L/R (2,6 V at IC 251/Pin 5) | IC 251 L/R |
| T 255 L/R (collector) | T 253 L/R |

If the signal is there up to T 255, but no output signal arrives at the output stage, plug connectors ST 210/211 as well as the output stage have to be checked.

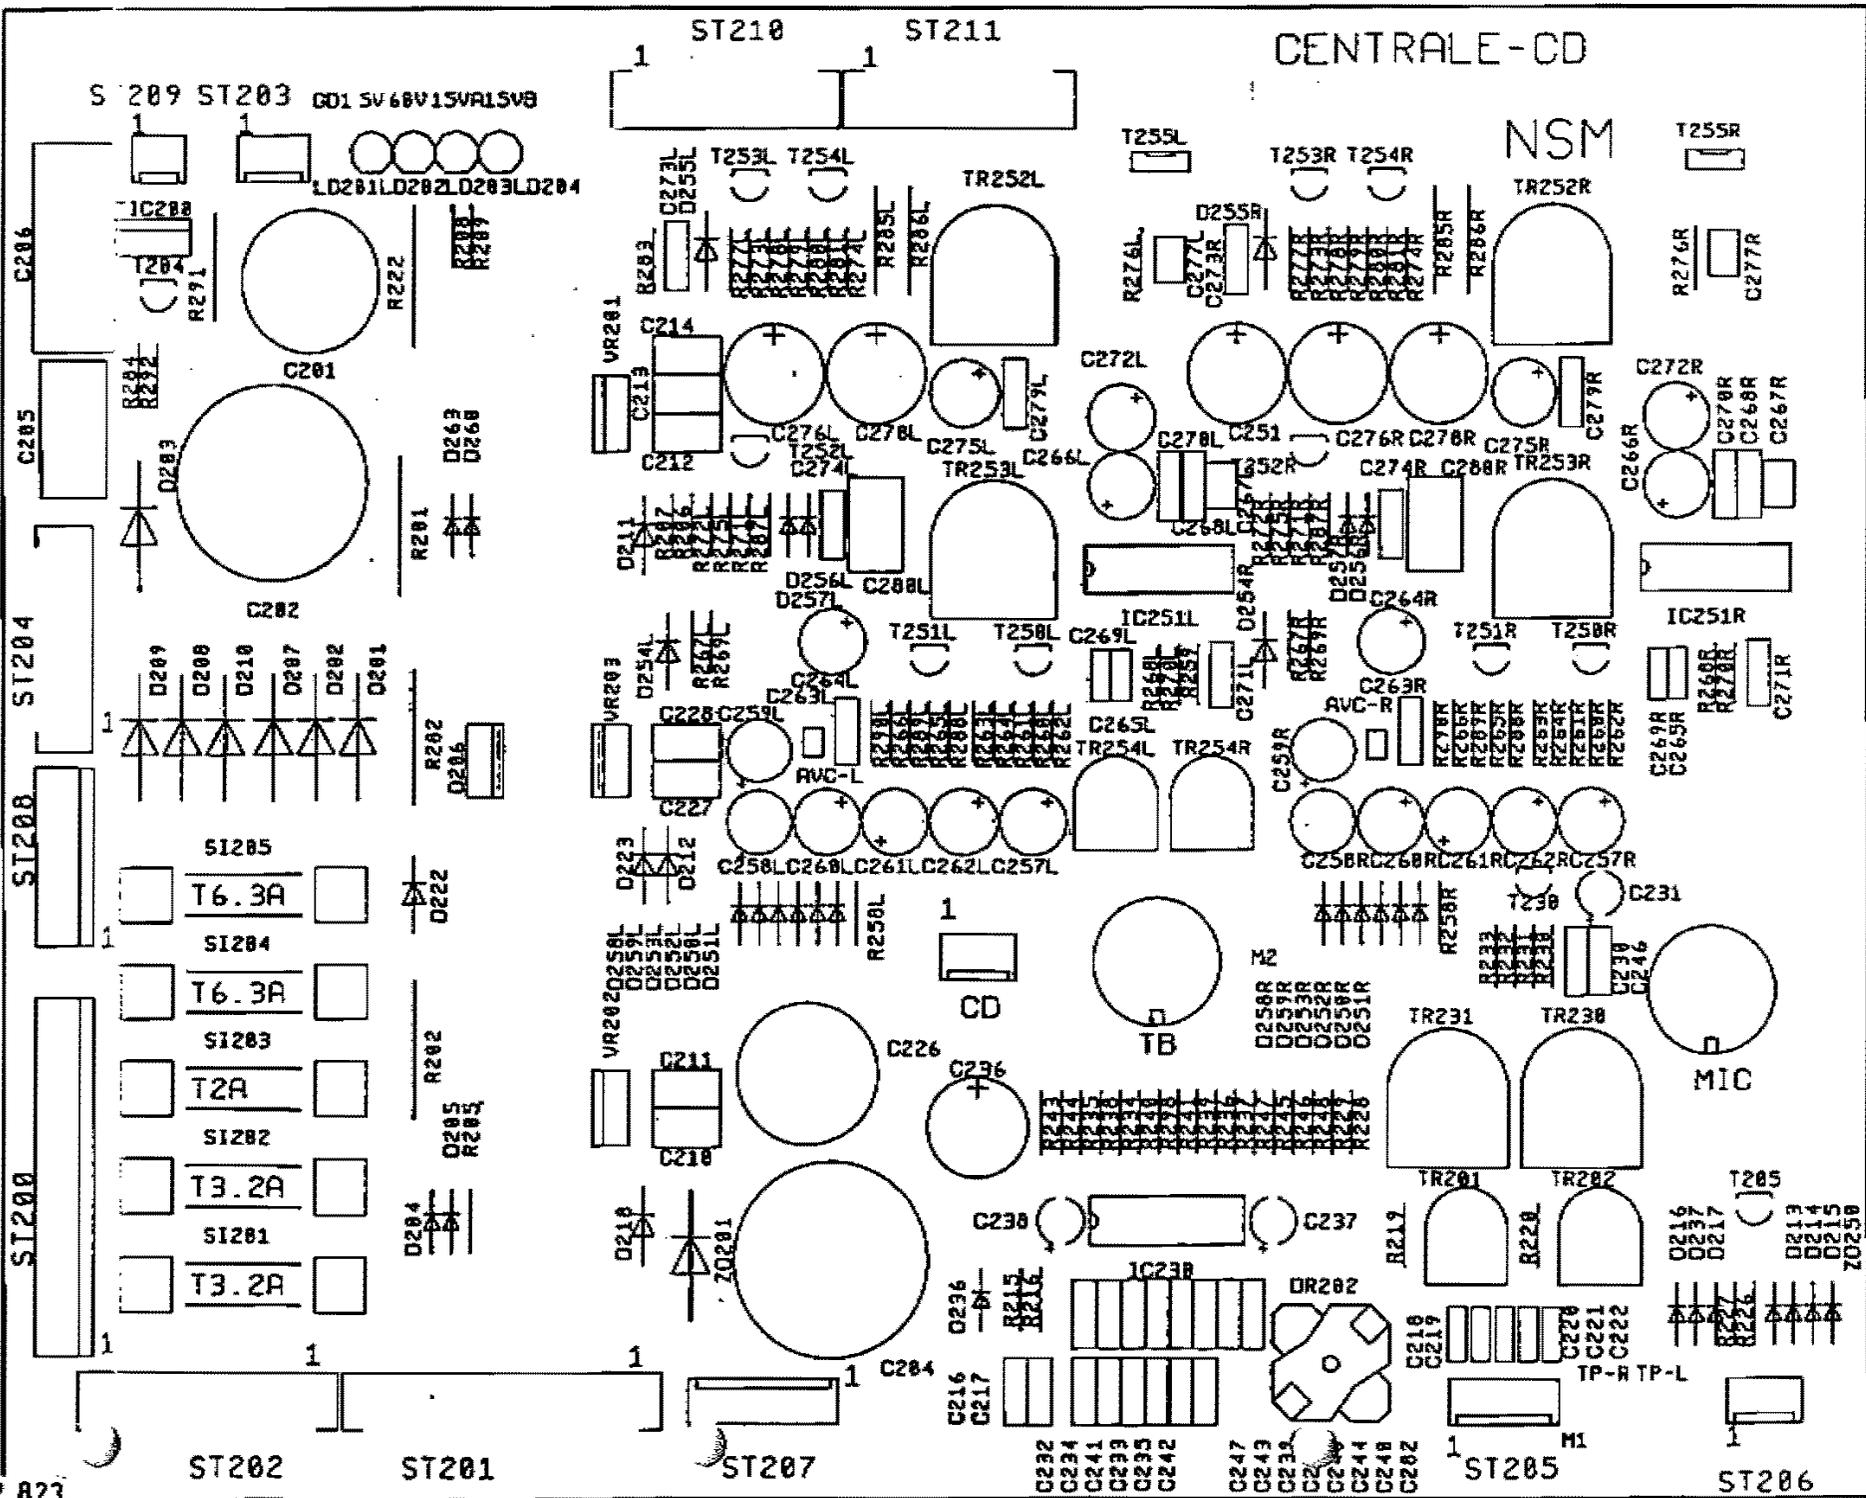

SPARE PARTS LIST

| POS. | PART-No | DESCRIPTION | DATA | QTY |
|-------------------------------------|---------|---------------------------|-------------------|-----|
| | 173 666 | <u>CENTRAL UNIT, ASSY</u> | 50/60 Hz | |
| SI 203 | 225 538 | FUSE | T 2,0 A | 1 |
| SI 201, 202 | 225 029 | FUSE | T 3,15 A | 2 |
| SI 204, 205 | 225 374 | FUSE | T 6,3 A | 2 |
| | | | by 50 Hz | |
| SI 203 | 225 220 | FUSE | T 2,0 A | 1 |
| SI 201, 202 | 225 225 | FUSE | T 3,2 A | 2 |
| SI 204, 205 | 225 218 | FUSE | T 6,25 A | 2 |
| | | | by 60 Hz | |
| | 173 730 | COOLING PLATE | | 1 |
| SI 201-205 | 225 689 | FUSE HOLDER | | 10 |
| | 173 698 | PROFILE, ASSY | | 2 |
| | 173 944 | SHIELDING COVER | | 1 |
| MIC | 225 244 | SOCKET | S 5 PRONGS | 1 |
| TB | 225 749 | SOCKET | Mab 8 SV | 1 |
| ST 209 | 225 439 | PIN PLUG | RM 2,5 3 PRONGS | 1 |
| ST203,206,CD | 225 418 | PIN PLUG | RM 2,5 4 PRONGS | 3 |
| ST 205 | 225 443 | PIN PLUG | RM 2,5 6 PRONGS | 1 |
| ST 208 | 225 804 | PIN PLUG | RM 3,96 6 PRONGS | 1 |
| ST 207 | 225 444 | PIN PLUG | RM 2,5 8 PRONGS | 1 |
| ST 200 | 225 807 | PIN PLUG | RM 3,96 12 PRONGS | 1 |
| ST204,210,211 | 225 654 | PIN PANEL | RM 2,5 10 PRONGS | 3 |
| ST 202 | 225 714 | PIN PANEL | RM 2,5 12 PRONGS | 1 |
| ST 201 | 225 656 | PIN PANEL | RM 2,5 15 PRONGS | 1 |
| VR 201 | 221 572 | IC-VOLTAGE | +5 V 1 A | 1 |
| VR202,203 | 221 476 | IC-VOLTAGE | +15 V 1,5 A | 2 |
| IC 230 | 231 236 | IC-LINEAR | TDA 1029 | 1 |
| IC 251 RL | 231 089 | IC-LINEAR | TDA 4290-2 | 2 |
| 201-203,207-210 | 221 463 | SI-DIODE | BY 251 | 7 |
| 211,212,218,222,23,254RL,255RL | 221 115 | SI-DIODE | 1 N 4004 | 9 |
| 205,213-217,36,257,251-253 RL,256RL | 221 114 | SI-DIODE | 1 N 4148 | 27 |
| D 206 | 231 202 | SI-DUO DIODE | BYV 32/100 | 1 |
| ZD 201 | 221 821 | TRANSZORB DIODE | TVS 515 | 1 |
| LD201-204 | 221 466 | LIGHT EMITTING DIODE | LR 3160-F | 4 |
| TIC 200 | 231 028 | TRIAC | TIC 206 D | 1 |
| T204,253RL | 221 459 | SI-TRANSISTOR | PNP BC 556 B | 3 |
| T230,250RL,251RL | 221 249 | SI-TRANSISTOR | NPN BC 550 B | 5 |
| T 255 RL | 221 488 | SI-TRANSISTOR | NPN BD 139-10 | 2 |
| T252RL,205 | 221 332 | SI-TRANSISTOR | NPN BC 337-16 | 3 |
| C 263 RL | 220 342 | CER.-CAPACITOR | 100 pF | 2 |
| C 277 RL | 220 185 | CER.-CAPACITOR | 270 pF | 2 |
| C 267 RL | 220 274 | CER.-CAPACITOR | 330 pF | 2 |
| C 241, 242 | 220 241 | CER.-CAPACITOR | 560 pF | 2 |
| C 246 | 220 263 | CER.-CAPACITOR | 1 nF | 1 |

SPARE PARTS LIST

| POS. | PART-No | DESCRIPTION | DATA | QTY |
|--|---------|---------------|----------------|-----|
| C 243, 244 | 220 240 | KT-CAPACITOR | 1,5 nF | 2 |
| C 269 RL | 220 401 | KT-CAPACITOR | 3,3 nF | 2 |
| C218-222,265 RL,279RL | 220 435 | KT-CAPACITOR | 4,7 nF | 9 |
| C 268 RL | 220 429 | MKT-CAPACITOR | 0,15 µF 100 V | 2 |
| C 270 RL | 220 335 | MKT-CAPACITOR | 0,022 µF 63 V | 2 |
| C216,217,230, 234,235,239, 240,271RL,273 RL,281,282 | 220 334 | MKT-CAPACITOR | 0,1 µF 63 V | 13 |
| C 274 RL | 220 333 | MKT-CAPACITOR | 0,22 µF 63 V | 2 |
| C210-214,227, 228,280RL | 220 332 | MKT-CAPACITOR | 0,33 µF 63 V | 9 |
| C 205 | 220 336 | MKT-CAPACITOR | 2,2 µF 63 V | 1 |
| C 206 | 220 460 | MKT-CAPACITOR | 3,3 µF 63 V | 1 |
| C258RL,259RL | 220 243 | TAN-CAPACITOR | SF 100 µF 3 V | 4 |
| C 260 RL | 200 249 | LYTIC | 1 µF 63 V | 2 |
| C231,237,238, 257RL,262RL, 264RL | 220 159 | LYTIC | 4,7 µF 63 V | 9 |
| C261RL,266RL, 275RL | 220 162 | LYTIC | 10 µF 63 V | 6 |
| C 272 RL | 220 389 | LYTIC | 47 µF 10 V | 2 |
| C276RL,278RL | 220 158 | LYTIC | 47 µF 40 V | 4 |
| C 236 | 220 160 | LYTIC | 100 µF 10 V | 1 |
| C 251 | 220 250 | LYTIC | 100 µF 25 V | 1 |
| C 226 | 220 289 | LYTIC | 1000 µF 40 V | 1 |
| C 201 | 220 283 | LYTIC | 2200 µF 25 V | 1 |
| C 202 | 220 286 | LYTIC | 4700 µF 25 V | 1 |
| C 204 | 220 287 | LYTIC | 4700 µF 40 V | 1 |
| R 276 RL | 221 095 | RESISTOR | 6,8 OHM 1/4 W | 2 |
| R259,279RL, 287 RL | 221 611 | RESISTOR | 10 OHM 1/4 W | 5 |
| R 206 | 221 620 | RESISTOR | 22 OHM 1/4 W | 1 |
| R 277 RL | 221 096 | RESISTOR | 56 OHM 1/4 W | 2 |
| R 270 RL | 221 600 | RESISTOR | 100 OHM 1/4 W | 2 |
| R 263 RL | 221 635 | RESISTOR | 180 OHM 1/4 W | 2 |
| R 264 RL | 221 614 | RESISTOR | 330 OHM 1/4 W | 2 |
| R 208 | 221 099 | RESISTOR | 470 OHM 1/4 W | 1 |
| R 267 RL | 221 622 | RESISTOR | 820 OHM 1/4 W | 2 |
| R205,207,269 RL,288RL | 221 029 | RESISTOR | 1 KOHM 1/4 W | 6 |
| R 275 RL | 221 030 | RESISTOR | 1,5 KOHM 1/4 W | 2 |
| R 209, 283 | 221 031 | RESISTOR | 2,2 KOHM 1/4 W | 2 |
| R 278 RL, 298 | 221 033 | RESISTOR | 3,3 KOHM 1/4 W | 3 |
| R 262 RL | 221 172 | RESISTOR | 8,2 KOHM 1/4 W | 2 |
| R266RL,226,284, 289RL,292 | 221 035 | RESISTOR | 10 KOHM 1/4 W | 7 |
| R 219, 220 | 221 501 | RESISTOR | 18 KOHM 1/4 W | 2 |
| R 268 RL, 227 | 221 604 | RESISTOR | 22 KOHM 1/4 W | 3 |
| R 290 RL | 221 037 | RESISTOR | 33 KOHM 1/4 W | 2 |
| R230,243-248, 271 RL | 221 038 | RESISTOR | 47 KOHM 1/4 W | 9 |

SPARE PARTS LIST

| POS. | PART-No | DESCRIPTION | DATA | QTY |
|-------------------------------|---------|---------------------|-----------------|-----|
| R 274 RL | 221 039 | RESISTOR | 56 KOHM 1/4 W | 2 |
| R 258 RL | 221 629 | RESISTOR | 68 KOHM 1/4 W | 2 |
| R 261 RL | 221 044 | RESISTOR | 82 KOHM 1/4 W | 2 |
| R 273 RL | 221 048 | RESISTOR | 100 KOHM 1/4 W | 2 |
| R 272 RL | 221 045 | RESISTOR | 150 KOHM 1/4 W | 2 |
| R215,216, 234-241 | 221 049 | RESISTOR | 470 KOHM 1/4 W | 10 |
| R 265 RL | 221 981 | RESISTOR | 560 KOHM 1/4 W | 2 |
| R 260 RL | 221 041 | RESISTOR | 820 KOHM 1/4 W | 2 |
| R228,229, 232,233 | 221 009 | RESISTOR | 1 MOHM 1/4 W | 4 |
| R 231 | 221 982 | RESISTOR | 3,3 MOHM 1/4 W | 1 |
| R 285 RL | 221 230 | RESISTOR | 470 OHM 1/2 W | 2 |
| R 291 | 221 183 | RESISTOR | 1 KOHM 1/2 W | 1 |
| R 286 RL | 221 210 | RESISTOR | 1,5 KOHM 1/2 W | 2 |
| R 1,202, 282 | 221 692 | WIRE WOUND RESISTOR | 1 OHM 1 W | 3 |
| R 222 | 231 232 | WIRE WOUND RESISTOR | 6,8 KOHM 1 W | 1 |
| TR252RL,253RL | 231 086 | TRIMMER RESISTOR | 10 KOHM 0,15 W | 4 |
| TR 230 | 231 233 | TRIMMER RESISTOR | 1 MOHM 0,15 W | 1 |
| TR 231 | 231 234 | TRIMMER RESISTOR | 2,5 MOHM 0,15 W | 1 |
| TR230,TR231, TR252RL,253RL | 231 235 | SHAFT | red Nr. 5214 | 6 |
| TR 201, 202 | 221 278 | TRIMMER RESISTOR | 10 KOHM 0,1 W | 2 |
| TR 254 RL | 221 414 | TRIMMER RESISTOR | 100 KOHM 0,1 W | 2 |

UNIT DESCRIPTION

OUTPUT STAGE

FOR NSM-PHONOGRAPHS

ES IV-CD TECHNOLOGY

NSM

Aktiengesellschaft
Gartenstraße 210
6530 Bingen am Rhein
Telefon: 067 21/407-0
Telefax: 067 21/407 510

PART-№
209 824


Output Stage

The output stage is designed without induction coils or transformer and is therefore ironless. At full volume the music power is 200 W per channel when connected to a 2-ohm loudspeaker impedance.

Functions such as power supply, signal path and settings as well as repair aids are described in detail in the unit description "CENTRAL UNIT."



SPARE PARTS LIST

| POS. | PART-No | DESCRIPTION | DATA | QTY |
|------------|---------|-------------------------------------|-------------------|-----|
| SI 150 | 171 701 | <u>OUTPUT STAGE, ASSY</u> | 50 Hz | 1 |
| | 225 036 | FUSE | T 4 A slo blo | 1 |
| | 225 747 | CAP | | 1 |
| SI 150 | 171 702 | <u>OUTPUT STAGE, ASSY</u> | 60 Hz | 1 |
| | 225 542 | FUSE | 4 A slo blo | 1 |
| | 225 748 | CAP | | 1 |
| | 171 696 | CHASSIS | | 1 |
| | 171 881 | VENTILATOR, ASSY | | 1 |
| | 171 699 | AIR VANE | | 1 |
| | 222 485 | TEMPERATUR CONTROLLER | | 1 |
| | | <u>CIRCUIT PLATE - OUTPUT STAGE</u> | | 1 |
| ST 150 | 225 422 | TERMINAL BOARD | 3 PRONGS | 1 |
| | 225 654 | PIN PANEL | 10 PRONGS | 1 |
| | 225 746 | FUSE HOLDER | black | 2 |
| D 150, 151 | 221 115 | SI-DIODE | 1 N 4004 | 2 |
| ZD 150 | 221 650 | SI-ZENER-DIODE | ZPD 33 | 1 |
| LD 150 | 221 466 | LIGHT EMITTING DIODE | CQE 65 | 1 |
| T 150 | 221 883 | SI-TRANSISTOR | NPN BD 239 B | 1 |
| T 155 | 221 459 | SI-TRANSISTOR | PNP BD 256 | 1 |
| T 151, 152 | 221 886 | DARLINGTON-TRANSISTOR | NPN BDW 83 C | 2 |
| T 153, 154 | 221 902 | DARLINGTON-TRANSISTOR | PNP BDW 84 C | 2 |
| C 153 | 220 333 | MET.-CAPACITOR | 0,22 μ F 63 V | 1 |
| C 152 | 220 162 | LYTIC | 10 μ F 63 V | 1 |
| C 154 | 220 396 | LYTIC | 4700 μ F 50 V | 1 |
| C 150, 151 | 220 436 | LYTIC | 4700 μ F 63 V | 2 |
| R 166 | 221 094 | RESISTOR | 2,7 OHM 1/4 W | 1 |
| R 152, 153 | 221 096 | RESISTOR | 56 OHM 1/4 W | 2 |
| R 151 | 231 154 | RESISTOR | 750 OHM 1/4 W | 1 |
| R 159-162 | 221 029 | RESISTOR | 1 KOHM 1/4 W | 4 |
| R 164 | 221 032 | RESISTOR | 2,7 KOHM 1/4 W | 1 |
| R 163 | 221 034 | RESISTOR | 4,7 KOHM 1/4 W | 1 |
| R 154 | 221 625 | RESISTOR | 5,6 KOHM 1/4 W | 1 |
| R 165 | 221 604 | RESISTOR | 22 KOHM 1/4 W | 1 |
| R 167 | 221 267 | WIRE WOUND RESISTOR | 470 OHM 1 W | 1 |
| R 155-158 | 221 275 | WIRE WOUND RESISTOR | 0,22 OHM 7 W | 4 |
| R 150 | 221 305 | TRIMMER RESISTOR | 2,2 KOHM 0,1 W | 1 |

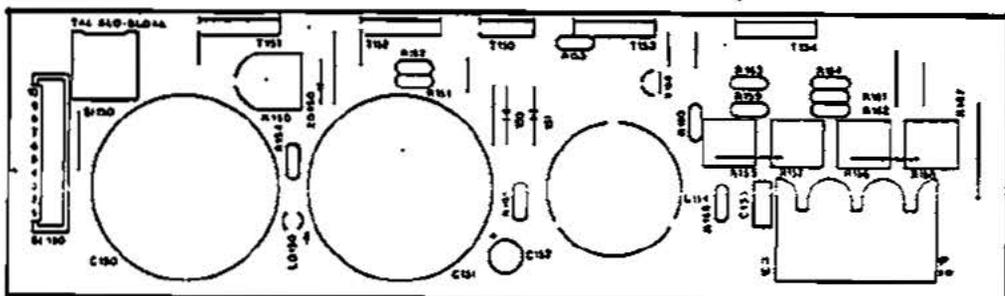

Thermoschalter
TEMPERATURE SWITCH

CENTRALE
linker Kanal Stecker ST 210
LEFT CHANNEL PLUG ST 210
rechter Kanal Stecker ST 211
RIGHT CHANNEL PLUG ST 211

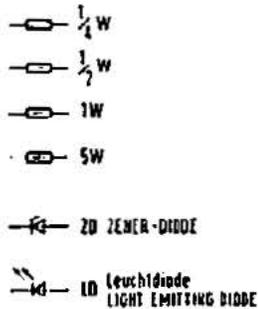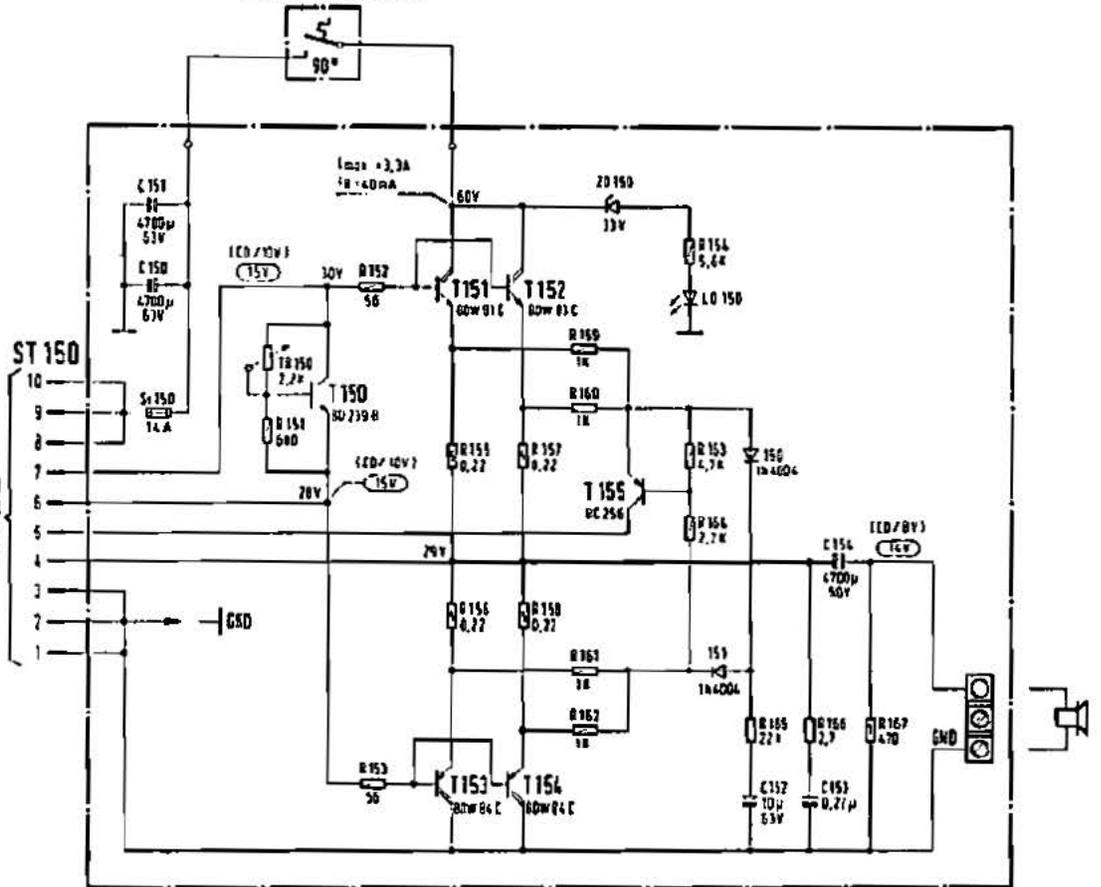

NF-Pegel bei 1 kHz, Lautstärkeregler auf max.
Höhen und Bässe max., ohne (CD/m) AVC gemessen mit elektron. Voltmeter,
Gleichspannung gemessen mit Voltmeter $R_i = 10 \text{ M}\Omega$.

AC SIGNAL VOLTAGES AT 1000cps, VOLUME CONTROL TO MAX. TREBLES AND
BASSES MAX., WITHOUT (CD/WITH) AVC MEASURED WITH ELECTRONIC VOLTMETER
DC VOLTAGES MEASURED WITH VOLTMETER $R_i = 10 \text{ MEG OHMS}$.

Alle Sicherungen träge!
ALL FUSES SLOW BLD!

Sicherungen nur durch solche mit gleichen Werten ersetzen!
REPLACE FUSES ONLY BY THOSE OF THE SAME VALUE!


ÄNDERUNGEN IM SINNE DES TECHN. FORTSCHRITTES VORBEHALTEN,
JEDOCH KEINE NACHRÜSTPFLICHT!

SUBJECT TO TECHNICAL MODIFICATION WITHOUT OBLIGATION
TO MODIFY EQUIPMENT ALREADY DELIVERED.!

Draufsicht
TOP VIEW



von unten gesehen
BOTTOM VIEW

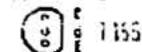

MUSIKAUTOMATEN
PHONOGRAPHS

ES IV-CD TECHNOLOGY

Schaltbild Endstufe
WIRING DIAGRAM OUTPUT STAGE

| | | | |
|----------|-------|-------|---------|
| 27 01 89 | Braun | Frank | Wolfram |
|----------|-------|-------|---------|

UNIT DESCRIPTION

CD CHANGER

FOR NSM-PHONOGRAPHS

ES IV-CD TECHNOLOGY

8

NSM

Müllersollenhof
Saarlandsstraße 240
6530 Bingen am Rhein
Telefon: 067 21/407-0
Telefax: 067 21/407 510

PART-№
209 825

INDEX

- 1. PICKUP FUNCTION
 - 1.1. Transport
 - 1.2. Pull holder
 - 1.3. Return holder

- 2. PICKUP DRIVER
 - 2.1. Lift control
 - 2.2. Grip control
 - 2.3. CD-Player control

- 3. PLAYER
 - 3.1. Disc player CDM 3
 - 3.2. Servo panel

- 4. PCB DECODER BOARD

- 5. MAGAZINE

Spare parts lists
Schematics CD changer 100
Wiring diagram PICKUP DRIVER

1. PICKUP FUNCTION

The pickup serves to transport the CD's between the magazines and the player.

ATTENTION! When the CD changer has the switch at the window (upper right), the transport does not function if the window is open.

If the window is opened while the CD is playing, the title will be played to the end, but the CD will only be transported back after the window is closed.

1.1 Transport

The lift is moved via a stepping motor controlled by the microprocessor of the control unit. The distance between 2 CD slots is 8 motor steps (1 opto counter step).

During the run the light barrier OPTSP, which is directly connected to the drivewheel, checks the motor's position every 4 steps. Stepping errors are immediately recognized and displayed with Er 75.

Together with the light barrier OPEND the end position of the lift is verified. Should a mistake appear here (signal too late or early) the display shows Er 76.

1.2 Pull Holder

With both grip levers, brought into lock position by DC motors MOGRL for left and MOGRR for right, the CD holders with their CD's are pulled out of the magazine. The light barrier OPPUM reports the correct position of the CD holder in the pickup unit.

If there is no report 2 sec. after switching on the motor, the display will show Er 71 for the left magazine or Er 72 for the right magazine.

1.3 Return Holder

To return a CD holder to its magazine, either motor MOGRL for the left magazine or MOGRR for the right magazine is switched on in the opposite direction.

Light barriers OPGRL or OPGRR report the end position of the grips.

If the report does not appear within 2 sec. after switching on the motor, the display shows Er 73 for the left magazine or Er 74 for the right magazine.

2.1. PICKUP DRIVER

2.1 Lift Control

With output port IC3 the microprocessor of the control unit controls switch transistors T2-T5 via drivers T6-T9. These drive the unipolar coil of the stepping motor (ST4, Pin 1-6). Using signal OPSTP (ST4, Pin 7) the microprocessor controls the position of the motors.

Together with signal OPEND (ST 3, Pin 8) the end position of the lift is reported via input port IC 1.

2.2 Grip Control

Both of the grip motors (MOGRL for the left magazine and MOGRR for the right magazine) are driven from the double motor bridge IC6 via output port IC3.

While pulling a CD from the magazine the signal OPPUM (ST 3, Pin 7) reports the end position of the CD holder in the pickup to the microprocessor of the control unit.

While returning the CD it recognizes the end position of the grips via signals OPGRL (ST 3, Pin 5) for left and OPGRR (ST 3, Pin 6 for right).

2.3 Control of the CD Player

Microcomputer IC 8 (T018) is used to convert the incoming serial data in I2C-Bus format from the decoder panel into parallel signals that can be processed.

The microprocessor of the control unit communicates with it via ports IC 4 and IC 2.

3. PLAYER

3.1 Disc Player CDM3

The CDM3 contains the components laser diode, play motor, radial motor, and focus unit. It reads the data from the CD.

3.2 Servo Panel

The servo panel contains the components to control the CDM3. They consist primarily of the photodiode signal processor, the radial error processor, the drivers for the laser diode, the focus unit, the radial motor and the playing motor.

4. PCB DECODER BOARD



The components servoprocessor, decoder, digital filter, DA converter and NF output driver are combined on the decoder board. It also contains the circuit to process the complete power supply for decoder board CDM3 and servopanel.

5. MAGAZINES

2 equal magazines that are equipped with 50 CD holders each are in the CD changer. With different CD holders it is possible to play 5- or 3-inch CD's.

The magazine can be swung out and totally taken out.

Equipping with or changing CD's can be done simply by taking out the respective CD holders, inserting the new CD into the holder and pushing it back till it locks in the magazine.

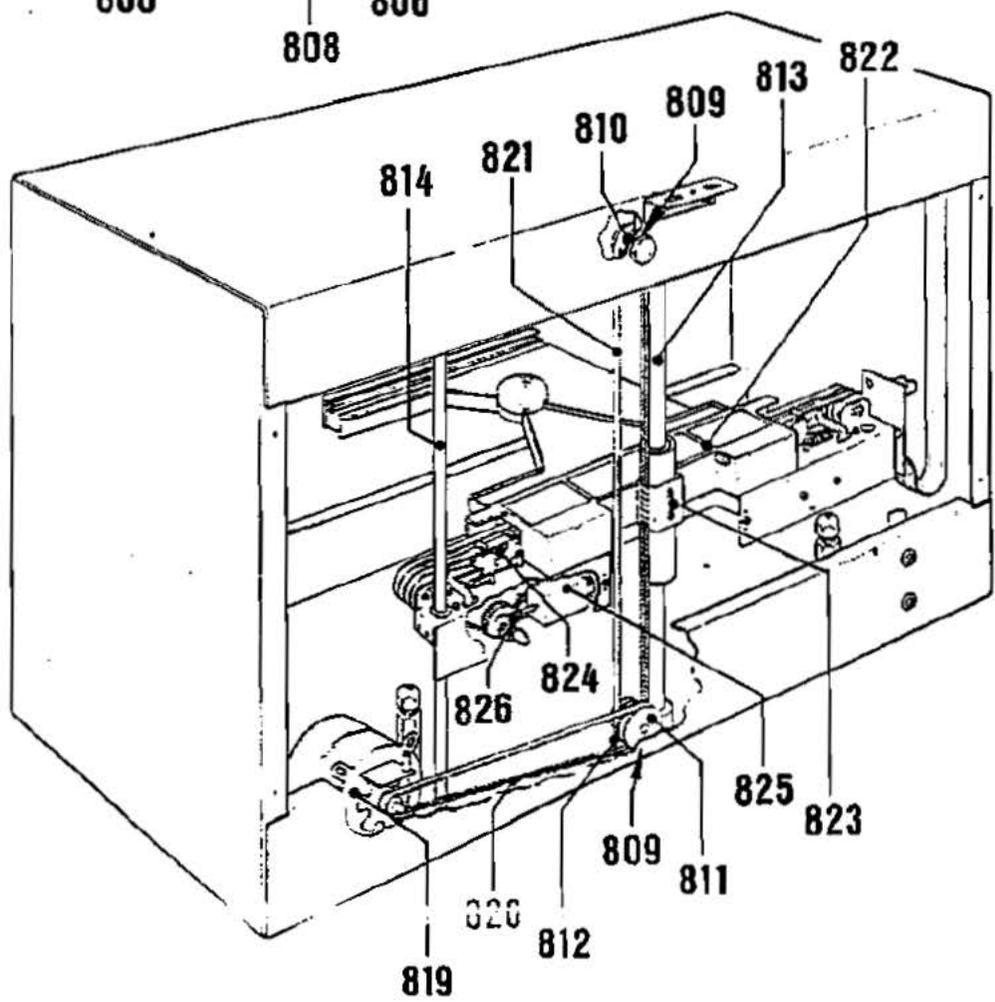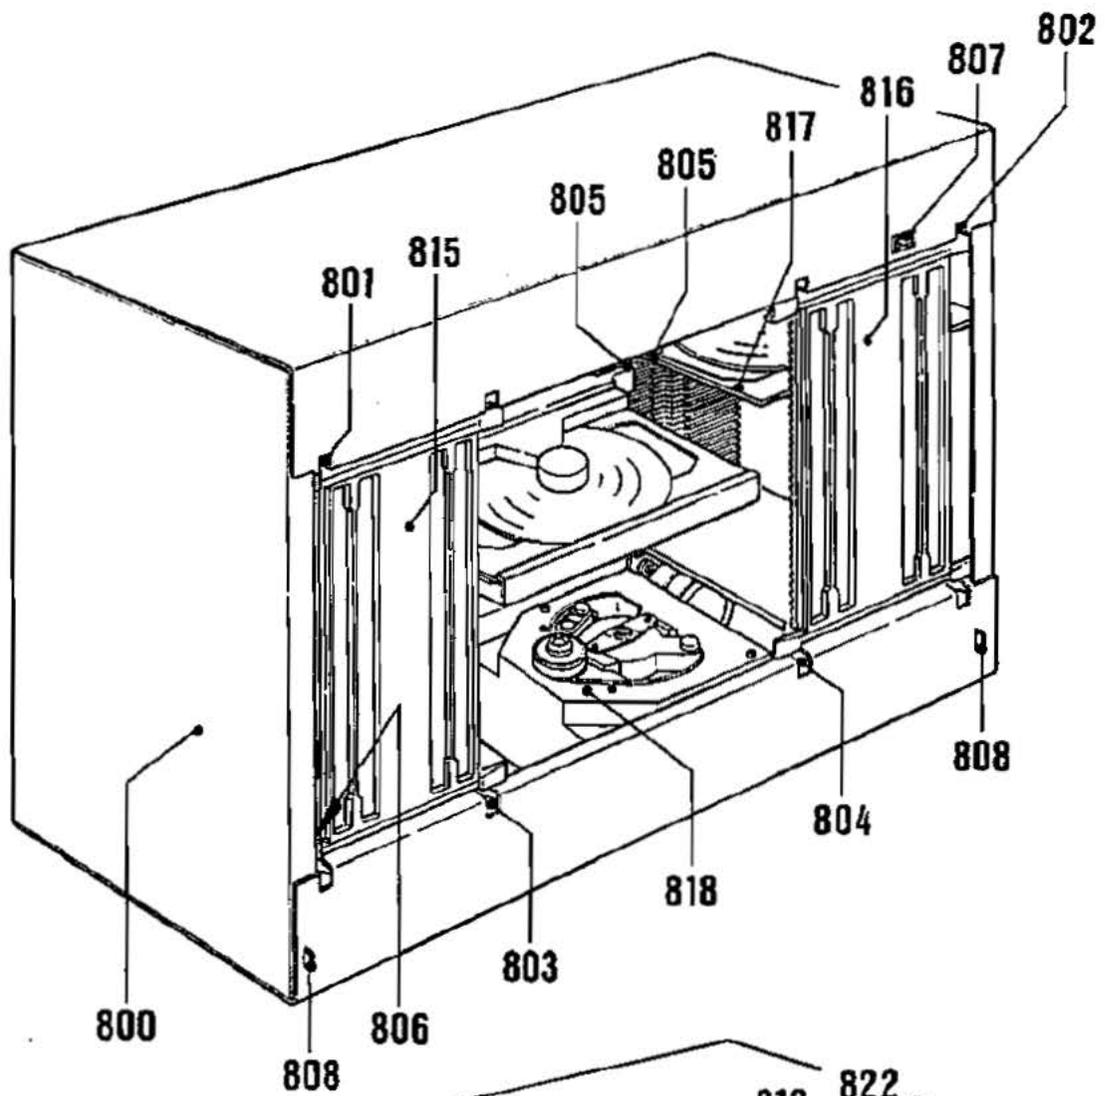

SPARE PARTS LIST


| POS. | PART-No | DESCRIPTION | DATA | QTY |
|------|---------|---------------------------------|-----------------------------------|-----|
| | 173 470 | <u>CD-CHANGER 100, STANDARD</u> | without design parts magazines | 1 |
| 800 | 173 487 | CABINET, welded | | 1 |
| 801 | 174 296 | CLOSING LEDGE, left upper | | 1 |
| 802 | 174 297 | CLOSING LEDGE, right upper | | 1 |
| 803 | 174 294 | CLOSING LEDGE, left lower | | 1 |
| 804 | 174 295 | CLOSING LEDGE, right lower | | 1 |
| 805 | 173 485 | CONTROL KNOB | | 2 |
| 806 | 206 655 | CONNECTION AXLE | | 2 |
| 807 | 222 531 | MICRO SWITCH f. CONNEX. BLOCK | E 63 - 10 K | 1 |
| 808 | 174 293 | FLAT SPRING for VIEW GLASS | | 2 |
| 809 | 173 538 | SCREW SLEEVE, ASSY | | 2 |
| 810 | 173 522 | STEP WHEEL, MOUNTED | | 1 |
| 811 | 173 521 | WASHER 48 | | 1 |
| 812 | 173 526 | BOARD WASHER | | 1 |
| 813 | 173 558 | AXLE | | 1 |
| 814 | 173 559 | GUIDE AXLE | | 1 |
| | 174 275 | VIEW GLASS, MOUNTED | GALAXY | |
| | 174 276 | VIEW GLASS, MOUNTED | FIRE | 1 |
| | 174 277 | VIEW GLASS, MOUNTED | HIDE-AWAY | |
| | 173 635 | LIGHTING, ASSY | | 1 |
| 815 | 173 491 | MAGAZINE LEFT, MOUNTED | without CASSETTE | 1 |
| | 209 737 | NUMBER STRIP, 01-50 | | 2 |
| 816 | 173 499 | MAGAZINE RIGHT, MOUNTED | without CASSETTE | 1 |
| | 209 779 | NUMBER STRIP, 51-100 | | 2 |
| 817 | 174 536 | CASSETTE CD 120 | only 10 piece | |
| | 174 537 | CASSETTE CD 80 | | |
| | 212 425 | TRANSPORT GUIDE for CASSETTE | | 2 |
| 818 | 173 551 | PLAY BACK UNIT, ASSY | with CD-PLAYER | 1 |
| 819 | 173 518 | STEP MOTOR, ASSY | | 1 |
| 820 | 206 644 | BELT | MXL 195 | 1 |
| 821 | 206 643 | BELT | MXL | 1 |
| 822 | 173 607 | LIFT, ASSY | | 1 |
| | 206 629 | RUBBER RING | | 1 |
| | 209 776 | LABEL | NSM 100 CD | 1 |
| | 174 220 | DECOR COVER | | 1 |
| 823 | 173 614 | BELT LOCK | | 1 |
| 824 | 173 581 | LIFT AXLE | | 1 |
| 825 | 173 606 | MOTOR, ASSY | | 2 |
| 826 | 173 630 | GEAR, MOUNTED | | 2 |
| | 173 552 | CB - CASSETTCONTROL, ASSY | | 1 |
| | 173 563 | CB - STEPPER, ASSY | | 1 |
| | 173 507 | CB - DECODER BOARD, ASSY | | 1 |
| | 173 665 | CB - PICK UP DRIVER, ASSY | | 1 |
| | 173 510 | CB - LIFT ADAPTER, ASSY | | 1 |
| | 173 557 | CB - MOTORCONTROL, ASSY | | 2 |
| | 173 508 | CB - CHANGER ADAPTER, ASSY | | 1 |

SPARE PARTS LIST

| POS. | PART-№ | DESCRIPTION | DATA | QTY |
|-----------------|---------|----------------------------------|----------------|-----|
| | 173 665 | <u>CB - PICK UP DRIVER, ASSY</u> | | 1 |
| ST 08 | 225 392 | PIN PLUG | 2 PRONGS 90° | 1 |
| ST 03 | 225 912 | PIN PLUG | 14 PRONGS | 1 |
| ST 07 | 225 650 | PIN PANEL | 2 PRONGS | 1 |
| ST 05 | 225 850 | PIN PANEL | 5 PRONGS | 1 |
| ST 02 | 225 653 | PIN PANEL | 8 PRONGS | 1 |
| ST 01 | 225 654 | PIN PANEL | 10 PRONGS | 1 |
| ST 04 | 225 655 | PIN PANEL | 12 PRONGS | 1 |
| Q 1 | 221 535 | OSCILLATOR QUARTZ | 4 MHz | 1 |
| IC 8 | 222 447 | IC-SOCKET | 28 PRONGS | 1 |
| | 231 409 | IC-MICROCOMPUTER | MAB 8441 | 1 |
| | | | T 018 | |
| IC 6 | 231 303 | IC-LINEAR | L 298 | 1 |
| IC 3, 4 | 221 771 | IC-CMOS | HEF 4094 B | 2 |
| IC 1, 2 | 221 763 | IC-CMOS | HEF 4021 B | 2 |
| D 14-16, 17 | 221 114 | SI-DIODE | 1 N 4148 | 4 |
| D 2-13 | 221 822 | SI-DIODE | BA 157 | 12 |
| D 18, 19 | 221 115 | SI-DIODE | 1, N 4004 | 2 |
| ZD 1, 2 | 231 326 | ZENER-DIODE | ZY 24 | 2 |
| T 11, 14 | 221 283 | SI-TRANSISTOR | BC 212 B | 2 |
| T 6-9, 12 | 221 757 | SI-TRANSISTOR | BC 547 B | 5 |
| T 2-5 | 221 777 | SI-TRANSISTOR | BD 679 | 4 |
| T 10 | 231 150 | SI-TRANSISTOR | TIP 130 | 1 |
| C 19, 20 | 220 266 | CER.-CAPACITOR | 27 pF | 2 |
| C 12 | 220 342 | CER.-CAPACITOR | 100 pF | 1 |
| C 5-8, 22 | 220 334 | MKT-CAPACITOR | 0,1 µF 63 V | 5 |
| C 4 | 220 332 | MKT-CAPACITOR | 0,33 µF 63 V | 1 |
| C 21 | 220 249 | LYTIC | 1 µF 63 V | 1 |
| C 18 | 220 389 | LYTIC | 47 µF 10 V | 1 |
| C 3 | 220 160 | LYTIC | 100 µF 10 V | 1 |
| C 2 | 220 391 | LYTIC | 220 µF 25 V | 1 |
| C 1 | 220 165 | LYTIC | 470 µF 40 V | 1 |
| R 64 | 221 606 | RESISTOR | 47 OHM 1/4 W | 1 |
| R 25, 54 | 221 600 | RESISTOR | 100 OHM 1/4 W | 2 |
| R 35 | 221 632 | RESISTOR | 160 OHM 1/4 W | 1 |
| R 37-40 | 221 614 | RESISTOR | 330 OHM 1/4 W | 4 |
| R 56, 67 | 221 099 | RESISTOR | 470 OHM 1/4 W | 2 |
| R 45, 49 | 221 029 | RESISTOR | 1 KOHM 1/4 W | 2 |
| R 27-29 | 221 033 | RESISTOR | 3,3 KOHM 1/4 W | 3 |
| R 46, 47 | 221 034 | RESISTOR | 4,7 KOhm 1/4 W | 2 |
| R26,41-44,68,69 | 221 035 | RESISTOR | 10 KOHM 1/4 W | 7 |
| R 5-12 | 221 603 | RESISTOR | 12 KOHM 1/4 W | 8 |
| R13-20, 55 | 221 036 | RESISTOR | 15 KOHM 1/4 W | 9 |
| R21-23,59-63 | 221 604 | RESISTOR | 22 KOHM 1/4 W | 8 |
| R 24 | 221 048 | RESISTOR | 100 KOHM 1/4 W | 1 |
| R 48 | 221 009 | RESISTOR | 1 MOHM 1/4 W | 1 |
| R 3 | 221 392 | RESISTOR | 390 OHM 1/2 W | 1 |
| R 1, 36, 65 | 221 692 | WIRE WOUND RESISTOR | 1 OHM 1 W | 3 |
| R 66 | 231 418 | WIRE WOUND RESISTOR | 2,7 OHM 1 W | 1 |


SPARE PARTS LIST

| POS. | PART-No | DESCRIPTION | DATA | QTY |
|----------|---------|-----------------------------------|---------------|-----|
| | 173 508 | <u>CB - CHANGER APAPTER, ASSY</u> | | 1 |
| ST 3 | 225 418 | PIN PLUG | 4 PRONGS | 1 |
| ST 2 | 225 412 | PIN PLUG | 4 PRONGS 90° | 1 |
| ST 12 | 225 660 | PIN PANEL | 2 PRONGS 90° | 1 |
| ST 1 | 225 661 | PIN PANEL | 4 PRONGS 90° | 1 |
| ST 9 | 225 652 | PIN PANEL | 6 PRONGS | 1 |
| ST 10 | 225 662 | PIN PANEL | 6 PRONGS 90° | 1 |
| ST 7, 11 | 225 653 | PIN PANEL | 8 PRONGS | 2 |
| ST 6 | 225 663 | PIN PANEL | 8 PRONGS 90° | 1 |
| ST 5 | 225 654 | PIN PANEL | 10 PRONGS | 1 |
| ST 4 | 225 664 | PIN PANEL | 10 PRONGS 90° | 1 |
| ST 8 | 225 655 | PIN PANEL | 12 PRONGS | 1 |

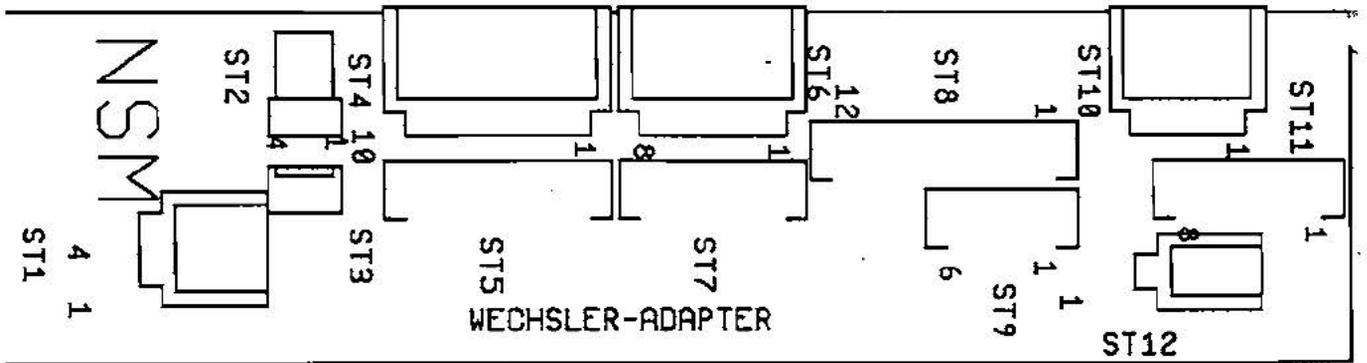

SPARE PARTS LIST

| POS. | PART-No | DESCRIPTION | DATA | QTY |
|-------|---------|--------------------------------|-----------|-----|
| | 173 510 | <u>CB - LIFT ADAPTER, ASSY</u> | | 1 |
| ST 2 | 225 892 | PLUG | 14 PRONGS | 1 |
| ST 1 | 222 445 | IC-SOCKET | 16 PRONGS | 1 |
| OPEND | 231 322 | OPTO-COUPLER | LTH-301 | 1 |

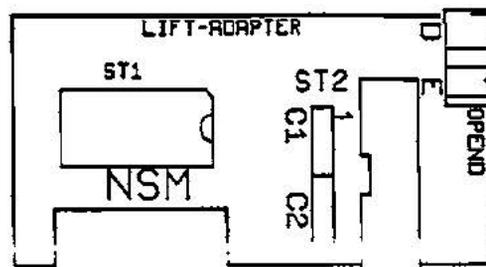

SPARE PARTS LIST

| POS. | PART-No | DESCRIPTION | DATA | QTY |
|------|---------|--------------------------------|----------|-----|
| | 173 563 | <u>CB - STEPPER, ASSY</u> | | 1 |
| | 231 322 | OPTO-COUPLER | LTH-301 | 1 |
| | 112 464 | CABLE HARNESS | 4-PRONGS | 1 |
| | 173 557 | <u>CB - MOTORCONTROL, ASSY</u> | | 1 |
| | 231 322 | OPTO-COUPLER | LTH-301 | 1 |

SPARE PARTS LIST

| POS. | PART-No | DESCRIPTION | DATA | QTY |
|------|---------|-----------------------------------|------|-----|
| | 173 636 | CABLE HARNESS: LIFT | | 1 |
| | 173 639 | CABLE HARNESS: PICK UP - CABLE I | | 1 |
| | 173 641 | CABLE HARNESS: PICK UP - CABLE II | | 1 |
| | 173 644 | CABLE HARNESS: TRAILING CABLE | | 1 |
| | 151 645 | CABLE HARNESS: DECODER CABLE I | | 1 |
| | 173 646 | CABLE HARNESS: DECODER CABLE II | | 1 |
| | 173 647 | CABLE HARNESS: DRIVER CABLE I | | 1 |
| | 173 648 | CABLE HARNESS: DRIVER CABLE II | | 1 |
| | 173 649 | CABLE HARNESS: DRIVER CABLE III | | 1 |
| | 173 740 | CABLE HARNESS: NF - CABLE | | 1 |

CD Changer 100

test, set, adjust

6.1. GENERAL INFORMATION

Please note the illustration of the CD changer on the last page regarding the following text.

After exchanging units their functions must be checked and, if needed, certain adjustments must be made.

To exchange the playing unit the CD changer can remain in the phonograph. But to remove or install the lift the changer has to be removed from the machine; tests and adjustments are only possible at a bench tester or at the machine with appropriate extensions!

Take care that the changer is set down on supports so that the board disc (12) or the main axle (14) which protrude from the cabinet floor are not pushed inside. Otherwise the board disc will jam the gear belt (2); a displaced axle changes the position of the upper distance sleeve so that the lift drives against it and blocks!

In service program step P60, Pt. 1.5.5 "Test CD Changer" the grips can be moved left or right with Keys "4"/"5" or "6"/"5" and the lift can be moved up or down with key "2"/"8". With Key 1 the CD player can be started and stopped.

For fine adjustments of the lift position the lift can be moved with Key "3" (+) or "9" (-) one motor step at a time (equals about 0,5 mm height difference) either up or down; this option is available for ES-IV CD phonographs as of Program Index 004.

The distance between two magazine slots is 8 motor steps (or 1 opto step).

In the displays the present status of the respective opto mask and the time in seconds during which the lift position is held are shown.

6.2. MAGAZINE

The magazines in swung-in and locked position are supported by height-adjustable studs. Changing the height setting can be necessary when the lift is exchanged; setting see Pt. 4 "Lift."

6.3. PLAYING UNIT

To exchange the playing unit with CD player

- * remove both magazines
- * pull lift up on belts
- * swing support clamps on chassis of playing unit out
- * carefully(!) pick up playing unit, watch balance washers under cabinet
- * open plug connections
- * installation of playing unit in opposite sequence
- * function test:
 - remove decorative cover (01) and check if axle of suspension plate is in the center of the upper lift bore.
 - choose CD. check if CD is securely clamped in play position.
 - further tests see Pt. 4 "Lift."



6.4. LIFT

To exchange the lift as well as to check and adjust the opto coupler of the CD changer, completely remove the CD changer, disconnect cables, remove rear wall.


- * From the rear side of the machine pull lift (04) up by the gear belt (02), interrupt connection between lift and gear belt by unscrewing the gear belt lock (03).
- * Pull out plug of connecting cable (06).
- * Remove board disc (12) after removal of washer.
- * Pull distance sleeve (13) at bottom of main axle (14) from cabinet floor upwards; remove securing clamp of main axle from inside of cabinet.
- * Remove securing clamp of guiding axle (10) from inside of cabinet.
- * Pull guiding axle down through floor of cabinet.
- * Push main axle down until upper distance sleeve can be removed.

If main axle is pulled out all the way, do not mistake upper and lower distance sleeves; they are of different length!

- * Remove lift; mount exchange lift in opposite sequence.
- * Function test, basic setting; CD changer must be completely connected to operate either with extensions to phonographs or a bench tester:
 - turn on test program P60/5, "test CD changer" F5. All functions of the changer can be checked, see excerpt of service program below:








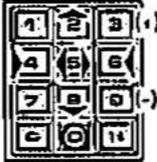
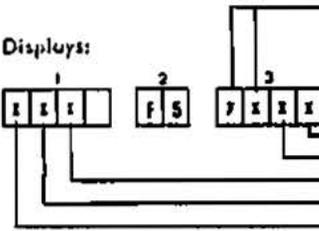
| All functions of the changer can be tested individually. | | | | | | | | | | | | | | | | | | | | | | |
|--|---|----------------------|----------|-------------------|-----------------------|-----------------|--------------|--------------------|----------------|----------------|-----------|---|------------|---|---------------|---|-----------------------------|-------|-----------------------------------|-------|-------------------------------------|---|
| CD changer test | <p>Enter "5" and "H", Display 2 "F 5".</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 10%;">Input</th> <th style="width: 90%;">Function</th> </tr> </thead> <tbody> <tr><td>1</td><td>CD-Player, Start/Stop</td></tr> <tr><td>2</td><td>Lift upwards</td></tr> <tr><td>8</td><td>Lift downwards</td></tr> <tr><td>4</td><td>Grip left</td></tr> <tr><td>6</td><td>Grip right</td></tr> <tr><td>5</td><td>Return holder</td></tr> <tr><td>0</td><td>Stop lift at magazine space</td></tr> <tr><td>3 :c)</td><td>Motor steps, upwards (per 0,5 mm)</td></tr> <tr><td>9 :c)</td><td>Motor steps, downwards (per 0,5 mm)</td></tr> </tbody> </table> | Input | Function | 1 | CD-Player, Start/Stop | 2 | Lift upwards | 8 | Lift downwards | 4 | Grip left | 6 | Grip right | 5 | Return holder | 0 | Stop lift at magazine space | 3 :c) | Motor steps, upwards (per 0,5 mm) | 9 :c) | Motor steps, downwards (per 0,5 mm) | <p>Keep in mind the code numbers for the individual changer functions as per the following keyboard illustration:</p>  |
| Input | Function | | | | | | | | | | | | | | | | | | | | | |
| 1 | CD-Player, Start/Stop | | | | | | | | | | | | | | | | | | | | | |
| 2 | Lift upwards | | | | | | | | | | | | | | | | | | | | | |
| 8 | Lift downwards | | | | | | | | | | | | | | | | | | | | | |
| 4 | Grip left | | | | | | | | | | | | | | | | | | | | | |
| 6 | Grip right | | | | | | | | | | | | | | | | | | | | | |
| 5 | Return holder | | | | | | | | | | | | | | | | | | | | | |
| 0 | Stop lift at magazine space | | | | | | | | | | | | | | | | | | | | | |
| 3 :c) | Motor steps, upwards (per 0,5 mm) | | | | | | | | | | | | | | | | | | | | | |
| 9 :c) | Motor steps, downwards (per 0,5 mm) | | | | | | | | | | | | | | | | | | | | | |
| | <p>Displays:</p>  <p>The time in sec. during which the lift position is held. The lift position is held after every function for 2 sec., by touching "0" for 10 sec.</p> <table style="width: 100%;"> <tr> <td>OPTO stepper control</td> <td>OPSTP</td> </tr> <tr> <td>OPTO end position</td> <td>OPEND</td> </tr> <tr> <td>OPTO grip right</td> <td>OPGRR</td> </tr> <tr> <td>OPTO pickup center</td> <td>OPPUM</td> </tr> <tr> <td>OPTO grip left</td> <td>OPGRL</td> </tr> </table> <p>Meaning of displays: OPTO lit up = "0", OPTO darkened = "1".</p> | OPTO stepper control | OPSTP | OPTO end position | OPEND | OPTO grip right | OPGRR | OPTO pickup center | OPPUM | OPTO grip left | OPGRL | | | | | | | | | | | |
| OPTO stepper control | OPSTP | | | | | | | | | | | | | | | | | | | | | |
| OPTO end position | OPEND | | | | | | | | | | | | | | | | | | | | | |
| OPTO grip right | OPGRR | | | | | | | | | | | | | | | | | | | | | |
| OPTO pickup center | OPPUM | | | | | | | | | | | | | | | | | | | | | |
| OPTO grip left | OPGRL | | | | | | | | | | | | | | | | | | | | | |
| Terminate test. | Activate housing switch. | | | | | | | | | | | | | | | | | | | | | |

- The basic setting occurs in parked position at Magazine Slot 25/75. Drive pick-up to this position with Keys "2" and "8."
The lift is held after each function in this position for 2 sec.; with Key "0" for 10 sec.
- Drive cassette in and out with Keys "4"/"5" or "6"/"5."
Check function for smooth movement.
The respective grip lever must fall into the cassette w/o hindrance!
- To adjust lift height loosen belt lock and move up or down; then tighten screws!
- Move lift down one motor step (about 0,5 mm height difference) with Key "9" (-); same test for smooth movement.
- Drive to normal park position with key "0" and with Key "3" (+); switch lift one motor step above normal position. Same check for smooth movement.
- Set magazine height: If magazine slots do not align with lift, then adjust lift only to one magazine at first. After that the other magazine is adjusted with support screw (11/15) to the correct height.
- The light barrier (08) on the step motor must in parked position 25/75 be in the center of the opto scanner OPSTP (09) (status display of OPSTP in display = "1"). If necessary, loosen screw on hexagon bolt and set PCB with opto coupler to center of mask.
- To adjust opto coupler OPEND (05) lift must be driven down to bottom. Drive lift upwards with Key "3" (press 4 times) or manually with one half opto step; the mask (16) must release OPEND (05) when OPSTP (09) opens the light mask, displayed by "0." Adjustment done by shifting of light mask angle (16) of OPEND, displayed by transition of "0" to "1" or "1" to "0."
- Select CD in normal program. In the parked position of the playing position the lift must have a gap to the lower end position.
- The distance between a cassette and the clamping dish should be at least 1 mm during a gripping procedure. So that the clamping dish can be magnetically attracted, the decorative cover must be in place.
- The CD must run w/o touch and grinding sounds when in a suspended position.
To test the function get cassette with CD from magazine by pressing correct keys and place it on CD player in play position.
Turn on CD player with Key "1." After test with Key "1" or any of the other function test keys turn off CD player.
The clamping dish must clamp down on CD exactly in center.
- Check function of fork light masks OPGRR, OPGRL, OPPUM as per test "F5." The respective mask must cover the light barrier in its entire breadth when Status Display "1" is shown and may not touch the housing physically.

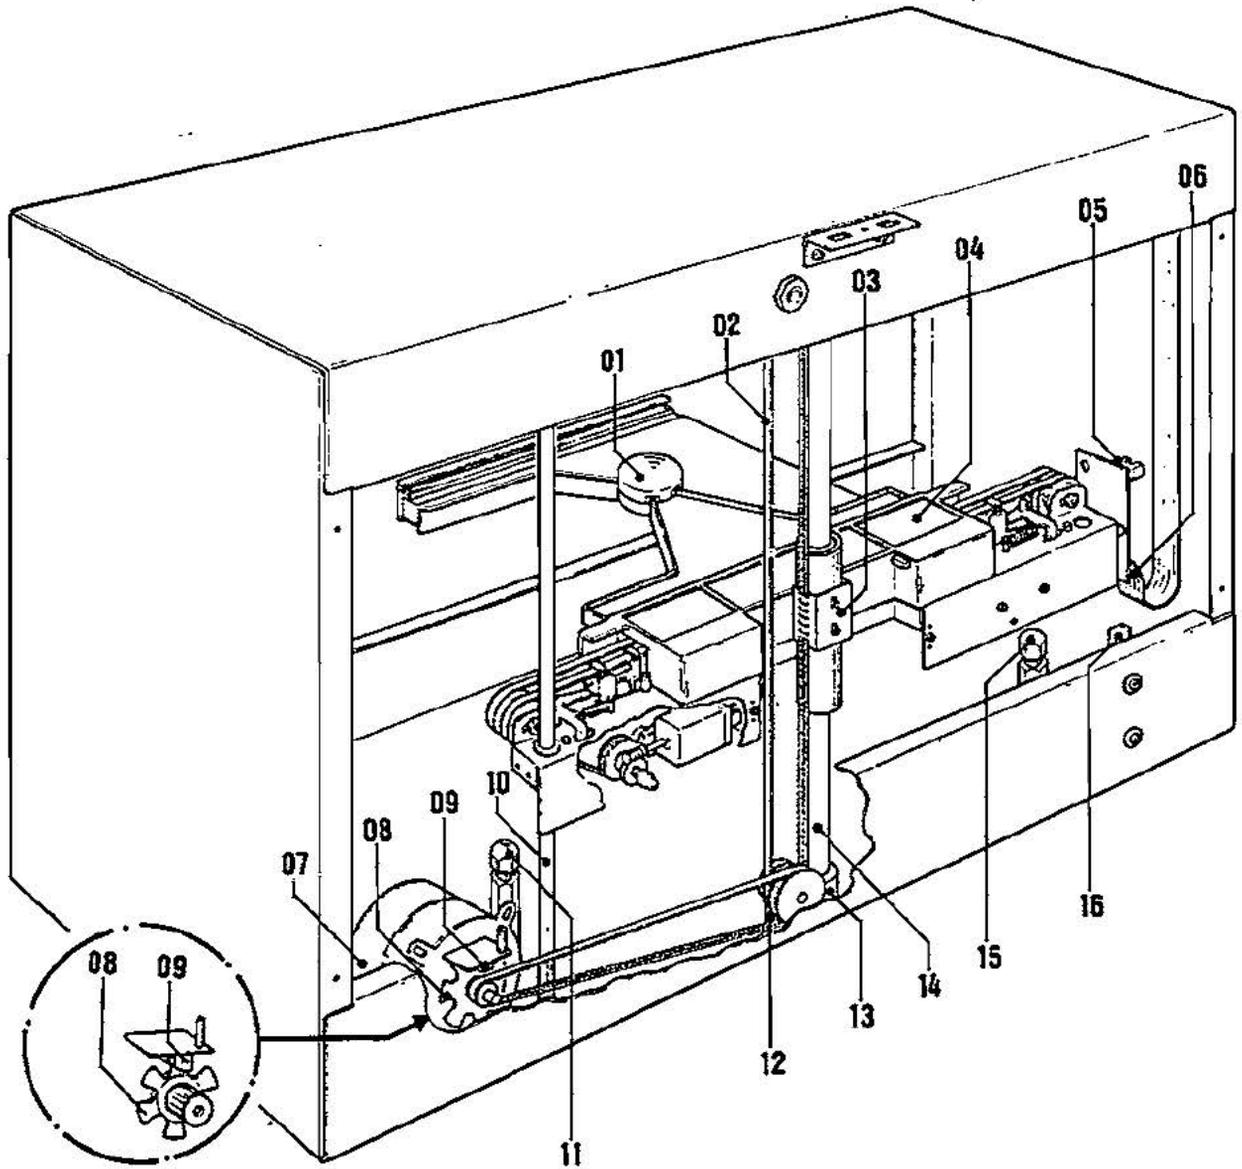

CD CHANGER, COMPL.


- OP END OPTO END POSITION
- OP GRL OPTO GREIFER LINKS
OPTO GRASP LEFT
- OP GRR OPTO GREIFER RECHTS
OPTO GRASP RIGHT
- OP PUM OPTO PICK UP MITTE
OPTO PICK UP CENTER
- OP STP OPTO STEPPER CONTROL
- MO GRL MOTOR GREIFER LINKS
MOTOR GRASP LEFT
- MO GRR MOTOR GREIFER RECHTS
MOTOR GRASP RIGHT

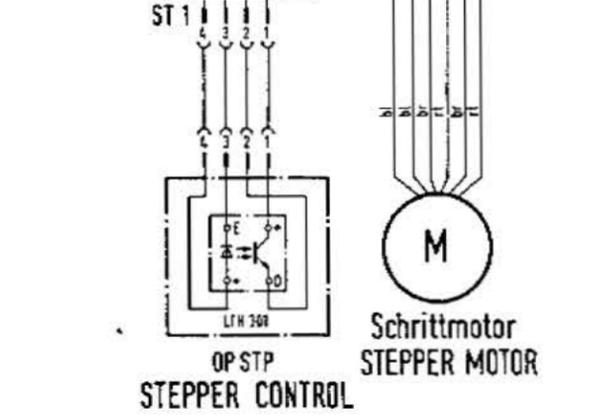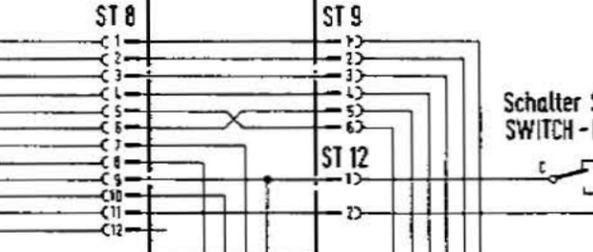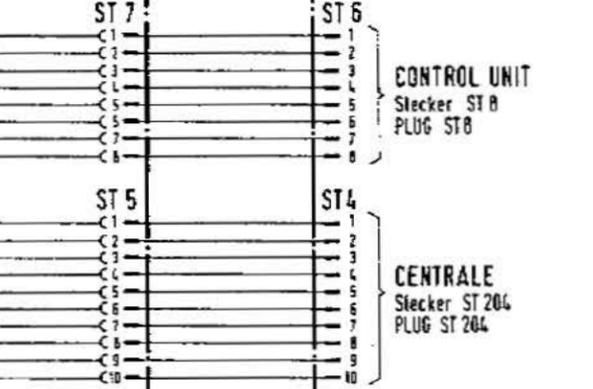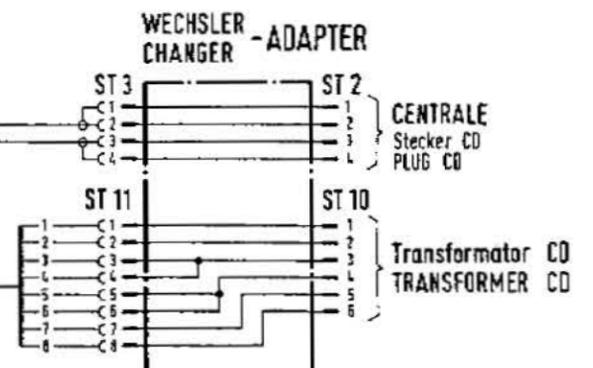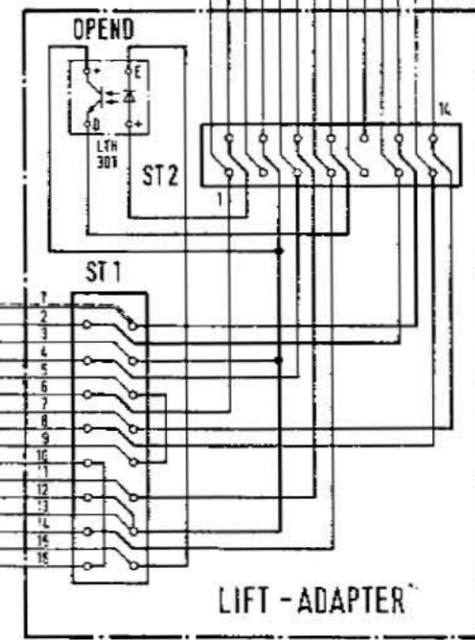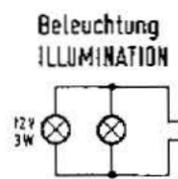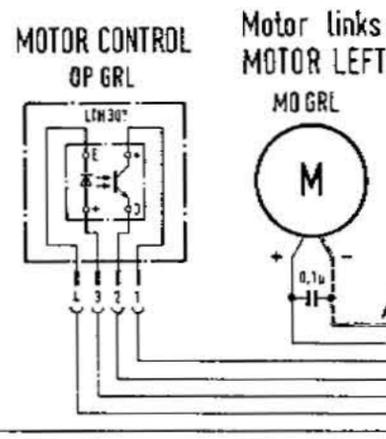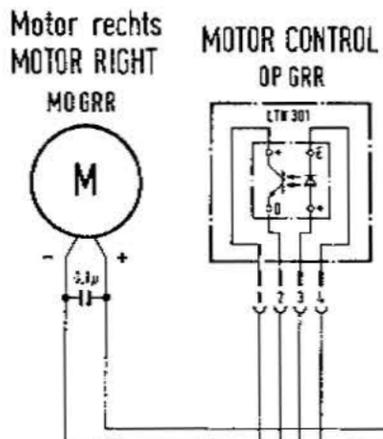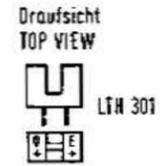

ÄNDERUNGEN IM SINNE DES TECH. FORTSCHRITTES VORBEHALTEN,
JEDOCH KEINE WACHRUSTPFLICHT!
SUBJECT TO TECHNICAL MODIFICATION WITHOUT OBLIGATION
TO MODIFY EQUIPMENT ALREADY DELIVERED!

MUSIKAUTOMATEN
PRONOGRAPHES
ES IV - CD TECHNOLOGY
ELEKTROPLAN CD-WECHSLER
OPERATING SCHEME CD-CHANGER

| | | | |
|----------|------------|------------------|--------------------|
| 01 09 83 | Gez. Braun | Resb. <i>ibm</i> | Gepr. <i>Mannd</i> |
|----------|------------|------------------|--------------------|

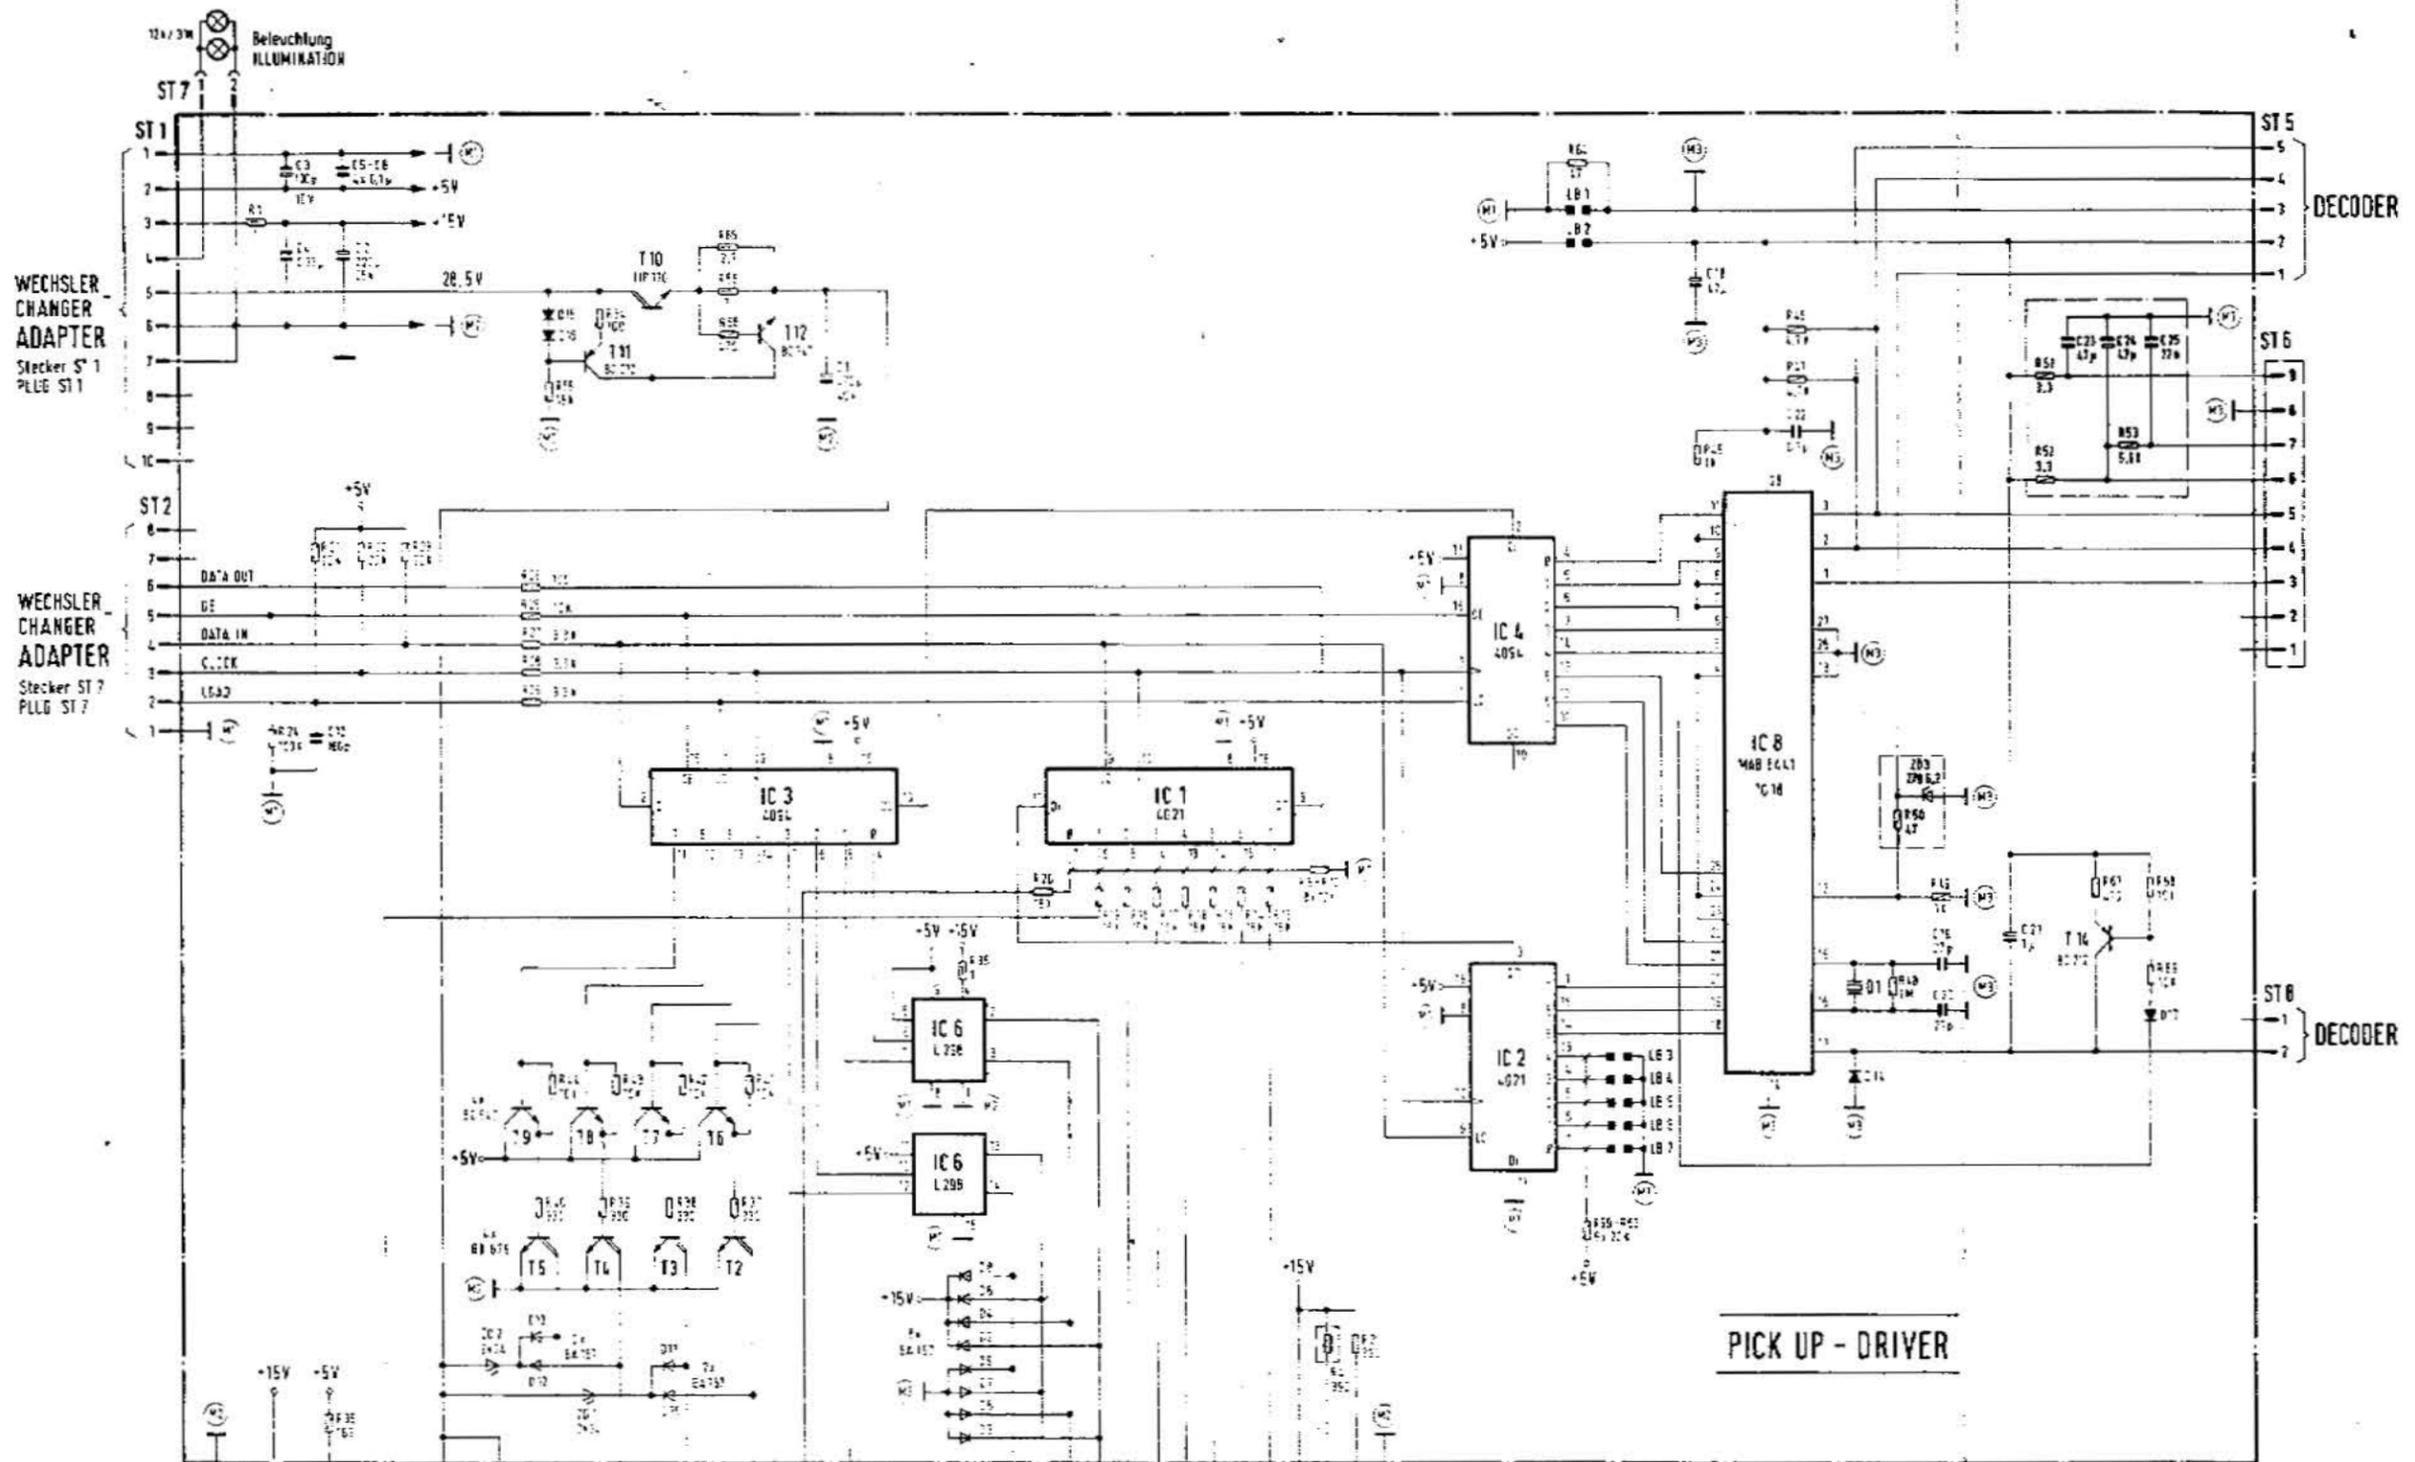


WECHSLER
CHANGER
ADAPTER
Stecker S' 1
PLUG ST 1


WECHSLER
CHANGER
ADAPTER
Stecker ST 7
PLUG ST 7

WECHSLER
CHANGER - ADAPTER
Stecker S' B
PLUG ST E


LIFT - ADAPTER
Stecker ST 2
PLUG ST 2

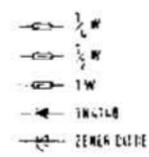

Draufsicht
TOP VIEW

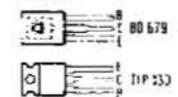

von unten gesehen
BOTTOM VIEW

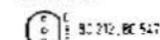

- DP END DP10 END POSITION
 - DP GR1 DP10 CENTER LINKS OPTIC GRASP LEFT
 - DP GR2 DP10 GRASP LEFT
 - DP GR3 DP10 GRASP RIGHT
 - DP GR4 DP10 GRASP RIGHT
 - DP PUM DP10 PICK UP MIDDLE OPTIC PICK UP CENTER
 - DP STP DP10 STEPPER CONTROL
 - MDGR1 MOTOR GRASPER LINKS MENDOR GRASP LEFT
 - MDGR2 MOTOR GRASPER RECHTS MENDOR GRASP RIGHT
- gezeichnete Bauteile sind nicht bestückt!
DOTTED COMPONENTS ARE NOT INSTALLED!

ÄNDERUNGEN IM SINNE DES TECHN. VORSCHRIFTES VORBEHALTEN,
JEDOCHE KEINE NACHRUFPLICHT!
SUBJECT TO TECHNICAL MODIFICATION WITHOUT OBLIGATION
TO MODIFY EQUIPMENT ALREADY DELIVERED!

MUSIKAUTOMATEN
PHONOGRAPHS **ES IV - CD** TECHNOLOGY

Schaltbild
WIRING DIAGRAM **PICK UP - DRIVER**

| | | | |
|----------|-------|-------|------|
| 16.02.89 | Braun | Braun | 100% |
|----------|-------|-------|------|

209 810

UNIT DESCRIPTION

TITLE INDICATION II

FOR NSM-PHONOGRAPH

ES IV/CD-TECHNOLOGY

I. FUNCTION

I.1. PCB Title display

The PCB is connected to the serial interface and +5 V of the control unit via ST1. +15 V and +14 V are also conducted via ST1.

The constant voltage of +15 V supplies motors and opto couplers.

Shiftregister IC2 is the output port for motor driver IC3, which controls the motor for stacker movement (MO MOV) and the gripper motor (MO GR).

Shiftregister IC1 is the input port for opto couplers and push buttons.

Light barriers GRL and GRR control the endposition of the gripper (carrier).

MOV1, MOV2 and MOV3 supervise various positions during the stacker movement. Any blocking will be recognized and displayed by error code Er 9x.

Pushbuttons TL and TR in the PCB are service keys for moving title holders. They are identical with pushbuttons (◀) and (▶) on the front of the phonograph.

I.2. Movement of title holders

By pushing the keys "left" respectively "right" the title holder will be moved into the corresponding direction.

A complete movement consists out of following phases: If i.e. the key "left" is pushed, at first the position of the gripper will be checked and -if required- the front gripper positioned in front of the right hand stack. Both stacks are level. Now the right stack moves to the front while the left one moves back simultaneously until the grippers enter the carrier slots of the corresponding title holders. Then the grippers move the title holder to the other side. In the final position the right hand stack will be moved forward while the left hand stack will be moved backward until they are level. The grippers will be brought back to their starting position. In case of a limitation of selectable CD's via service step P22 only the corresponding title holders will be shown. A movement to the right beyond the highest covernumber as well as to the left below covernumber 1 is not possible.

2. SERVICE

2.1. Operation tests

Service-program-step P60, input test "F2" allows testing of IC1 inputs, port 6. The result is shown on display 3:

The switching position of any give opto couplers is shown on the first digit from the right

"0" = closed, "1" = open

The opto coupler is shown on the second digit from the right

Gripper opto "0" = GRL,
"1" = GRR.


Switching wheel opto "2" = MOV1,
"3" = MOV2,
"4" = MOV3.

Counting wheel opto "5" = Synchron

Directional pushbuttons "6" = TL,
"7" = TR.


The port number is shown on the third digit from the right.

"6" = Port 6 on IC1

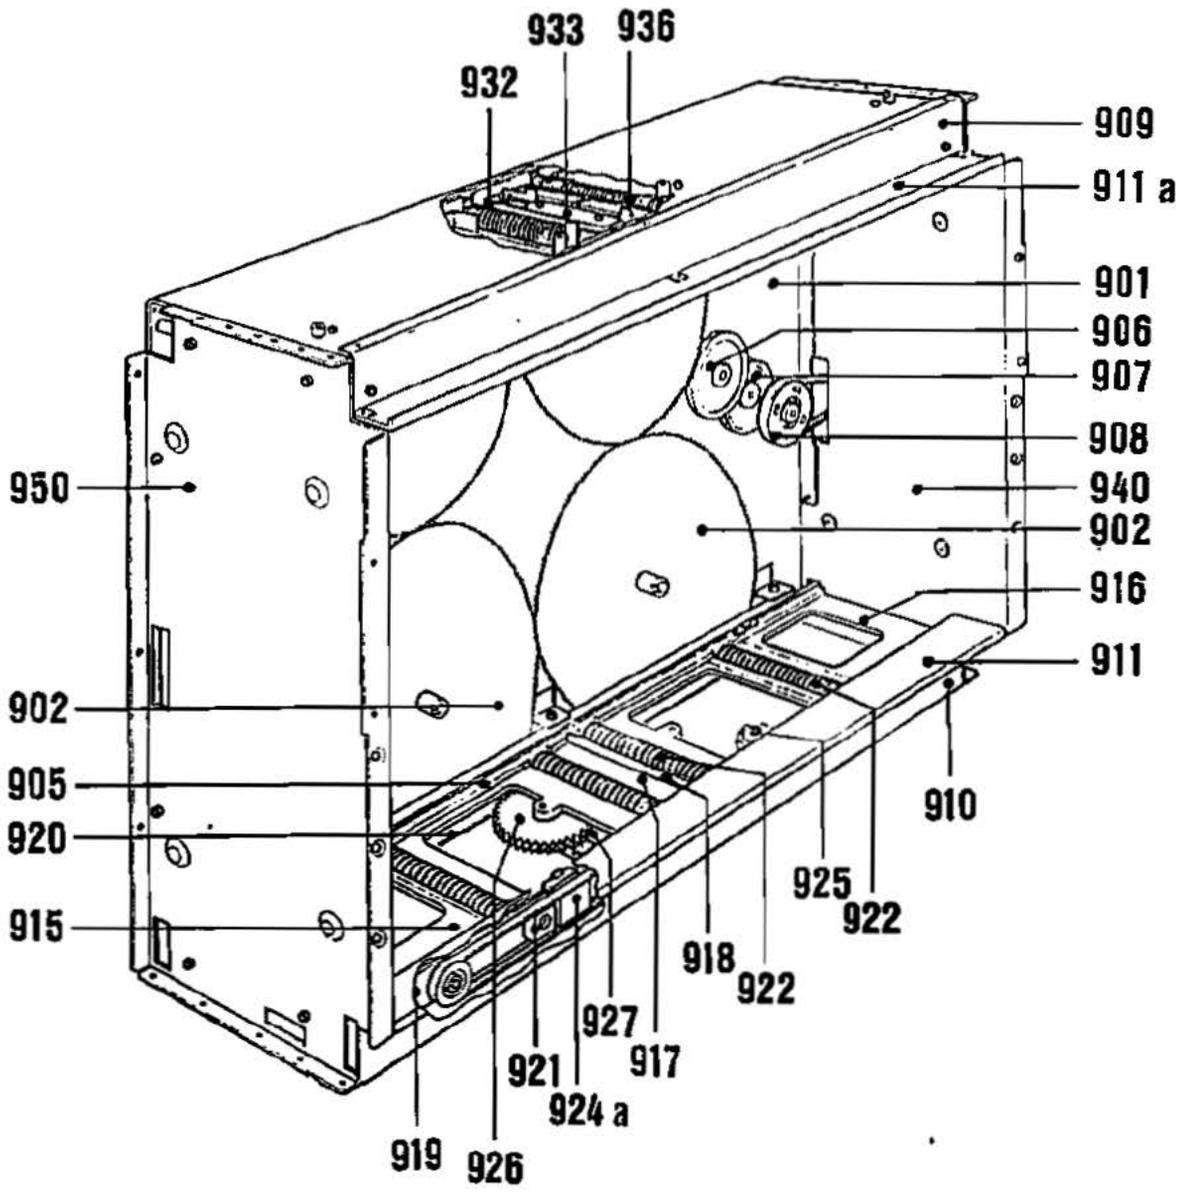

SPARE PARTS LIST

| POS. | PART-No | DESCRIPTION | DATA | QTY |
|------------------|-----------------------|-------------------------------|------------------|-----|
| 900 | 174 710 | <u>CD-TITLE DRUM II, ASSY</u> | | 1 |
| 901 | 174 917 | CABINET PLATE, STAMPED | | 1 |
| | 206 100 | PLASTIC BEARING | STAR | 4 |
| 902 | 174 753 | TOOTHED WHEEL | Z = 160 | 4 |
| 903 | 174 876 | SHIFTING WHEEL | | 1 |
| 904 | 174 929 | CB - SHIFTING WHEEL, ASSY | | 1 |
| 905 | 174 799 | GUIDE | | 1 |
| 906 | 174 886 | GEAR WHEEL | Z = 58 | 1 |
| 907 | 174 875 | GEAR WHEEL | Z = 48 | 1 |
| 908 | 174 927 | BELT WHEEL, ASSY | Z = 52 | 1 |
| | 174 879 | WASHER | | 1 |
| 909 | 174 848 | COVER, UPPER | | 1 |
| 910 | 174 847 | COVER, LOWER | | 1 |
| 911 | 174 900 | MASK | LOWER WHITE | 1 |
| | 175 123 | MASK | UPPER BLUE | } 1 |
| 911 _a | 175 124 | MASK | UPPER YELLOW | |
| 912 | to 174 950 174 999 | TITLE HOLDER II | | 50 |
| 913 | 206 797 | Scotch Bumpon | | 8 |
| | 219 190 | TITLE STRIP | | 120 |
| | 219 191 | STICKER, clear | | -- |
| | | <u>LOWER DECK</u> | | |
| 915 | 175 077 | TRAVERSE I, ASSY | | 1 |
| 916 | 174 881 | TRAVERSE II | | 1 |
| 917 | 174 797 | TRAVERSE, MIDDLE | | 1 |
| 918 | 174 844 | BRACKET | | 1 |
| | 741 007 | BALL ϕ 5 DIN 74 1007 | | 2 |
| | 205 827 | SPRING | | 2 |
| 919 | 174 906 | HOLDING BAR | | 1 |
| 920 | 174 931 | HOLDING BAR II | | 1 |
| 921 | 206 794 | LOSS | | 2 |
| 922 | 174 751 | WORM, ASSY, LOWER | | 4 |
| | 206 100 | PLASTIC BEARING | STAR-NYLINER | 4 |
| 923 | 174 898 | BELT WHEEL | Z = 28 | 2 |
| 924 | 206 776 | BELT | TYP S2 M800 | 2 |
| 924 _a | 174 846 | DRIVE, FRONT SIDE | | 1 |
| | 174 882 | DRIVE, REAR SIDE | | 1 |
| 925 | 174 930 | CB - DRIVE, ASSY | to TRAVERSE I/II | 2 |
| 926 | 174 885 | COUNTER | | 1 |
| 927 | 175 078 | CB - COUNTER, ASSY | | 1 |
| | 225 412 | PLUG CONNECTOR | 4 prongs 90° | 1 |
| | 231 322 | COPPLER PLATE | LTH-301 | 1 |
| | 175 103 | CABLE HARNESS: SHIFTING WHEEL | | 1 |
| | 175 104 | CABLE HARNESS: DRIVE | | 1 |

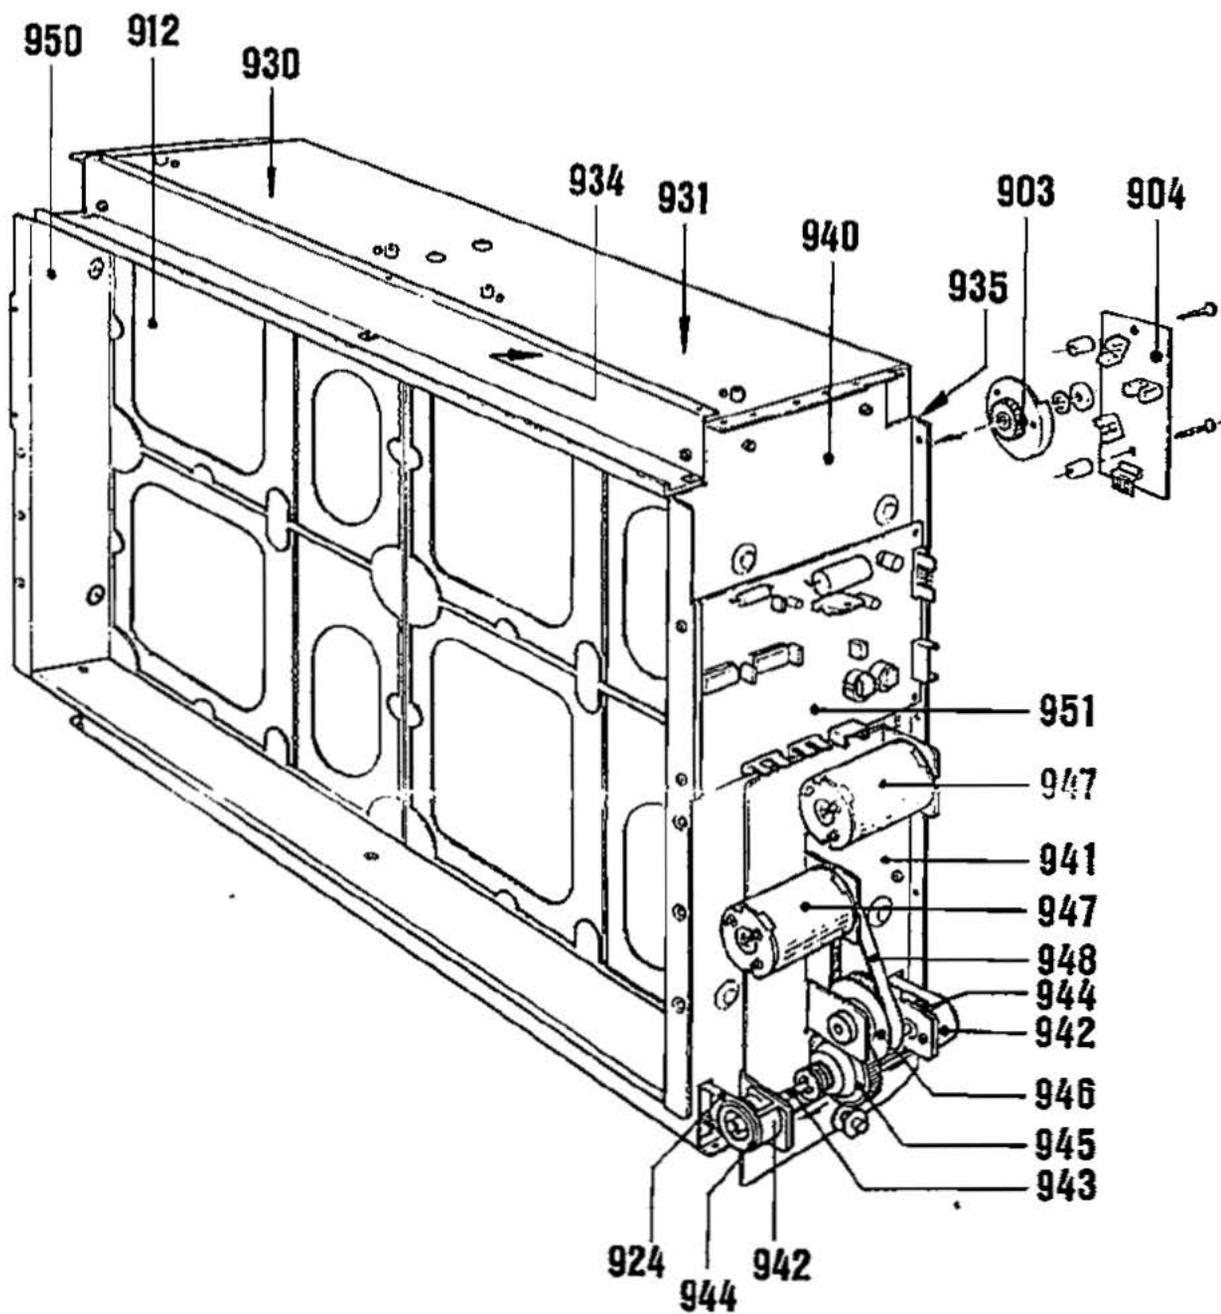



SPARE PARTS LIST

| POS. | PART-No | DESCRIPTION | DATA | QTY |
|------|---------|--------------------------------|------------|-----|
| | | <u>UPPER DECK</u> | | |
| 930 | 174 791 | TRAVERSE I | | 1 |
| 931 | 174 881 | TRAVERSE II | | 1 |
| 932 | 174 797 | TRAVERSE, MIDDLE | | 1 |
| 933 | 174 844 | BRACKET | | 1 |
| | 741 007 | BALL ϕ 5 DIN 74 1007 | | 2 |
| | 205 827 | SPRING | | 2 |
| 934 | 174 798 | HOLDING BAR I | | 1 |
| 935 | 174 931 | HOLDING BAR II | | 1 |
| 936 | 174 764 | WORM, ASSY, UPPER | | 4 |
| | | <u>SIDE PART</u> | | |
| 940 | 174 932 | SIDE PLATE, RIGHT, STAMPED | | 1 |
| 941 | 174 925 | MOTOR- and GEAR PLATE, STAMPED | | 1 |
| 942 | 174 926 | BELT PROTECTION, ASSY | | 2 |
| 943 | 174 924 | DRIVE AXLE | | 1 |
| | 175 270 | COUPLING (PART 1) | | 1 |
| | 211 271 | COUPLING (PART 2) | | 1 |
| | 205 807 | SPRING | | 1 |
| 944 | 174 898 | BELT WHEEL | Z = 28 | 2 |
| 945 | 174 875 | GEAR WHEEL | Z = 48 | 1 |
| 946 | 174 878 | BELT, WHEEL, ASSY | Z = 52 | 1 |
| | 174 879 | WASHER | | 1 |
| 947 | 174 889 | MOTOR, ASSY | | 2 |
| 948 | 206 789 | BELT WHEEL | 40 S2 M180 | 2 |
| 950 | 174 912 | SIDE PLATE | | 1 |
| 951 | 174 928 | CB - TITLE DRUM, ASSY | see Page | 1 |

SPARE PARTS LIST

| POS. | PART-No | DESCRIPTION | DATA | QTY |
|-------------|---------|---------------------------|----------------|-----|
| | 174 928 | <u>CB - TITLE DRUM II</u> | | 1 |
| ST 4 | 225 443 | PIN PLUG | 6 prongs red | 1 |
| ST 3 | 225 444 | PIN PLUG | 8 prongs red | 1 |
| ST 1 | 225 440 | PIN PLUG | 10 prongs red | 1 |
| ST 2 | 225 710 | PIN PANEL | 4 prongs | 1 |
| ST 6 | 225 711 | PIN PANEL | 6 prongs | 1 |
| TL, TR | 222 404 | CONTACT BUTTON | D 6 red | 2 |
| IC 1 | 221 763 | IC-CMOS | HEF 4021 B | 1 |
| IC 2 | 221 771 | IC-CMOS | HEF 4094 B | 1 |
| IC 3 | 231 303 | IC-LINEAR | L 298 | 1 |
| D 1-8 | 221 822 | SI-DIODE | BA-157 | 8 |
| D 9 | 221 114 | SI-DIODE | 1 N 4148 | 1 |
| T 1 | 221 283 | SI-TRANSISTOR | BC 212 B | 1 |
| C 1-3, 9 | 220 334 | MKT-CAPACITOR | 0,1 µF 63 V | 4 |
| C 6 | 220 332 | MKT-CAPACITOR | 0,33 µF 63 V | 1 |
| C 7 | 220 162 | LYTIC | 10 µF 63 V | 1 |
| C 4, 8 | 220 250 | LYTIC | 100 µF 25 V | 2 |
| C 5 | 220 253 | LYTIC | 1000 µF 25 V | 1 |
| R 33 | 221 620 | RESISTOR | 22 Ohm 1/4 W | 1 |
| R 31 | 221 600 | RESISTOR | 100 Ohm 1/4 W | 1 |
| R 25-27 | 221 033 | RESISTOR | 3,3 KOHM 1/4 W | 3 |
| R 19, 28-30 | 221 035 | RESISTOR | 10 KOHM 1/4 W | 4 |
| R 11-18 | 221 603 | RESISTOR | 12 KOHM 1/4 W | 8 |
| R 2-9 | 221 036 | RESISTOR | 15 KOHM 1/4 W | 8 |
| R 32 | 221 604 | RESISTOR | 22 KOHM 1/4 W | 1 |
| R 20 | 221 049 | RESISTOR | 470 KOHM 1/4 W | 1 |
| R 23, 35 | 221 273 | RESISTOR | 10 OHM 1/2 W | 2 |
| R 21, 22 | 221 392 | RESISTOR | 390 OHM 1/2 W | 2 |
| R 24 | 221 692 | WIRE WOUND RESISTOR | 1 OHM | 1 |
| R 36 | 221 169 | WIRE WOUND RESISTOR | 10 OHM | 1 |

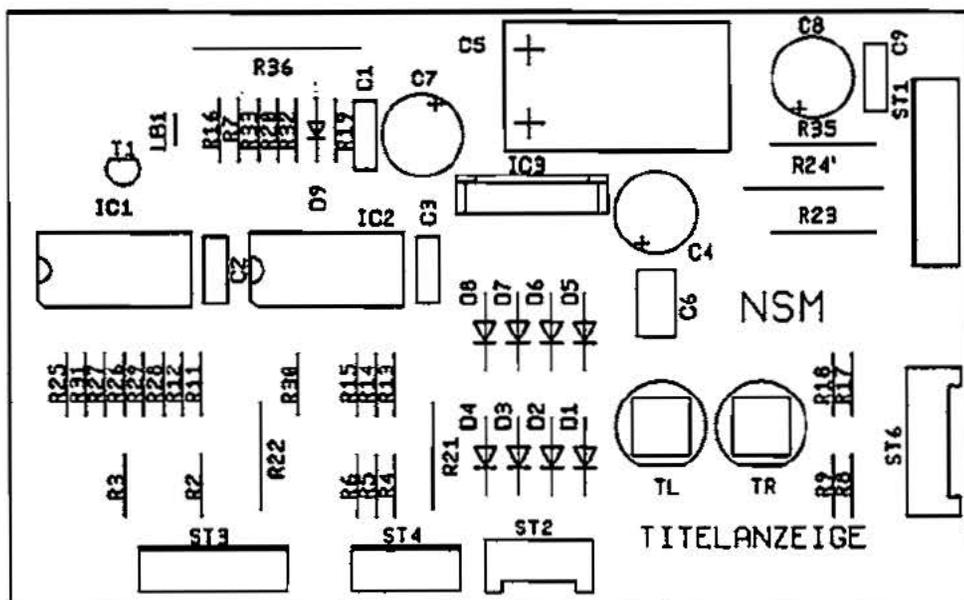

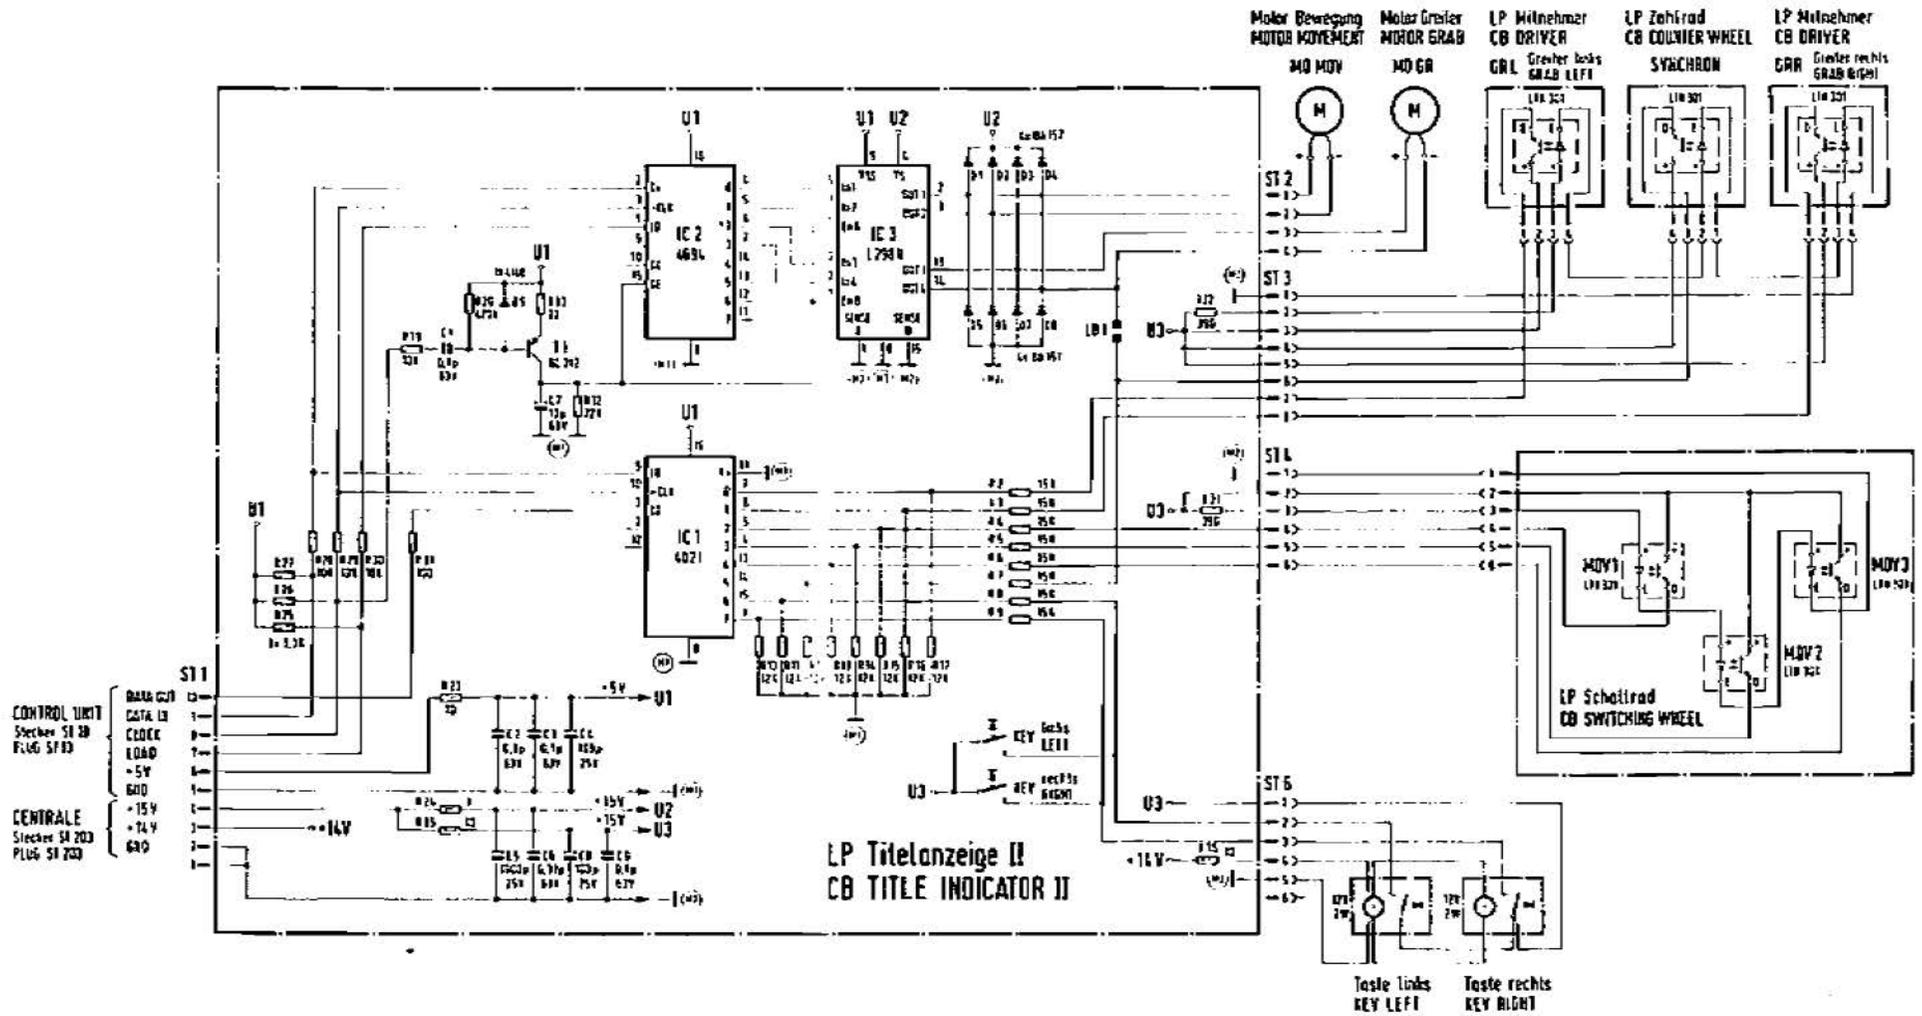

von unten gesehen
BOTTOM VIEW



Draufsicht
TOP VIEW



ÄNDERUNGEN IM SINNE DES 11. UND 10. SCHRIFFTES VERBIBELTEN,
FOLGEN KEINE NACHSTUFEN!
SUBJECT TO TECHNICAL MODIFICATION WITHOUT OBLIGATION
TO MODIFY EQUIPMENT ALREADY DELIVERED!



MUSIKAUTOMATEN
PHONOGRAPHES **ES IV-CD** TECHNOLOGY

Schaltbild
WIRING DIAGRAM **Titelanzeige II**
TITLE INDICATOR II

| | | | | | |
|------|----------|------|-------|--------|-----|
| Rev. | 12 05 60 | Ver. | Brann | Zeich. | ... |
|------|----------|------|-------|--------|-----|

UNIT DESCRIPTION

ELECTR. COIN-AND BILL ACCEPTOR

FOR NSM-PHONOGRAPHS

ES IV-CD TECHNOLOGY

INDEX

1. MECHANICAL COIN CHUTE
2. BILL VALIDATION - DOLLAR BILL ACCEPTOR
3. MARS ELECTRONIC COIN VALIDATOR
 - 3.1. Monetary Value Settings
 - 3.2. Price Tables
 - 3.3. Other Settings/Information

1. MECHANICAL COIN CHUTE

See also the circuit in the wiring diagram in the appendix of the "Technical Information."

The coins that come out of the "good" channels of the coin acceptor run through different optic barriers. The optic barriers are in the coin chute under the coin acceptor.

Two photo transistors, T III and T I as well as T IV and T II are illuminated by one IR diode each (LED I and LED II).

As long as a light barrier is not interrupted by a coin, all photo transistors, T I to T IV, are switched to logically "0." So all output lines

1 = T IV

2 = T III

3 = T I

4 = T II are at logically "0," i.e. their voltage level is 1,0 V.

If a coin passes through an optic beam, the respective photo transistor is darkened for that time. The output becomes log. "1" via the pull-up resistors in the control unit, i.e. their level is 10 V.

Since T I is also darkened, when T III is effected by a coin (T I is behind T III, both are illuminated by the same light diode), the output from T I over T V is kept at "0." This occurs via resistors R 72, R 70; they bring transistor T V in a saturated state when T III is open.

The same goes for T IV; it is kept at "0" by T VI when a coin falls through T II. The control for T VI occurs via R 73, R 69.

The addition button is switched in sequence to T IV so that line 1 becomes log. "1" at service credit.

R 67 limits the current of the luminous diodes LED I and LED II.

The output signals of the four photo transistors are evaluated in the control unit whereby line

1 = P 54

2 = P 53

3 = P 52

4 = P 51 is assigned to the monetary value setting in the service program and is to be programmed according to the coin value; see "Statistics and Service Programs," Section 14.

2. BILL VALIDATION - DOLLAR BILL ACCEPTOR

See also the circuit in the wiring diagram in the appendix of the "Technical Information."

The bill validator, after the bill has passed through and been accepted, sends as many pulses to the control unit as correspond to the value of the bill.

The output of the bill validator is connected to the control unit via ST 9, Pins 1 and 2. 1 pulse is sent to the control unit with 1 dollar and 5 pulses with 5 dollars.

The input of the bill validator is assigned to program step P 55 and is to be programmed accordingly; see "Statistics and Service Programs," Section 14.

3. MARS ELECTRONIC COIN VALIDATOR

4 or 5 different coins can be checked depending on the type. The three sensors in the validator register each separately the width, material composition and pressure of each deposited coin. If a deposited coin passes the sensors, the prepared data are passed on to a register and compared with the contents of a memory (PROM). If all validation criteria are identical with a data set of the PROM, an internal "valid" signal is produced. Depending on the coin value it goes as output signal A1 to A5 to the plug of the PCB adapter (depending on type of validator, 15 or 13 poled). From there the signal goes via the 6-pole plug to control unit CD for processing.

3.1. Monetary Value Settings

The information in the "Operating Instructions" and the statistics and service program about monetary value settings refer to coin mechanisms with mechanical coin acceptors.

If a electronic validator has been installed, the monetary value settings in the individual program steps are assigned to corresponding output signals: P51 to signal (A1) or (A5), P52 to (A3), P53 to (A4), P54 to (A2).

Notice: When inserting a coin during program steps 50-55, the program step (channel P51 to P55) assigned to the coin is automatically displayed in Display 1.

The monetary values are programmed in monetary value units: "001" $\hat{=}$ 0,10 DM, "010" $\hat{=}$ 1,- DM, "020" $\hat{=}$ 2,- DM, "050" $\hat{=}$ 5,- DM. No-used channels are programmed with "000".

3.2. Price Tables

Set the number of credit per monetary value in program steps P41 to P45 as described in the "Statistics" and Service Program, 1.3.2. Price Tables".

3.3. Other Settings/Information

When exchanging the control unit the programming has to be done in the new unit also.

Attention! When checking the monetary value settings in P54, the cabinet switch has to be pushed in; otherwise only one credit will be displayed instead of set coin value.

Notice: Non-used channels can be blocked. For this purpose the bridge of the corresponding channel (A1)-A5 on the PCB) has to be disconnected or conductor A 5 is not connected.

When exchanging please observe the following:

The validators of series B1 may have different mounting studs; compare the following text to Fig. 2.

- The lower stud can be set on Pos. 1 or Pos. 2 as needed. To loosen the stud position unscrew the cover (3) and pull down, (4) unlatch the stud, pull out and push it in at the desired position until it locks in.
- If former validator was fastened with 2 screws, then exchange validator has to be fastened with plug-in studs as follows:
Drill a hole below into the plate with a diameter of 5,1 mm. Stick the stud positioned to the validator through the hole and secure it with clip 4,5 (712 011). Then screw on by upper fastening screw.

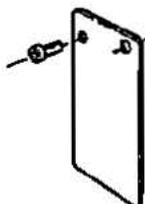


Fig. 1


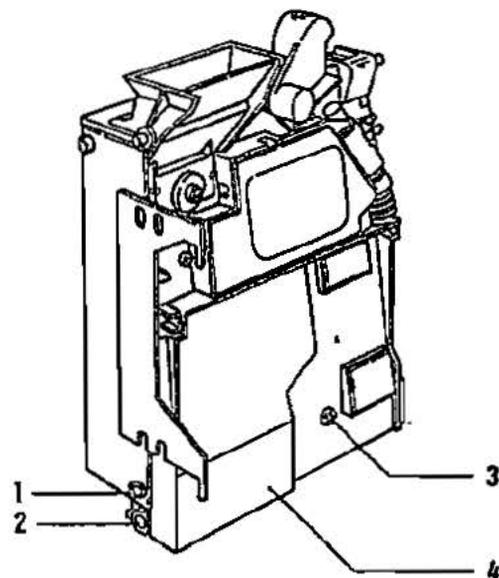


Fig. 2

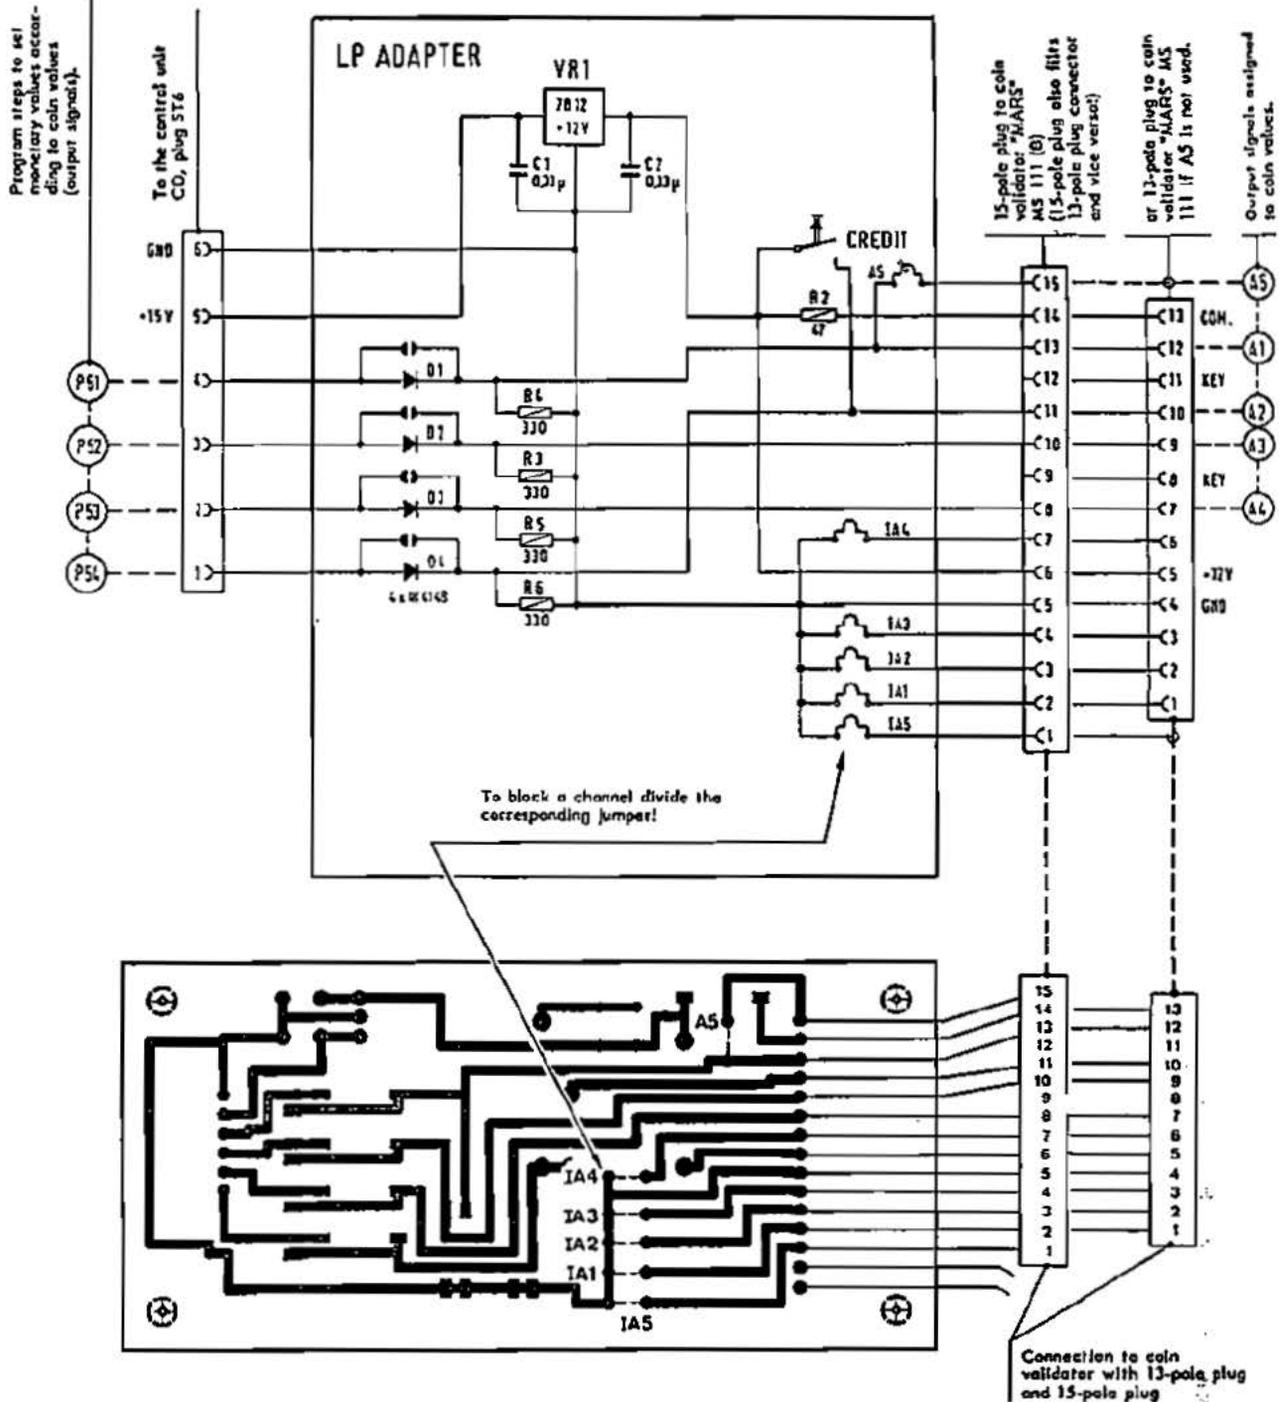

MONETARY VALUE SETTINGS SEE BACK PAGE

Programming Table for Mars-Coin acceptor

in 209 827 - PAGE 1005/1006
 in 174 074 - PAGE 33/34
 in 174 328 - PAGE 19/20

209 955 A

Monetary Value Settings

Programming of monetary values and values settings according to the individual coins (see 3.1.).

| Currency | Monetary Value P51 (A1/A5) | Units $\hat{=}$ Coin Value P52 (A3) | Monetary Value P53 (A4) | P54 (A2) | Disconnect Jumpers | Coin Validator - Type |
|------------------|---|---------------------------------------|-------------------------|----------------------------|--------------------|-------------------------------|
| Germany | 050 $\hat{=}$ 5,- DM | 010 $\hat{=}$ 1,- DM | 000 $\hat{=}$ 00 | 020 $\hat{=}$ 2,- DM | IA4/IA5 | GBE 58 L00C / B1 |
| Great Britain | 100 $\hat{=}$ 1 £ | 020 $\hat{=}$ 20p | 010 $\hat{=}$ 10p | 050 $\hat{=}$ 50p | | GDB 31 L00C / GGB81 L00C / B1 |
| USA | 100 $\hat{=}$ 1 \$ | 025 $\hat{=}$ 25 c | 000 $\hat{=}$ 00 | 050 $\hat{=}$ 50 c | IA4 | GUS 20 L00C |
| Australia | 000 $\hat{=}$ 00 | 100 $\hat{=}$ 1 \$ | 020 $\hat{=}$ 20c | 200 $\hat{=}$ 2 \$ | | GAS XX L00C B1 GAS 1A L00C |
| | 200 $\hat{=}$ 2 \$ | 000 $\hat{=}$ (50c) | 020 $\hat{=}$ 20c | 100 $\hat{=}$ 1 \$ | IA 3 | GAS 28 L00C |
| France | 100 $\hat{=}$ 10 F | 020 $\hat{=}$ 2 F | 010 $\hat{=}$ 1 F | 050 $\hat{=}$ 5 F | | GFR 19 L00C |
| | 100 $\hat{=}$ $\frac{10}{10}$ F (old) 10 F (new) | 020 $\hat{=}$ 2 F | 010 $\hat{=}$ 1 F | 050 $\hat{=}$ 5 F | | GFR 96 L00C / B1 * |
| Denmark | 000 $\hat{=}$ 00 | 050 $\hat{=}$ 5 dkr | 010 $\hat{=}$ 1 dkr | 100 $\hat{=}$ 10 dkr | | by 3-Canal GDK xx L00C |
| | 100 $\hat{=}$ 10 dkr | 010 $\hat{=}$ 1 dkr | 000 $\hat{=}$ 0,25 dkr | 050 $\hat{=}$ 5 dkr | IA4 | by 4-Canal GDK 02 L00C |
| | 100 $\hat{=}$ 10 dkr (new) | 050 $\hat{=}$ 5 dkr | 010 $\hat{=}$ 1 dkr | 100 $\hat{=}$ 10 dkr (old) | | by 4-Canal GDK 1A L00C |
| | 200 $\hat{=}$ 20 dkr | 050 $\hat{=}$ 5 dkr | 010 $\hat{=}$ 1 dkr | 100 $\hat{=}$ 10 dkr | | GDK 1D L00C |
| Finland | 000 $\hat{=}$ 00 | 050 $\hat{=}$ 5 MK | 010 $\hat{=}$ 1 MK | 000 $\hat{=}$ 00 | | GSF 1A L00C |
| Austria | 200 $\hat{=}$ 20 S | 050 $\hat{=}$ 5 S | 010 $\hat{=}$ 1 S | 100 $\hat{=}$ 10 S | | GAU 03 L00C |
| Netherl.Antillen | 000 | 000 | 100 $\hat{=}$ 1 NAF | 000 | | GNA 1 AL 00G / B1 |
| Switzerland | 050 $\hat{=}$ 5 Fr | 010 $\hat{=}$ 1 Fr | 000 $\hat{=}$ 1/2 Fr | 020 $\hat{=}$ 2 Fr | IA4/IA5 | GCH 31 L00C / B1 |
| Belguim | 050 $\hat{=}$ 50 F | 000 $\hat{=}$ 5 F (new) | 000 $\hat{=}$ 1 F | 020 $\hat{=}$ 20 F | IA3/IA4 | GBE 19 L00C / B1 |
| | 050 $\hat{=}$ $\frac{50}{1}$ F (new) | 000 $\hat{=}$ 5 F (new) | 000 $\hat{=}$ 1 F (old) | 020 $\hat{=}$ 20 F | IA3/IA4/IA5 | GBE 25 L00C / B1 |
| Netherland | 025 $\hat{=}$ 25 c | 250 $\hat{=}$ 2 1/2 hfl | 500 $\hat{=}$ 5 hfl | 100 $\hat{=}$ 1 hfl | | GNL 37 L00C / B1 |
| Italy | 050 $\hat{=}$ 500 L | 000 (100 L) | 000 (50 L) | 020 $\hat{=}$ 200 L | IA3/IA4 | GIT 06 L00C |
| USA | 010 $\hat{=}$ (10c) | 050 $\hat{=}$ (50c) | 025 $\hat{=}$ 25c | 100 $\hat{=}$ (1 \$) | IA5 | GUS 1 B L00C / B1 |
| New Zealand | 050 $\hat{=}$ 50 c | 010 $\hat{=}$ $\frac{10}{1}$ SHILLING | 005 $\hat{=}$ 5 c | 020 $\hat{=}$ 20 | | GNZ 03 L00C |
| Canada | 010 $\hat{=}$ 10 c | 100 $\hat{=}$ 1 \$ | 025 $\hat{=}$ 25 c | 000 | | GCN 1A L00C |
| Spain | 200 $\hat{=}$ 200 Pst | 050 $\hat{=}$ 50 Pst | 025 $\hat{=}$ 25 Pst | 100 $\hat{=}$ 100 Pst | | GES 1 J L00C |
| Norway | 100 $\hat{=}$ 10 Kr | 010 $\hat{=}$ 1 Kr | (000 $\hat{=}$ 1/2 Kr) | 050 $\hat{=}$ 5 Kr | IA4 | GN 008 L00C |
| Sweden | 050 $\hat{=}$ 5 Kr | 010 $\hat{=}$ 1 Kr | 000 $\hat{=}$ (50 örn) | 010 $\hat{=}$ 1 Kr | IA 4 | GSW 09 L00C |
| Greece | (010) MP closed | 050 $\hat{=}$ 50 Dr | 020 $\hat{=}$ 20 Dr | 000 | | GGR 1 CL00C |
| Korea | 000 | 010 $\hat{=}$ 10 NTS | 005 $\hat{=}$ 5 NTS | 000 | | GTW 1A L00C |
| Mexico | 000 | 000 | 010 $\hat{=}$ 1000 P | 000 | | GME 1A L00C |

*: A5 and Jumpers closed

UNIT DESCRIPTION

REMOTE CONTROL


FOR NSM-PHONOGRAPHS

ES IV-CD TECHNOLOGY



INDEX

1. FUNCTION
- 1.1. Infrared remote control (wireless)
- 1.2. Wired remote control
- 1.3. Installation instructions for infrared remote control
- 1.4. Volume control (on rear cabinet wall)

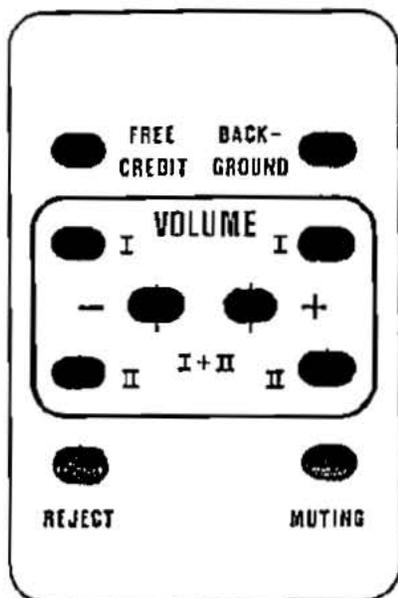


INFRARED REMOTE CONTROL, ASSY.

| | |
|---------------------------------|---------|
| Part No. | 171 808 |
| with sender | 217 817 |
| Receiver | 173 178 |
| and connection cable (standard) | 171 883 |
| Connection cable (5 m) | 170 459 |

REMOTE CONTROL with 5 m cable

| | |
|----------|---------|
| Part No. | 171 743 |
|----------|---------|

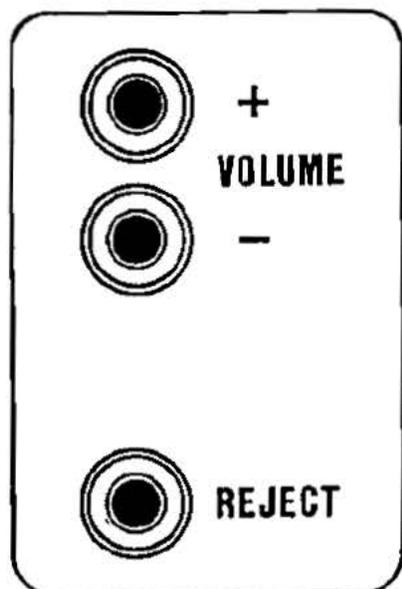

VOLUME CONTROL (rear wall of box; although not in wallboxes or Hide-Away's).

| | |
|----------|---------|
| Part No. | 170 212 |
|----------|---------|

1. FUNCTION

1.1. Infrared remote control (wireless)

The cable of the remote control receiver has to be put into plug ST 205 of the central unit.

Pin 1 supplies the + 15 V voltage.

Pin 2 = GND

The commands - as per chart - are fed to the computer inputs via Pins 3 through 6 by switching to ground.

The signals go to the control unit via plug ST 201.

1.2. Wired remote control

For remote controls with cable the plug has to be connected with ST 205 on the central unit (instead of infrared remote control).

The corresponding channels (Pins 3 through 6) - as per chart - are connected to GND Pin 2 via the remote control diode linkage.

| TASTE / KEY | AUSGANGS- OUTPUT- CODE | STECKER / PLUG ST 205 / PIN |
|-----------------|------------------------------|--------------------------------|
| VOLUME - I | 2 / 4 | 5 / 3 |
| VOLUME + I | 4 | 3 |
| VOLUME - II | 2 / 3 | 5 / 4 |
| VOLUME + II | 3 | 4 |
| FREE CREDIT | 1 / 3 | 6 / 4 |
| BACKGROUND | 1 / 4 | 6 / 3 |
| REJECT | 2 | 5 |
| MUTING | 1 | 6 |
| VOLUME + (I+II) | 3 / 4 | 4 / 3 |
| VOLUME - (I+II) | 2 / 3 / 4 | 5 / 4 / 3 |

1.3. Installation Instructions for Infrared Remote Control

The receiver with standard connection cable is mounted onto the back of the cabinet or the back of the hood when a small distance is involved. The top (receiving side) of the receiver should be mounted a little underneath the upper edge of the rear cabinet. Wallboxes and Hide-Away's have to be mounted close to the machine.

If a greater distance has to be bridged or an absorbing ceiling is influencing correct functioning the receiver has to be mounted in such a way on the wall or the ceiling that direct radiating of the manual sender is possible. A connection cable (5 m), Part. Nr. 170 459, is available for this purpose.

The connection cable of the receiver is put into plug S 205 of the central unit.

SECURING MANUAL SENDER

To protect the manual sender from theft, mount the bracket with two screws onto the back of the sender (see fig.). This way the sender can be secured with a chain.

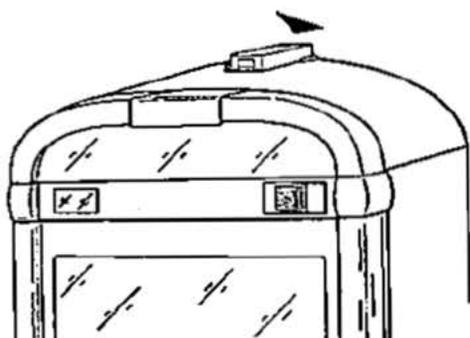


Fig. 1

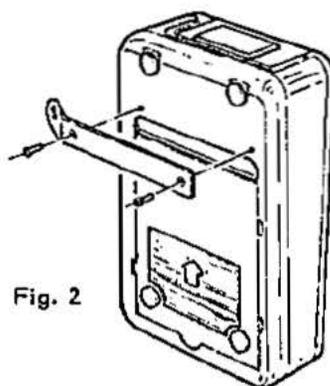


Fig. 2

Manual sender with safety bracket and screws

1.4. Volume Control (On Rear Cabinet Wall does not apply to wallboxes and Hide-Away's).

The connection cable must be put into plug ST 206 of the central unit. When the volume keys are pressed, the computer inputs are switched to GND via the diode linkage D 213 - D 217.

| TASTE / KEY | AUSGANGS- OUTPUT- CODE | STECKER / PLUG ST 204 / PIN |
|-----------------|------------------------------|--------------------------------|
| VOLUME + (I-II) | 3 / 4 | 3 / 2 |
| VOLUME - (I-II) | 2 / 3 / 4 | 4 / 3 / 2 |
| REJECT | 2 | 4 |

UNIT DESCRIPTION

LIGHT GENERATOR / ORGAN

FOR NSM-PHONOGRAPH

ES IV/CD-TECHNOLOGY

NSM

Aktiengesellschaft
Saarlandstraße 240
6530 Bingen am Rhein
Telefon: 0 67 21 / 407-0
Telefax: 0 67 21 / 407 510

PART-№ -
219 068

INDEX

1. FUNCTION
 - 1.1. The circuit plate "Light generator"
 - 1.2. Phase gating control
 - 1.3. Light generator/organ
 - 1.4. Permanent light
2. Spare parts list
3. Wiring diagram

1. FUNCTION

1.1. Light generator/organ PCB

The circuit board contains a six channel phase gating control for pulsating light and light generating.

In each case two channels are combined for the three channel light console with second order active filters (base, medium, treble tones).

The microprocessor controlled light generating can be adjusted individually with the aid of the service program.

Computer control allows a multitude of custom adjustments: light console, continuous light, pulsating light, 15 different light generating patterns with 4 speed ranges.

The sensitivity of the light console and adaptation to 50 Hz or 60 Hz is possible with the controls on the circuit board.

Each channel of the light console is protected against short-circuit and overloading by fuses.

1.2. Phase Gating Control

The 100 Hz signal coming from the two-way rectifier via ST 01, Pin 7 generates an in-phase sawtooth signal with the ϕ current switch IC 705, Pin 1, 6, 7 at C 722. Adjustment of the slope for 50 Hz or 60 Hz can be accomplished with trimmer TR 701.

The sawtooth signal is the reference voltage for the 6 comparators IC 705, Pin 8, 9, 14; IC 705, Pin 10, 11, 13; IC 704, Pin 4, 5, 2; IC 704, Pin 6, 7, 1; IC 704, Pin 8, 9, 14 and IC 705, Pin 10, 11, 13.

The A 1 connections of the 6 triacs TIC 701 through TIC 706 are connected to +15 V over the fuses S 701 through 703.

When the sawtooth signal (-input) reaches the value of the voltage on the + input of the comparator the output switches through to ground providing the gate trigger current for the corresponding triac over the resistor R 737 through 742.

1.3. Light generator/organ

An analog signal is generated by the computer at IC 702, Pin 3 with port IC 701 over the resistors R 706 through R 713 which are connected to form a D/A converter.

Capacitors C 111 through C 116 are charged via the multiplexer IC 702. The voltage on the capacitors controls the brightness of the corresponding channel.

1.4. Light console

High pass filter: IC 703, Pin 12, 13, 14; R 729, R 730; C 705, C 706 cutoff frequency approx. 1000 Hz.

Band pass filter: IC 703, Pin 5, 6, 7; R 731; C 706, C 707 center frequency approx. 330 Hz, bandwidth approx. 100 Hz.

Low pass filter: IC 703, Pin 8, 9, 10; R 734, R 735; C 709, C 710 cutoff frequency approx. 100 Hz.


IC 703, Pin 1, 2, 3 amplifies the AF signal coming from ST 701, Pin 2 when IC 701, Pin 11 is HIGH and therefore IC 705, Pin 2 is equal to 0 V.

The gain can be adjusted with trimmer TR 702.

The diodes D 704 and D 705 and the capacitors C 711 through C 716 together with the multiplexer IC 702 via the impedance of the D/A converter form envelope curve converters.

The 2 DC voltages generated by the AC output voltage of a filter at the + input of the comparators, which follow the envelope curve of the AC voltage, control the brightness of the associated channels.

SPARE PARTS LIST

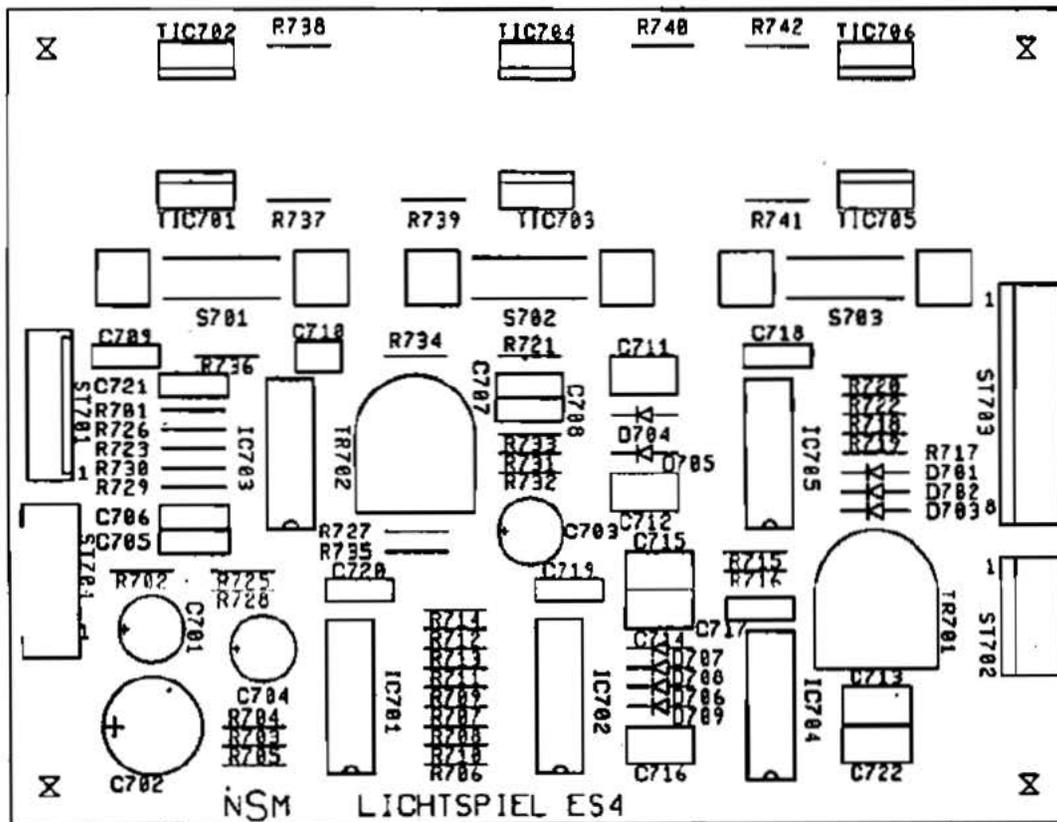


SPARE PARTS LIST

| POS. | PART-No | DESCRIPTION | DATA | QTY |
|--|---------|--------------------------|--------------------|-----|
| | 171 653 | LP-LIGHT GENERATOR/ORGAN | ES IV 50/60 Hz | 1 |
| S701-703 | 225 689 | FUSE HOLDER | | 6 |
| | 225 029 | FUSE | T 3,15 A slo blo | 3 |
| | 150 687 | COOLING PLATE | | 1 |
| ST 701 | 225 444 | PIN PLUG | 8 PRONGS | 1 |
| ST 702 | 225 326 | PIN PLUG | 4 PRONGS | 1 |
| ST 703 | 225 329 | PIN PLUG | 8 PRONGS | 1 |
| ST 704 | 225 652 | PIN PLUG | 6 PRONGS | 1 |
| R701,702 | 221 611 | RESISTOR | 10 Ohm 1/4 W | 2 |
| R719,727 | 221 029 | RESISTOR | 1 KOhm 1/4 W | 2 |
| R 725 | 221 627 | RESISTOR | 1,2 KOhm 1/4 W | 1 |
| R728,737-742 | 221 031 | RESISTOR | 2,2 KOhm 1/4 W | 7 |
| R 732 | 221 032 | RESISTOR | 2,7 KOhm 1/4 W | 1 |
| R 729 | 221 628 | RESISTOR | 3,9 KOhm 1/4 W | 1 |
| R 730 | 221 625 | RESISTOR | 5,6 KOhm 1/4 W | 1 |
| R703-705,716 | 221 035 | RESISTOR | 10 KOhm 1/4 W | 4 |
| R708,710,712, 715,720 | 221 604 | RESISTOR | 22 KOhm 1/4 W | 5 |
| R734-736 | 221 037 | RESISTOR | 33 KOhm 1/4 W | 3 |
| R706,707,709, 711,713,714, 722,723,731 | 221 038 | RESISTOR | 47 KOhm 1/4 W | 9 |
| R 717 | 221 039 | RESISTOR | 56 KOhm 1/4 W | 1 |
| R718,726,733 | 221 048 | RESISTOR | 100 KOhm 1/4 W | 3 |
| TR 701 | 221 407 | TRIMMER RESISTOR | 47 KOhm 0,15 W | 1 |
| TR 702 | 221 157 | TRIMMER RESISTOR | 470 KOhm 0,15 W | 1 |
| C705-709 | 220 335 | MKT-CAPACITOR | 0,022 μ F 63 V | 5 |
| C710,717-721 | 220 334 | MKT-CAPACITOR | 0,1 μ F 63 V | 3 |
| C711-716,722 | 220 332 | MKT-CAPACITOR | 0,33 μ F 63 V | 7 |
| C701,703,704 | 220 162 | LYTIC | 10 μ F 63 V | 3 |
| C 702 | 220 250 | LYTIC | 100 μ F 25 V | 1 |
| D701-709 | 221 114 | SI-DIODE | 1 N 4148 | 9 |
| IC 701 | 221 771 | IC-CMOS | HEF 4094 B | 1 |
| IC 702 | 231 269 | IC-CMOS | MC 14 051 | 1 |
| IC 703 | 231 054 | IC-LINEAR | LM 324 W | 1 |
| IC704,705 | 221 813 | IC-LINEAR | LM 339 | 2 |
| TIC 701-706 | 231 028 | TRIAC | TIC 206 D | 6 |

CONTROL UNIT - CD Stecker SI 3
PLUG ST 3

ST 704 GND 1 2 -5V 3 DATA 4 CLOCK 5 13AD 6 GND 7 8

ST 701
CENTRALE-CD
Stecker ST 207
PLUG ST 207

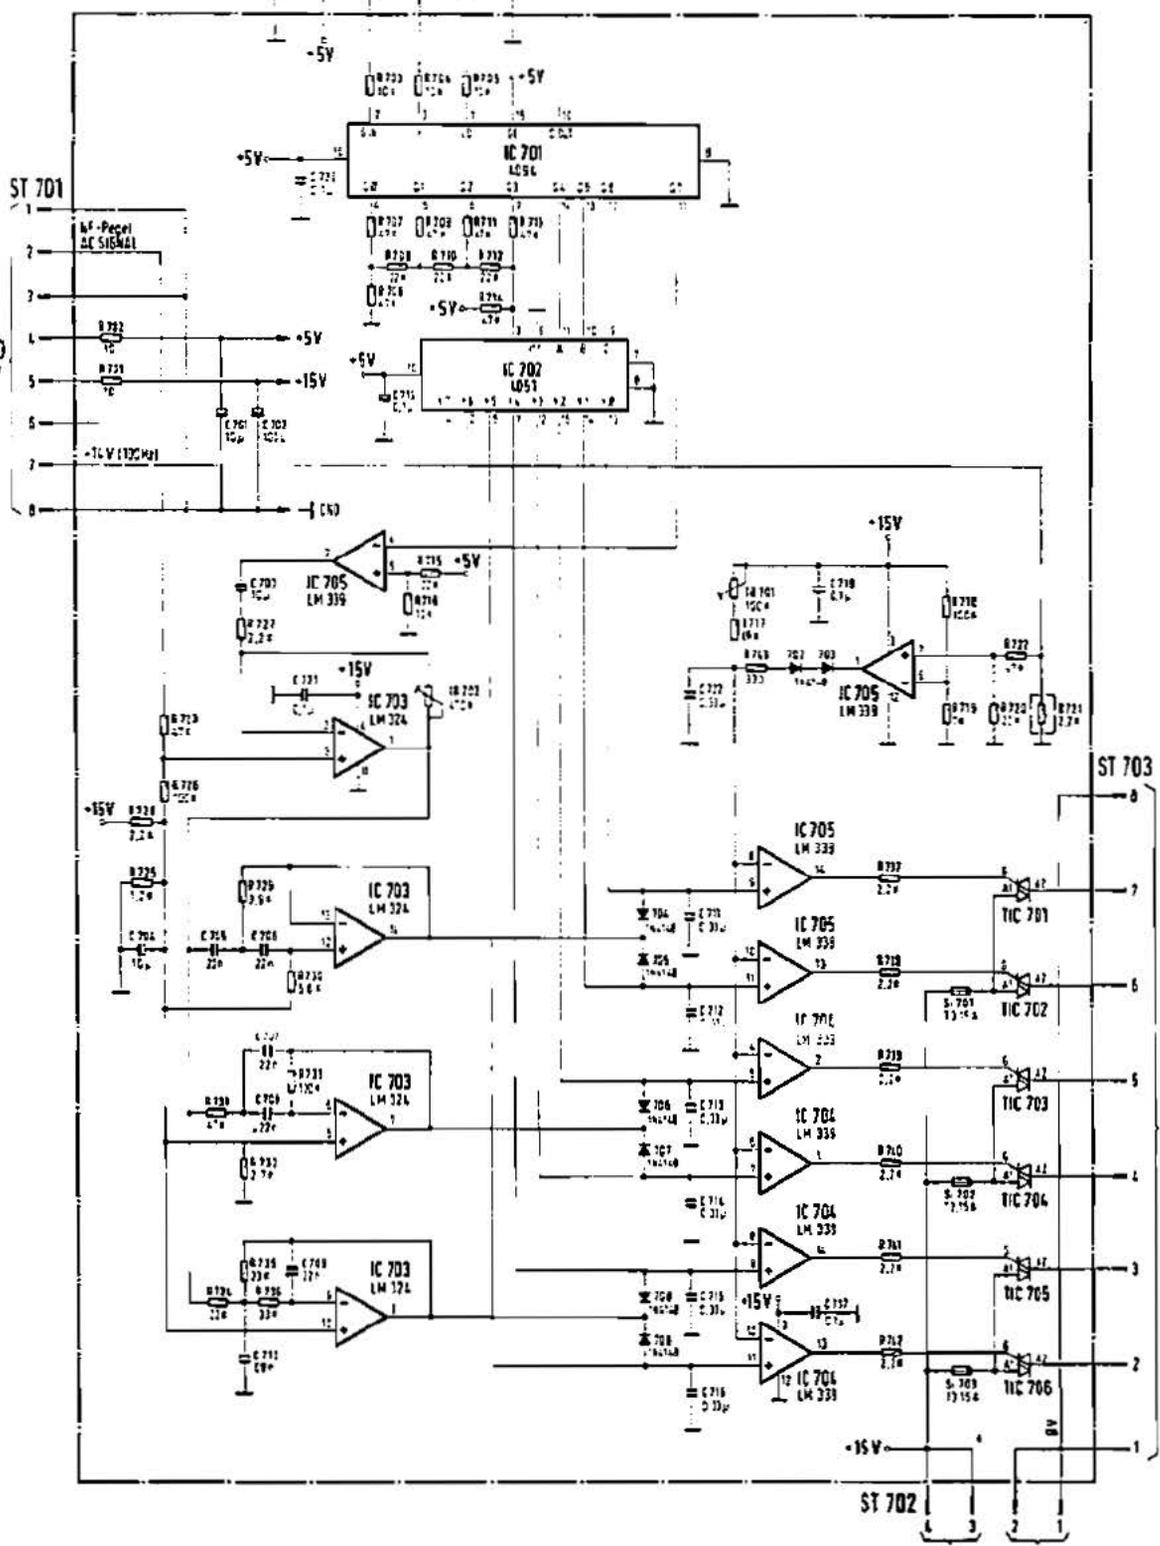

Beleuchtung
Lichtspiel
ILLUMINATION
LIGHT GENERATOR/ORGAN


Gerasterte Bauteile sind nicht eingebaut!
DOTTED COMPONENTS ARE NOT INSTALLED!

Alle Sicherungen träge.
ALL FUSES SLD BLO.

Sicherungen nur durch solche mit gleichen Werten ersetzen.
REPLACE FUSES ONLY BY THOSE OF THE SAME VALUE.

ÄNDERUNGEN IM SINNE DES TECHN. FORTSCHRITTES VORBEHALTEN.
JEDOCHE KEINE NACHRUFPLICHT!

SUBJECT TO TECHNICAL MODIFICATION WITHOUT OBLIGATION
TO MODIFY EQUIPMENT ALREADY DELIVERED!

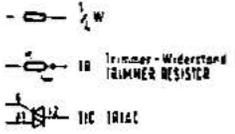

Draufsicht
TOP VIEW
TIC 701 - TIC 706

Schaltplatte
JUNCTION PLATE
Trotz Beleuchtung
TRANSFORMER
ILLUMINATION

MUSIKAUTOMATEN
PHONOGRAPHS **ES IV-CD** TECHNOLOGY

Schaltbild Lichtspiel
WIRING DIAGRAM LIGHT GENERATOR/ORGAN

17 08 50 17 08 50 17 08 50 17 08 50 17 08 50

1206

UNIT DESCRIPTION

OUTPUT TRANSFORMER

FOR NSM-PHONOGRAPHS

ES IV-CD TECHNOLOGY

NSM

Aktiengesellschaft
Saarlandstraße 240
6530 Bingen am Rhein
Telefon: 067 21/407-0
Telefax: 067 21/407 510

— PART-№ —
209 829 A


OUTPUT TRANSFORMER with cable harness

Part. No. 172 431


The output transformer is connected directly to the terminals of the output amplifier. It has an input impedance of 4 ohms and transforms the input voltage down so that smaller output voltages are available at Connection Terminals 1 through 5 permitting speakers with lower impedances to be connected.

A number of loudspeakers can be connected together (in parallel) up to a total maximum power of ~130 W music power per channel; depending on how much power is taken directly from the amplifier.

The table below shows the power required for a loudspeaker with the corresponding impedance at Connection Terminals 0-1 through 0-5. Also observe the output transformer diagram and connection schematics. Further information is given in the "TECHNICAL INSTRUCTIONS" under "Loudspeaker Connection".

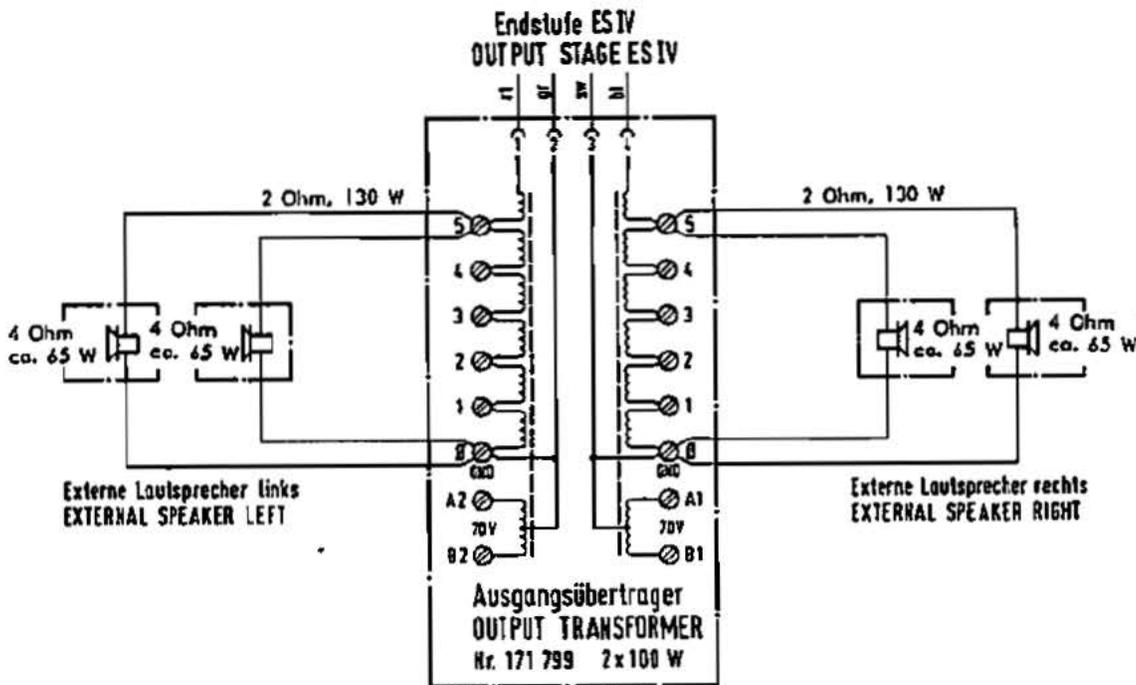

**Anschlußschema für Ausgangsübertrager
CONNECTION DIAGRAM FOR OUTPUT TRANSFORMER**

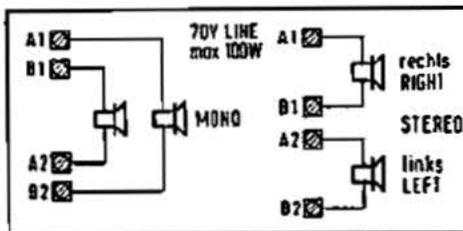

| Klemme TERMINAL POSITION | Lautsprecher SPEAKER | | | |
|--------------------------------|-------------------------|-------|------|-------|
| | 2,5 Ω | 4 Ω | 8 Ω | 16 Ω |
| 0 - 5 | 100 W | 70 W | 45 W | 27 W |
| 0 - 4 | 45 W | 30 W | 16 W | 8 W |
| 0 - 3 | 24 W | 15 W | 8 W | 4 W |
| 0 - 2 | 12 W | 7,5 W | 4 W | 2 W |
| 0 - 1 | 3 W | 1,8 W | 1 W | 0,5 W |

Maximum Power Output Connections

The maximum power output of the amplifier is 2x200 W music power at 2 ohms.

The following is an example of how to connect external loudspeakers to the "CD GALAXY": The phonograph itself consumes (when directly connected at 5,5 ohm impedance) 2x70 watts.

Therefore, 2x130 W is still available for external loudspeakers.

For example, two 4-ohm loudspeakers each can be connected to Terminals 0-5 (see diagram) or four loudspeakers (with 4 ohms each) can be connected to Terminals 0-4.

Example for connection of wallboxes or Hide-Away's

If loudspeakers with 4 ohm are connected directly to a wallbox or Hide-Away, the consumption is 100 watts; therefore, there is only 100 watts left for the loudspeaker connected to the transformer.

Connection for Lower Phonograph Output Power

When full power is not required from the phonograph, it can be connected to the corresponding terminals of the transformer and external loudspeakers can then be connected directly to the output amplifier for higher output.

70 V - High Voltage Output

Additionally, the transformer also has a 70 V high-voltage output (A1-B1/A2-B2) for each channel.


These features are provided for operation of a widespread external loudspeaker system whereby the higher voltages keep the line losses low. Only loudspeakers with input transformers (so-called high-impedance loudspeakers of 50 ohms upwards) can be connected to this terminal. These outputs also provide a maximum of 100 W music power each, e.g. two 50 W loudspeakers (200 ohms) can be connected to each channel.

| Lautsprecher-Impedanz Loudspeaker -Impedance | Ausgangsleistung A1-B1 Output power A2-B2 |
|---|--|
| 50 Ohm | 100 W |
| 100 Ohm | 50 W |
| 150 Ohm | 35 W |
| 200 Ohm | 28 W |
| 250 Ohm | 20 W |

The total wattage of all remote loudspeakers connected to one channel of the output transformer (whether low impedance, high impedance or combined) may not exceed max. 130 W.


HV - MONO Mode

Since the high-voltage coils are connected with their center, a loudspeaker connected to A1-B2 or B1-A2 radiates sound from both (stereo) channels; for this mono mode no special NF-coupling of the channels is necessary, coupling is provided by the transformer.

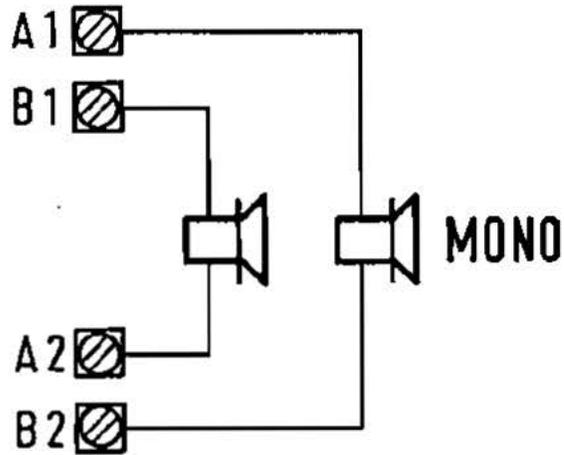

HV - STEREO Mode

If the loudspeakers are connected to A1-B1 and A2-B2, stereo mode is possible, but without NF-coupling of the channels.

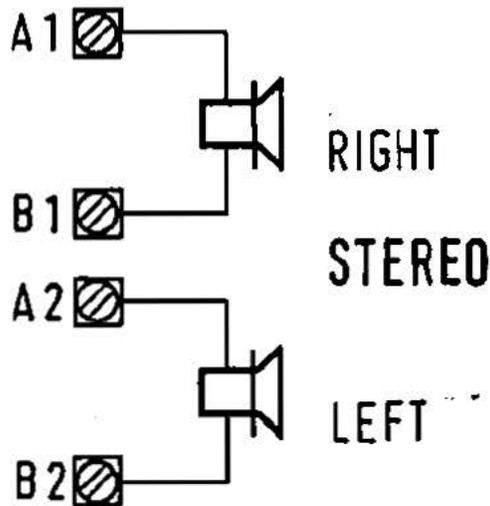

TROUBLE SHOOTING

FOR NSM-PHONOGRAPHS

ES IV-CD TECHNOLOGY

INDEX

- 1. TROUBLE SHOOTING
 - 1.1. Description of malfunction/cause
 - 1.2. Error displays
 - 1.3. Trouble shooting for NSM phonographs ES-IV/CD technology

1. TROUBLE SHOOTING

1.1. Description of malfunction/cause

| DESCRIPTION | CAUSE |
|--|--|
| Phonograph illumination and LED's in central unit/CD supply do not light up. | <ol style="list-style-type: none">1. Power cord2. Main switch3. Power fuse (switch plate/fuse box) |
| Phonograph illumination okay, LED's in central unit do not light up. | <ol style="list-style-type: none">1. Plug connection ST 200 of central unit2. Fuses Si 201-205 of central unit3. Power transformer connection |
| Luminous effect lights do not light up. (Only for phonographs with light generator) | <ol style="list-style-type: none">1. Fuse T 8 A on switch plate2. Fuses Si 701-703 as well as3. Plug connection of luminous effects PCB |
| Fan for output stage does not run while disc is playing. | <ol style="list-style-type: none">1. Plug connection ST 2092. Triac TIC 2003. Transistors T 204/205 |
| +5 V; +15 V LED's in central unit do not light up or are darker Fuses are okay | <ol style="list-style-type: none">1. Voltage regulators VR 201-203 in central unit defective2. Short circuit in connected units. (Pull plugs one after another and observe LED's) |
| No tone signal at loudspeaker even though a CD is playing and the volume is switched on. | <ol style="list-style-type: none">1. Loudspeaker connection2. Plug connection of frequency network and output transformer3. Interruption on signal wire (plug connection "ST" 4 pol. of central unit to "ST 2" on changer adapter, from "ST 3" on changer adapter to decoder board). |
| Volume reduced by electronic protection device | <ol style="list-style-type: none">1. Loudspeaker mismatch (less than 2 ohms impedance) due to remote speakers.2. Transistor T 252 defective3. Output transistor defective4. Control unit defective |
| Poor bass reproduction | Loudspeaker connections reversed |
| Er xx-display | See "Error Displays" |

1.2. Error Displays

| Displays | | | Possible Causes | Corrections |
|----------|----|----|---|---|
| 1 | 2 | 3 | | |
| | Er | 01 | EPROM contents (CONTROL UNIT) interrupted. | Change EPROM (IC 2). |
| | Er | 10 | RAM (CONTROL UNIT) defective. | Change RAM (IC 3). After that reprogram all program steps (P20-P56). |
| | Er | 11 | RAM contents (CONTROL UNIT) short-term disturbance. | No correction necessary; program is reinitialized. Change RAM IC 3 if frequently occurring. |
| | Er | 20 | Verification errors in program (CONTROL UNIT). | No correction necessary; program is reinitialized. Change CPU IC 1 if frequently occurring. |
| Pxx | Er | 30 | Memory contents (CONTROL UNIT) invalid. | No correction necessary; program step Pxx (in Display 1) is automatically reprogrammed. |
| Pxx | Er | 31 | Memory contents (CONTROL UNIT) invalid or not programmed. | Service step Pxx shown in Display 1 must be reprogrammed. |
| Pxx | Er | 40 | Wrong price setting. | Check price setting and, if necessary, reprogram (P41-P45, check sequence). |
| | Er | 50 | Coin mechanism defective. Too much credit. | Check coin mechanism. |
| | Er | 6x | Error at CD player. | See Er 60 - Er 62. Play interrupted after error. |
| | Er | 60 | Error before playing CD (track selection). No supply voltage present for decoder or player. | Exchange decoder board, microcomputer T018 on pickup driver (IC8). Check primary fuse in CD transformer. |
| | Er | 61 | No CD recognized by player. No CD in CD tray, CD defective. Player defective. Decoder board defective. No supply voltage present for decoder or player. | Check CD and exchange if needed. Laser player (CDM-3). Exchange decoder board. Check primary fuse in CD transformer. |
| | Er | 62 | Error after playing CD (stop). | As in Er 60. |
| | Er | 63 | Track cannot be played (CD defective) or choosing a track number which is too high (error display appears only during continuous test P 60/3 or P 60/4; during regular operation track No. 1 is played when choosing a track number which is too high). | Exchange CD, check track selection. |
| | Er | 7x | Malfunction on CD changer. | See Er 70 - Er 76. If error display does not disappear after 2 sec., error cannot be automatically corrected. No CD will be played until cabinet switch or "power on" is activated. |
| | Er | 70 | CD tray after playing CD incorrect in pickup. | Check function of light barriers OPPUM, OPGRL, OPGRR. |
| | Er | 71 | Error during grip from left-side magazine. | Check alignment from magazine to pickup assy and adjust if necessary. Check function of light barrier OPPUM. |
| | Er | 72 | Error during grip from right-side magazine. | As in Er 71. |
| | Er | 73 | Error during replacing in left-side magazine. Malfunction of left grip lever. | Check alignment of magazine to pickup assy and adjust if needed. Check function of grip. Check function of light barrier OPGRL. |
| | Er | 74 | Error during replacing of right-side magazine. Malfunction of right grip lever. | As in Er 73. Check function of light barrier OPGRR. |
| | Er | 75 | Malfunction during lift drive. | Check lift for jamming. Check function and correct adjustment of light barrier OPSTP (drive wheel). |
| | Er | 76 | End position of lift not o.k. | Check function and adjustment of light barrier OPEND. |
| | Er | 80 | Short circuit on wallbox signal wire. | Check wallbox connection. |
| | Er | 90 | Title display, three blocking in sequence, not functional anymore. | Blocking remedy. |
| | Er | 91 | Blocking title display, gripper left. | |
| | Er | 92 | Blocking title display, gripper right. | |
| | Er | 93 | Blocking title display, stack left. | |
| | Er | 94 | Blocking title display, stack right. | |

The memorized values of program steps P20 to P56 are checked after each "power on" and by activating the cabinet switch.


An error on the programmable memory area the corresponding program steps is show on Display 1; Pxx Er 31; the "error" lamp flashes.

After the phonograph is turned on, the malfunction display in Display 3 and the flashing of "error" remains visible for 2 sec. After that the phonograph is operational; without regarding the malfunctioning program step, though.

By using serv.-prog.-step P62, the last 10 error codes can be called; see "service programs" pt. 1.5.7.

1.3. Trouble-Shooting Chart for NSM Phonographs ES-IV/CD Technology

Conditions: Line voltage present, line connection and power supply in order.

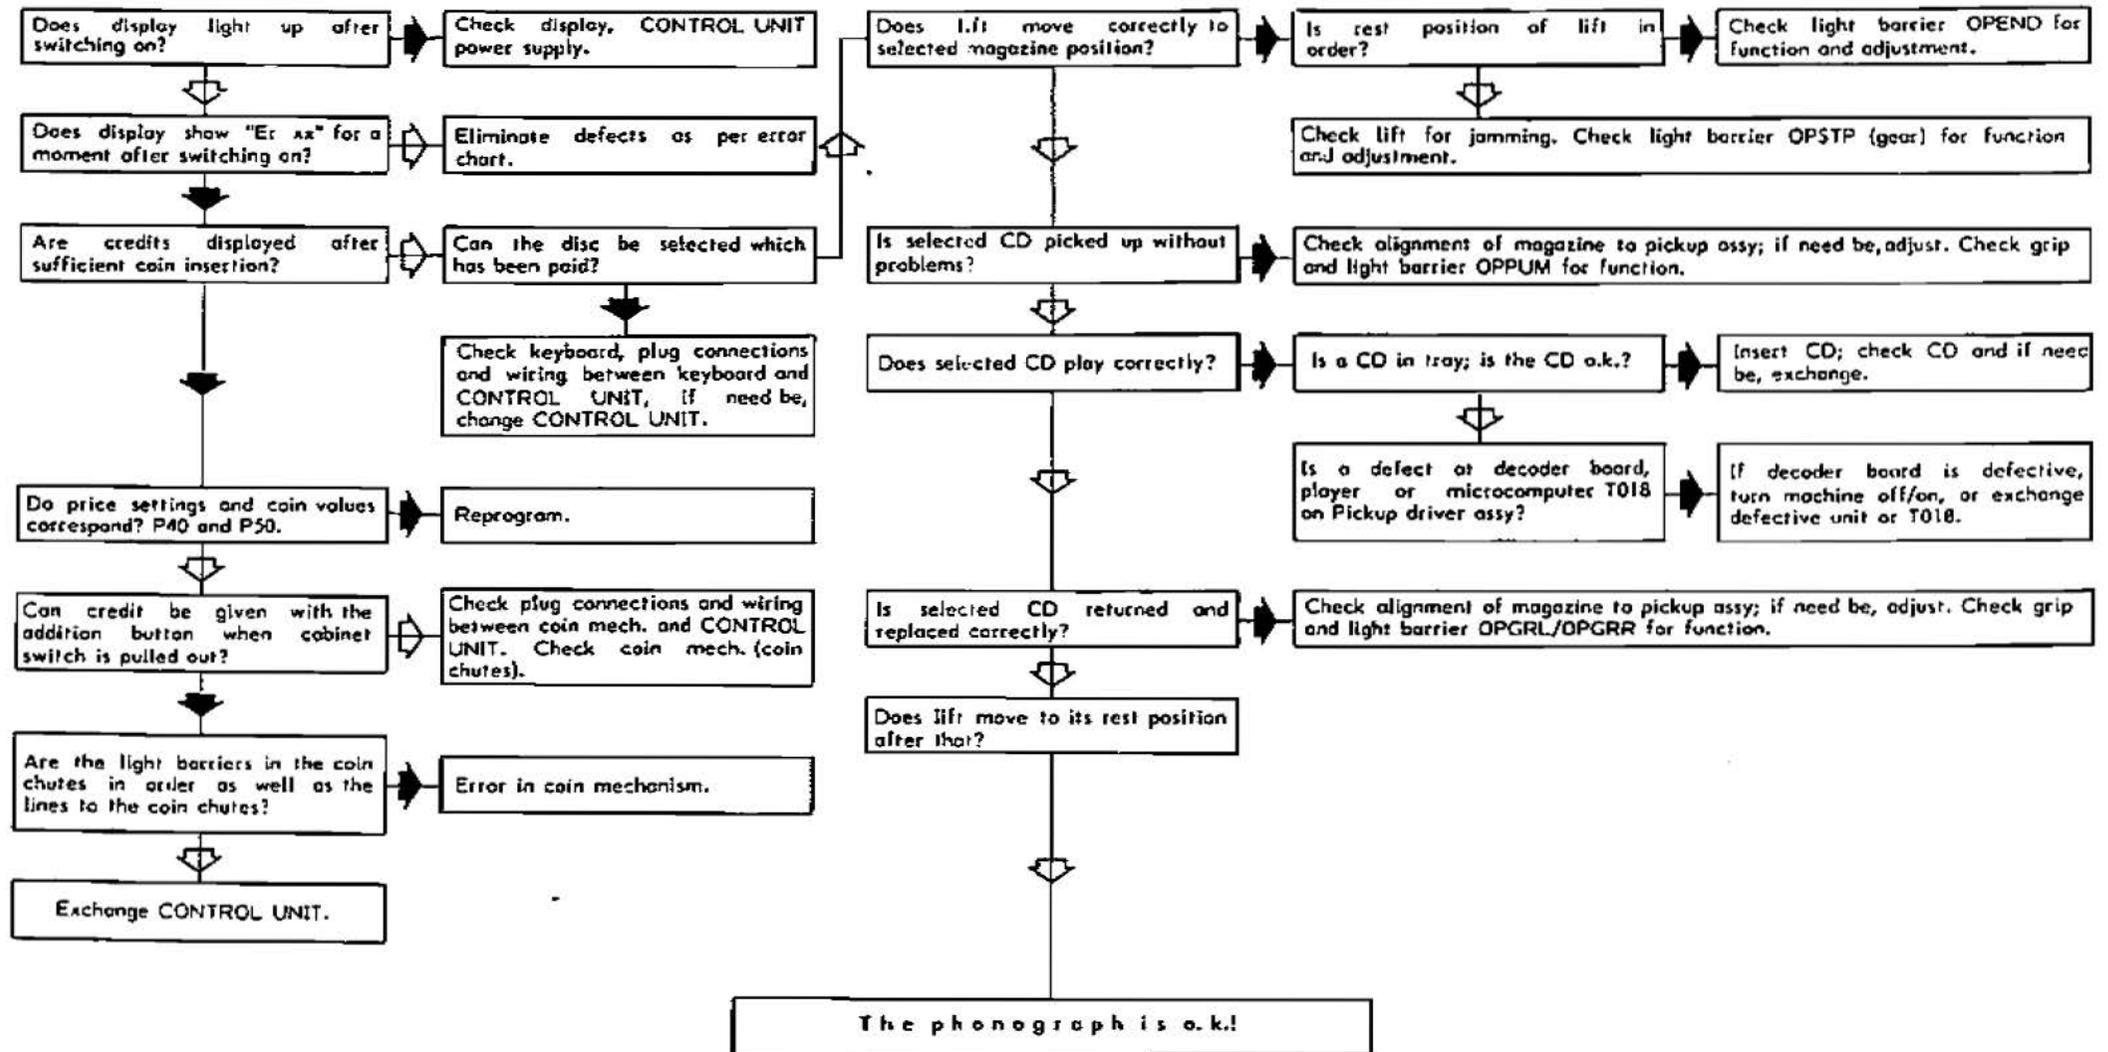

◊ yes
 ▶ no

1405

Compare also 1.2. "Error Displays".

ACCESSORIES
FOR NSM-PHONOGRAPHS
ES IV-CD TECHNOLOGY

INDEX

1. Microphone with paging switch
2. REMOTE CONTROL WALL BOXES
3. REMOTE CONTROLS
 - 3.1. Infrared remote control
 - 3.2. Remote control with cable
4. TAPE RECORDER CONNECTION CABLE
5. OUTPUT TRANSFORMER with cable harness
6. DOLLAR BILL ACCEPTOR -ARDAC MINI- (only for USA)
 - 6.1. Installation Instructions for DOLLAR BILL ACCEPTOR in "CD GALAXY"
 - 6.2. Installation Instructions for DOLLAR BILL ACCEPTOR in wallbox
7. "NSM DATA PRINT"
 - 7.1. Data transfer and memorizing with NSM DATA PRINT
 - 7.2. Printout on NSM DATA PRINT

| | |
|---|-------------------------|
| 1. MICROPHONE with Paging Switch | Part No. 224 223 |
| Socket for microphone | Part No. 225 758 |
| Connection cable with plug and microphone socket | Part No. 171 880 (10 m) |
| Plug for central unit | Part No. 225 260 |

Connection via microphone socket to the central unit.

Microphone announcements are possible in any phonograph mode.

The microphone amplifier with electronic switch-over is integrated into the central unit.

The volume for the background music and microphone can be adjusted separately in the central unit.

2. REMOTE-CONTROL WALLBOXES

"FIRESTREAM" - Part No. 173 600

"CARAVELLE" - Part No. 173 450

For connection to NSM phonographs in CD technology. Connection Adapter belongs to the equipment.

(Part Number see Spare Parts List in "TECHNICAL INSTRUCTIONS")

Detailed installation instructions are included in the adapter kit.

3. REMOTE CONTROLS

3.1. Infrared Remote Control

Part No. 174 258

Wireless remote control consisting of transmitter, receiver and parts for installation. See wiring diagram for connections.

3.2. Remote Control with Cable

Part No. 171 743

The connection points are illustrated in the wiring diagram and described in unit description "REMOTE CONTROL".

4. TAPE RECORDER CONNECTION CABLE

Part No. 172 025

Connection for tape recorders with DIN input and output.
Connection for additional amplifier.

5. OUTPUT TRANSFORMER with cable harness

Part No. 172 431

Significantly expanded adaptation capabilities and low line losses with 70 V output.

(See unit description "OUTPUT TRANSFORMER")

6. DOLLAR BILL ACCEPTOR -ARDAC MINI- (only for USA)

6.1. INSTALLATION INSTRUCTIONS for DOLLAR BILL ACCEPTOR in "CD GALAXY"

- Install chute in place of cover in lid (see Fig. 1).
- Hang dollar bill validator into the 2 attachment studs (Pos. 1).
The unit must be installed so that it does not interfere with the lid when closing - however, the chute must close tightly to the dollar bill validator.
The depth can be adjusted at Pos. 2.
The height should be adjusted at Pos. 3 so that the dollar bill validator is aligned with the chute in the lid and is guided exactly into the acceptor slot (see Fig. 1).
Secure dollar bill validator with sheet metal screws F 3.9 x 6.5 at Pos. 4.
- Install dollar bill adapter PCB (Pos. 6) on 2 spacers with wood-screws to the left inside of cabinet.
- Put 2 contacts from the harness (as can be seen in Fig. 2/ Pos. 5) into Plug Housings 6 and 7 of the 21-pole plug.
- Mount dollar bill electronic (control box) as shown in illustration.
- Make plug connections from dollar bill adapter PCB to the acceptor to the control unit and to the control box; plug connection cable from control box into plug; plug in control box into service socket.
- Program price setting (plays/monetary value) in program step 45, e.g. "07 100" = 7 plays/1 dollar).
- Program monetary value in Program Step 45, e.g. "07 100" = 7 plays/1 dollar.
- Program monetary value for Channel 5 in Program Step 55; e.g. "100" = 1 dollar.

CHUTE
SIDE VIEW

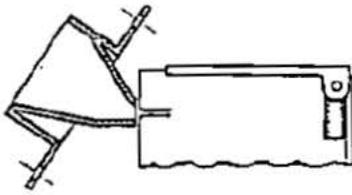


Fig. 1



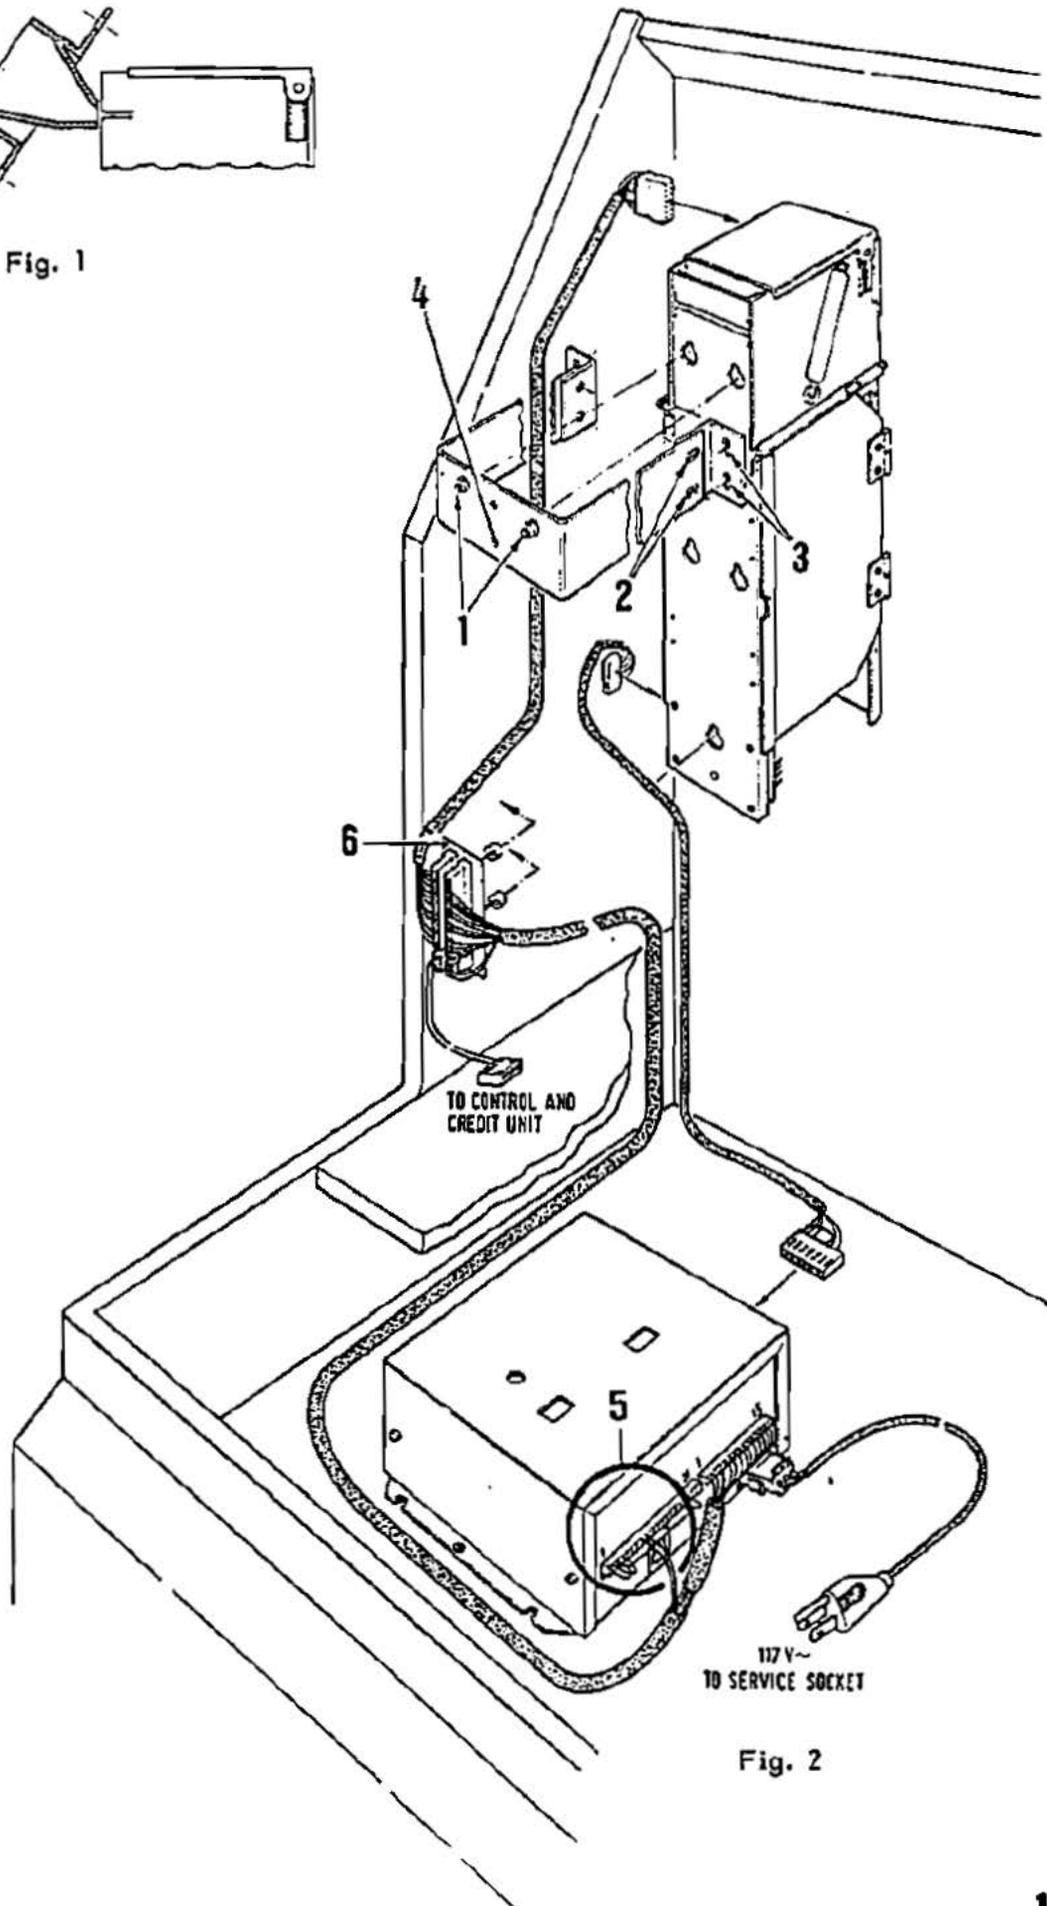


Fig. 2

6.2. Installation instructions for DOLLAR BILL ACCEPTOR in wallbox "Fire" and remote control wallbox "FIRESTREAM"

- Pull up latch (1) and adjust stacker (2) so it is positioned vertically under the acceptor (3).
- Hang dollar bill validator into the 2 studs (4). The unit must be installed so that it does not interfere with the lid when closing - however, the chute must close tightly to the dollar bill validator. The depth can be adjusted by loosening the three screws (5) and by moving the bracket. The height can be adjusted by loosening the four screws (7) and moving in a vertical direction; bill validator must be aligned with the chute in the lid and guided exactly into the acceptor slot.
- Secure dollar bill with screw M 4 at Pos. 8.
- Move stacker backwards into its final position until the latch (1) locks in at the second position.
- Put the 2 contacts from the harness, as seen in Pos. 9, into plug housings 6 and 7 of the 21-pole plug.
- Mount dollar bill electronic (control box), as shown in illustration, at the top of the cabinet. First push it into rear guide studs, then mount the front side with two screws. The plastic discs serve as spacers between the control box.
- Make plug connections to the acceptor, to the stacker and to the control box. Plug power plug from control box into service socket (10).
- Program price setting (plays/monetary value) in program step 45, e.g. "07 100" = 7 plays/1 dolar.
- Program monetary value for channel 5 in program step 55, e.g. "100" = 1 dollar.
- Lay harnesses so that they do not hinder other units!

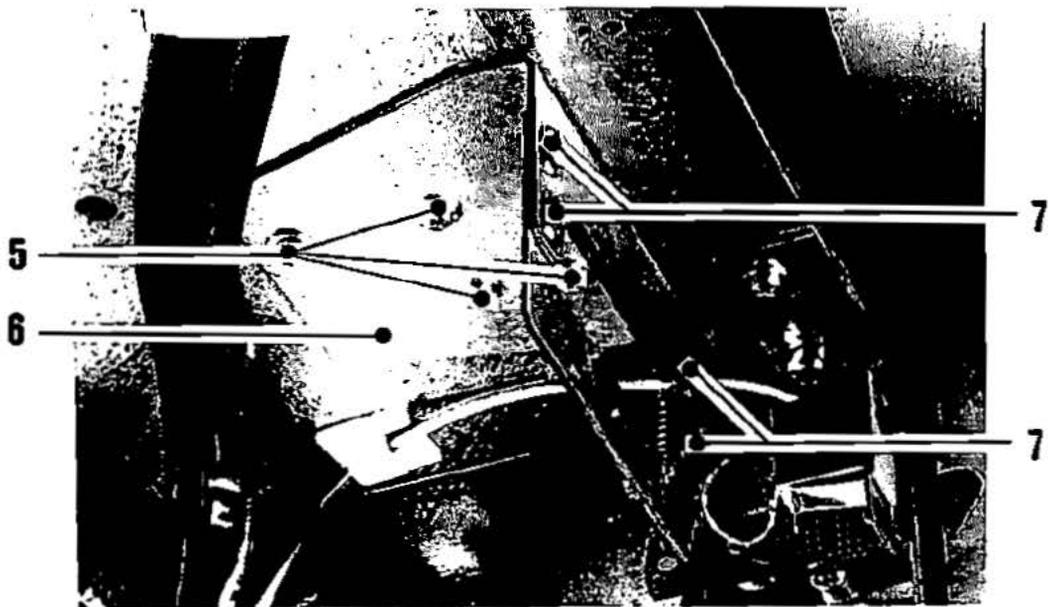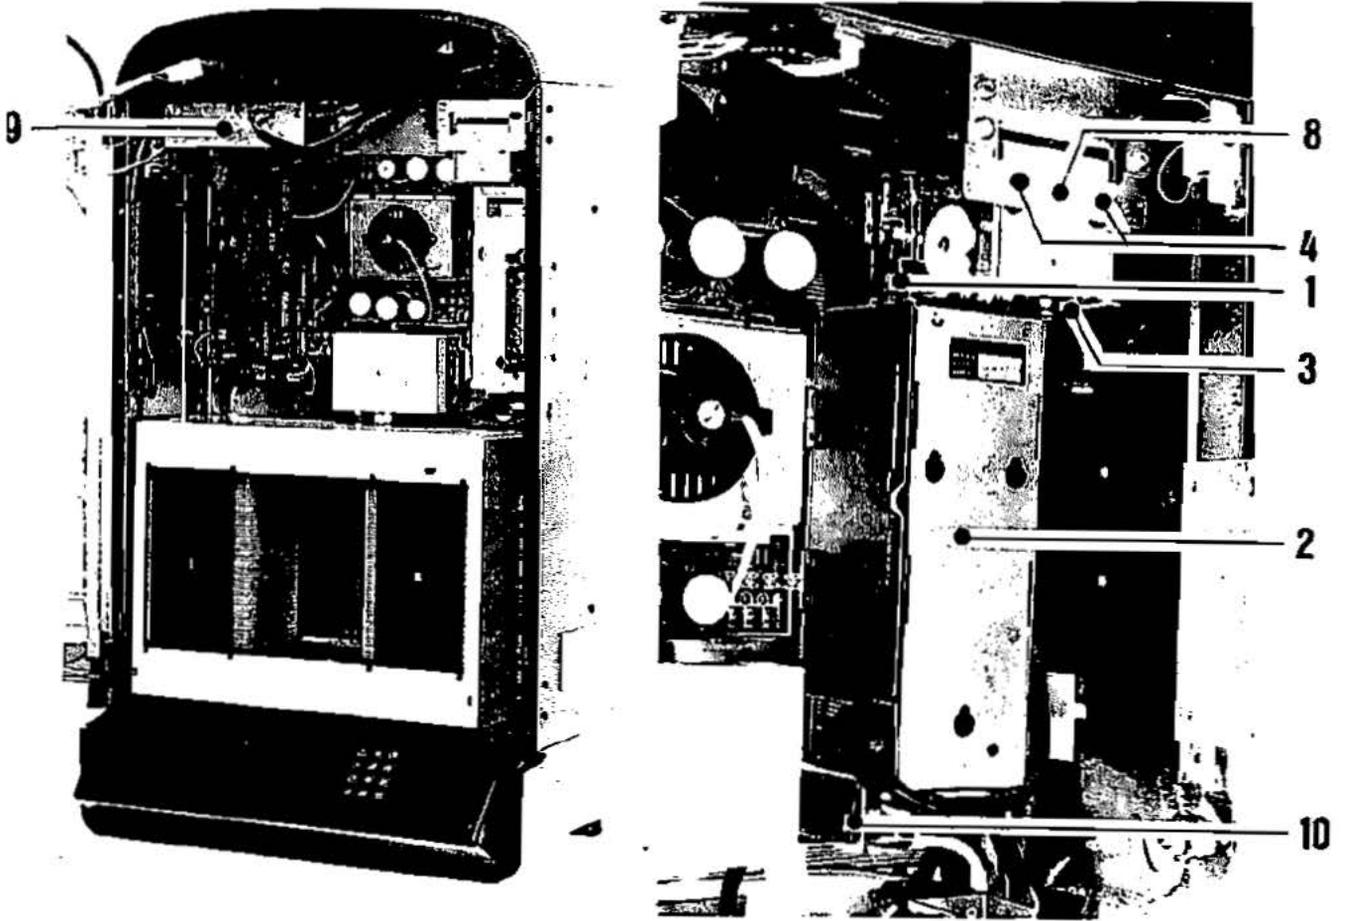

7. NSM DATA PRINT (Part Number see Spare Parts List in "TECHNICAL INSTRUCTIONS")

The printer is intended for connection to:

- NSM phonographs ES-IV CD Technology
- A detailed description is included with the printer.
- Putting in the paper roll and color ribbon are described in detail in the TECHNICAL INFORMATION for the NSM DATA PRINT.

7.1. Data Transfer and Memorizing with NSM DATA PRINT

- Turn on service program by opening cabinet and pull out cabinet switch manually, Display 1 "P01".
- Put in printer connector into "Service Socket" of the CONTROL UNIT.
- Enter "C", Display 1 "P".
- Enter "11" and "H", Display "P11".
- Enter Code "1" and "H".

Counters P03 to P08 as well as popularity are transferred.

Note: Display 3 "E0" appears if an error occurs during data transfer. Counters P03 to P08 as well as popularity are reset after successful data transfer.


7.2. Transfer to Printer

- Switch on service program by opening cabinet; if needed, pull the cabinet switch manually, Display 1 "P01".
- Plug printer connector into socket of CONTROL UNIT.
- Enter "C", Display 1 "P".
- Enter "12" and "H", Display 1 "P12".
- Enter code for the desired print-out and press "H".
 - "1" and "H" = Counters (P03 to P08)
 - "2" and "H" = Counters and settings (P03 to P08, P21 to P37, P39)
 - "3" and "H" = Counters and popularity (P03 to P08, P01, P02)
 - "4" and "H" = Counters, settings and popularity (P03 to P08, P21 to P37, P39, P01, P02)

Note: When a popularity counter has reached value 200, all popularity counters are divided by half of the amount. After dividing the popularity printed out is relative; the number of divisions appears in the printout: "RELATIVE 000" to "xxx".

If the printer does not start, "E0" appears in Display 3.

DATA PRINT

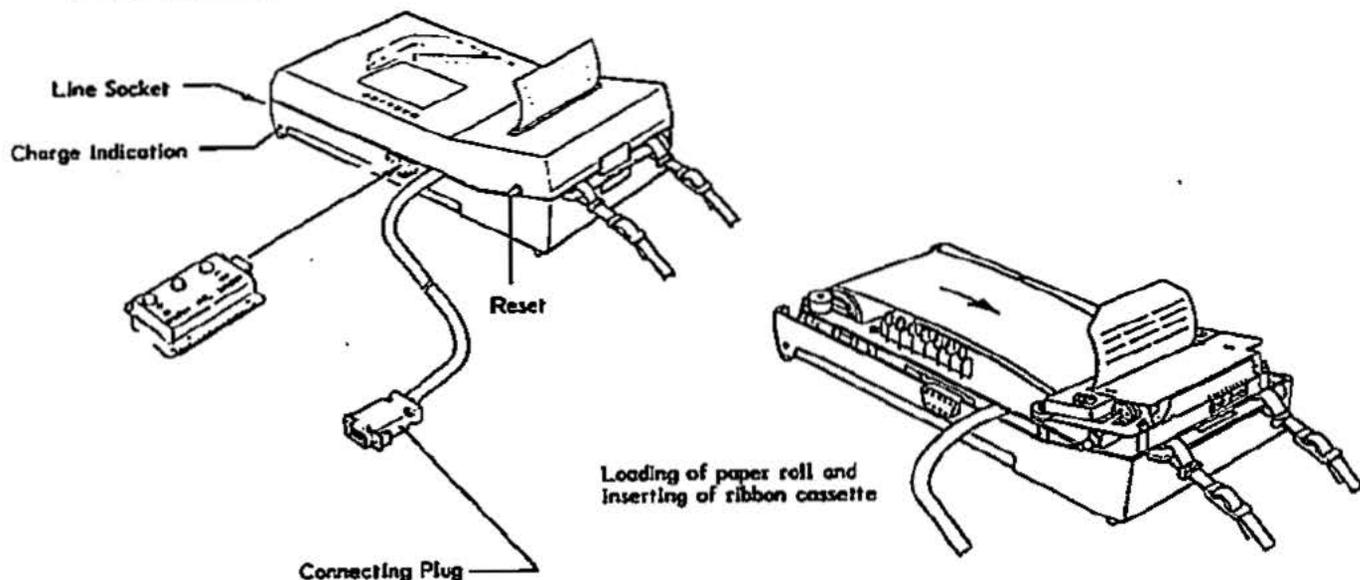

8. CD-AUDIO CONNECTION

To connect an amplifier directly to the output of the CD changer an adapter PCB "CD-AUDIO" (Part #174 648) is available.

The NF cable on the CD audio PCB is to be plugged into the "CD" plug of the central unit. The cable from the CD changer is to be plugged into the adapter PCB "CD-AUDIO".

The CD audio PCB is to be fastened with 4 distance holders. The following sketches show possible mounting points.


Ground has to be connected to the metal housing or with wood housings to the next grounded piece of metal.

To connect the external amplifier to the CD-AUDIO high-grade connecting cables with RCA plugs on both ends are available.

Stereo cable set (2 m) Part No. 227 533

Installation
in

CD-GALAXY and CD-HIDE AWAY

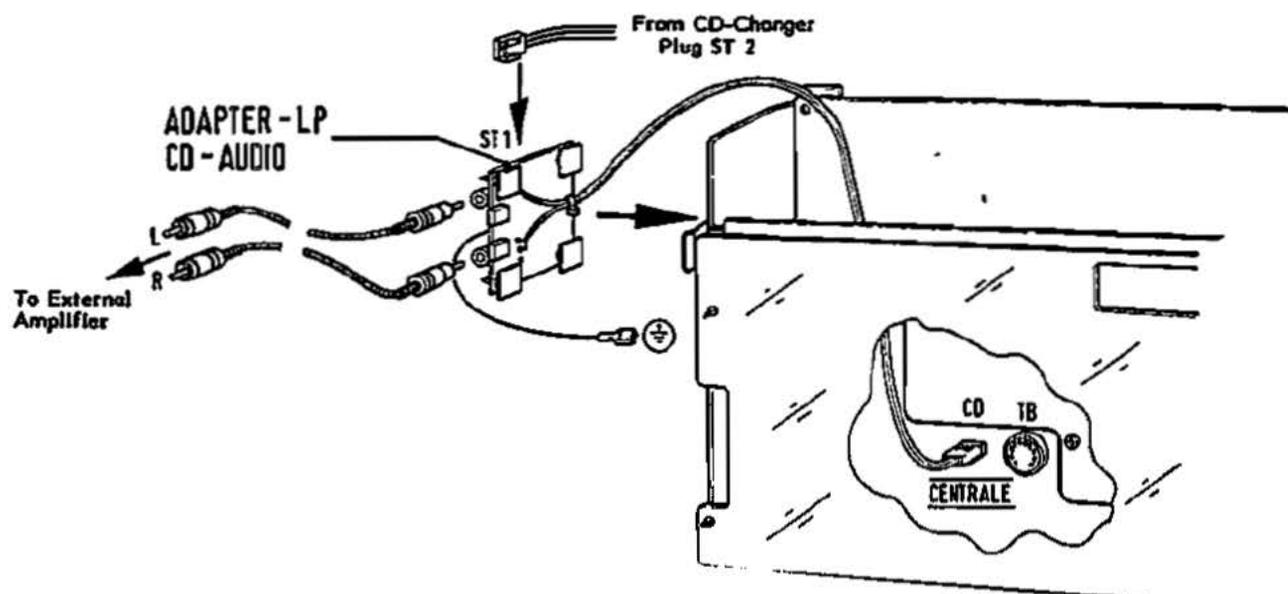

Installation
in

NSM-CD FIRE

