



S
E
C
T
i
O
N

B

Setup and Preparation

- Major Component Location
- Unpacking the Phonograph
- Power up
- Loading Program Pages
- Loading Compact Discs
- Repacking/Moving

Thank you for purchasing your new **Rock-Ola SyberSonic Compact Disc Jukebox**. This manual will provide instructions for operating your new phonograph. If after reading the manual you have any questions about the operation of the jukebox, please call your authorized dealer. With a little practice, operation will become natural. Start by identifying the major components in the jukebox.

Major Component Location

- | | | |
|---------------------------------------|-------------------|--------------------------------|
| 1. Computer | 5. CD Magazine | 9. Speaker 10" dual voice coil |
| 2. Dual Digital Amp &
Power Supply | 6. Coin Mechanism | 10. Scan/Cancel Switch |
| 3. Volume Control | 7. Service Switch | 11. Power Cut Off Switch |
| 4. CD Player | 8. Crossover | 12. Power Transformer |

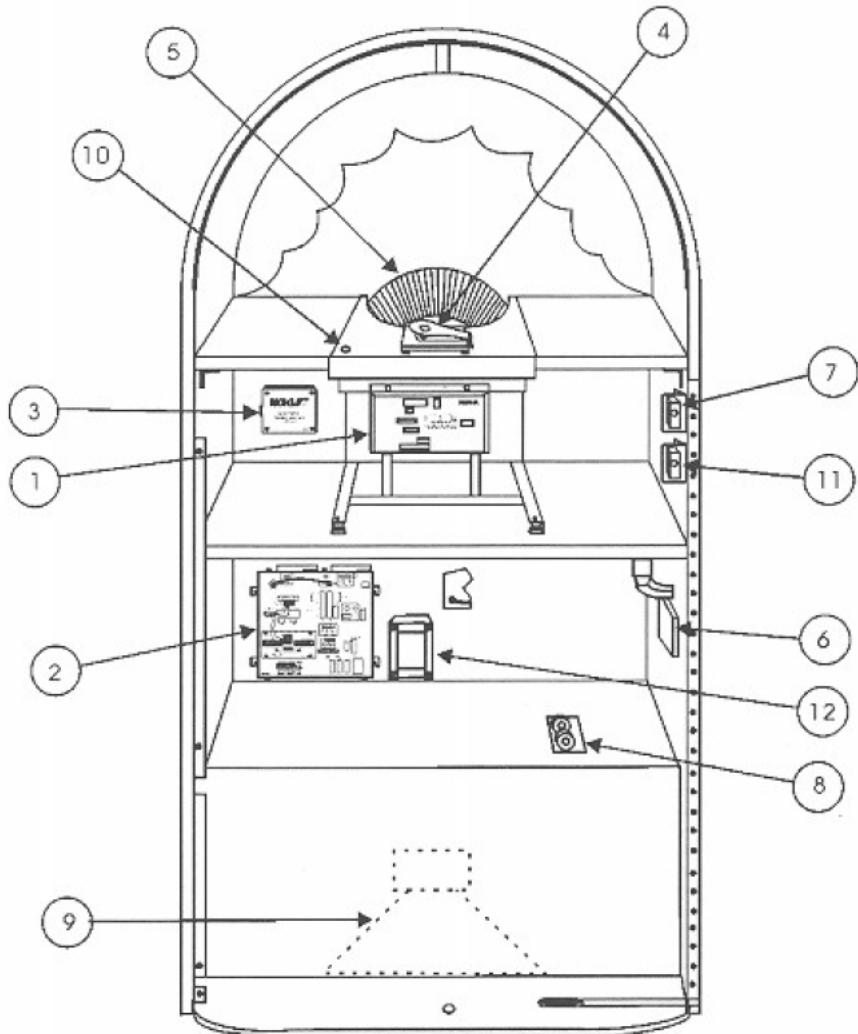


Figure 1B

**WARNING**

Do not apply AC power until the following instructions indicate you should.

ADVERTENCIA

No aplicar corriente A/C hasta que las siguientes instrucciones indiquen que puede.

AVERTISSEMENT

Ne mettez pas sous une tension en courant alternatif avant que les instructions suivantes le préconisent.

Unpacking the Phonograph

- Open Door.
- Remove the shipping braces (tape) from the title display assembly mounting clips.



The CD player is extremely sensitive to static discharges. Always ground yourself before touching the player and never touch the eye. The CD player itself has no adjustments. The only maintenance required is occasional lens cleaning.

El Toca-discos CD es extremamente sensivo a descargas de electricidad estática. Siempre toque "tierra" antes de tocar el Toca-discos y nunca toque el ojo (lente). El Toca-discos CD no tiene ajustes en si. El único mantenimiento requerido es el limpiar el ojo ocasionalmente.

Le lecteur de disque compact est extrêmement sensible aux décharges statiques. Veuillez toujours vous mettre à la masse avant d'y toucher et ne touchez jamais à l'oeil. Le lecteur de disque compact ne présente aucun réglage. Le seul entretien nécessaire est un nettoyage régulier de la lentille.

- Remove shipping bolts from mechanism.
- Remove rubber band from CD clamper plate. (Retain for future use).
- Remove shipping brace (tape) from the dollar bill validator (if installed). Make sure the bill stacker is properly seated.

- Plug System Power Harness into J7 of the Power Supply Assembly.
- Make sure that no items/objects can interfere with the movement of the disc magazine and the clamper plate. Also ensure the title display pages movement cannot be obstructed in any way.

Power up

Note: For safety, Rock-Ola's SyberSonic System incorporates an automatic mechanism interlock system.

Whenever the door is opened, the mechanism will enter a "suspend mode" and the machine's display will indicate: "DOOR OPEN" on the top line and the bottom line will scroll the message: "Press Scan Switch to Continue. Warning: Mechanism Could Start Anytime."

DOOR OPEN
Press Scan Switch to ...

**WARNING**

Before applying power, put POWER CUT OFF SWITCH in the OFF position. (Figure 4B).

ADVERTENCIA

Antes de encender el aparato, poner el interruptor de encendido y apagado en la posición OFF (Figure 4B).

AVERTISSEMENT

Avant de mettre sous tension, mettez L'INTERRUPTEUR DE TENSION sur la position éteinte "OFF". (Figure 4B).


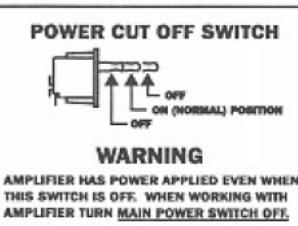


Figure 4B - Power Cut Off Switch

Ensure the Main Power Switch (on back of machine) is Off. Connect Power Cord to Power Supply and plug into a properly polarized and grounded outlet.

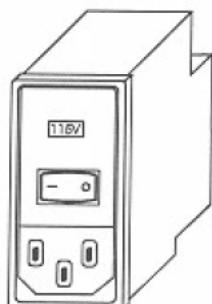

- = ON
o = OFF

Figure 5B - Main Power Switch

WARNING

!
Use of adapters or removal of the grounding pin of the plug may create a potential shock hazard and will defeat the surge protection devices causing erratic operation or destruction of the electronic assemblies and void all warranties.

ADVERTENCIA

El uso de adaptadores o el remover el pin de "tierra" del enchufe podrían crear un peligro potencial de shock, y derrotará al artefacto de protección contra cambios de corriente, causando operación errática, o destrucción de ensamblado electrónico, al igual que eliminar las garantías.

AVERTISSEMENT

L'utilisation d'adaptateurs ou le retrait de la broche de mise à la masse de la prise peut entraîner un risque d'électrocution et faire échouer les dispositifs de protection de secteur entraînant ainsi un fonctionnement irrégulier ou la destruction des montages électroniques, ainsi que l'annulation de toute garantie.

Ensure Service Switch (Fig 6B) is in the service position. Turn main power switch on. (Fig. 5B). Move the Power Cut off Switch (Fig. 4B) to the On position. Press the Scan/Cancel button once. Magazine should move 3 complete revolutions, then stop in the HOME Position. (With the gripper bow in the wide opening of the magazine).

See the sections covering machine installation, disc installation, machine programming and machine servicing for specific service information.

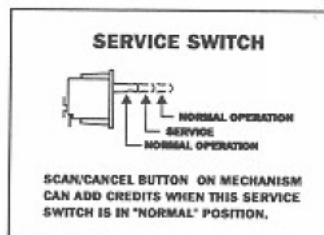


Figure 6B - Service Switch

Loading Program Pages

To turn the title pages, set the Service Switch (Fig. 6B) to the **normal operation** position and use the [<>] and [<>] buttons on the keyboard.

WARNING

!
Do not attempt to turn the program pages by hand. The pages must be turned using the [<>] and [<>] buttons on the keyboard.

ADVERTENCIA

No intente pasar las páginas de programa manualmente. Las páginas deben ser pasadas usando los botones (<) y (>) en el teclado.

AVERTISSEMENT

N'essayez pas de tourner les pages de programme manuellement. Tournez les pages à l'aide des touches [<] et [>] figurant sur votre clavier.


1. Unplug the motor/switch harness connector then release the catches on either side of the title display. Remove by pulling out at the top and lifting out. Rotate the pages by turning the black gear on the underside of the rack.

2. There are 2 ways to display the titles:

- If you are installing 1 to 50 discs, the single strips are used, and the numbers are installed in the square as shown starting with "00".

- If you are installing 51 to 100 discs, use the full size split title strips and install the numbers in both top and middle areas as shown. Start with "00" at the top and "01" in the middle.
3. Load your title strips first keeping the discs in their jewel boxes in the order they will be placed in the jukebox.

50 Disc Format
Blank Single Title Strip
P/N 56207

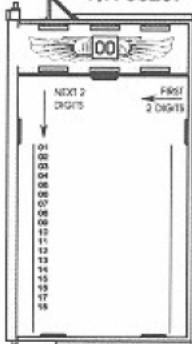

TITLE PAGE

100 Disc Format
Blank Double Title Strip
P/N 57279

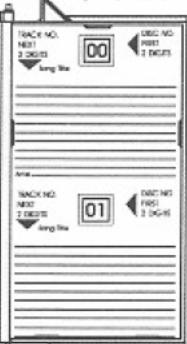


Figure 8B - Program Page Loading

Loading Compact Discs

To rotate the magazine, put the Service Switch (Fig. 6B) into the SERVICE position and then push the **red Scan/Cancel** button located on the playing mechanism.

WARNING



Do not attempt to rotate the magazine by hand. The magazine may be rotated with the red scan/cancel switch only. It is located on the top of the mechanism.

ADVERTENCIA

No intente rotar el magazin manualmente. El magazin puede ser rotado solamente con uso del interruptor rojo scan/cancel. Localizado en la parte superior del mecanismo.

AVERTISSEMENT

N'essayez pas de tourner le magasin manuellement. Le magasin doit être tourné à l'aide du commutateur rouge balayage/annulation uniquement. Il est situé sur la partie supérieure du mécanisme.

Load discs to match the jackets with the label side facing to the left of the cabinet. Be careful not to scratch or smudge the compact discs when loading. Continue the process until all the jackets and discs are loaded.

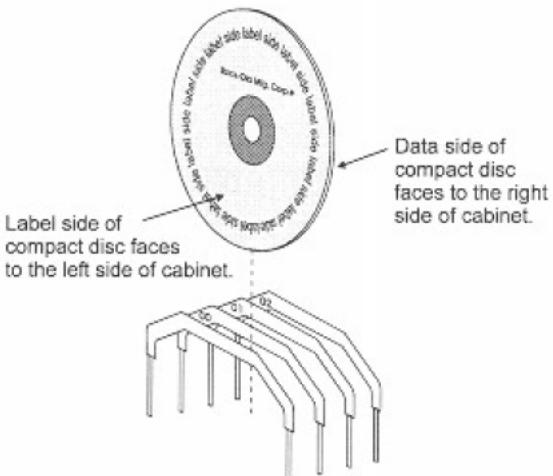


Figure 9B - Compact Disc Loading

Rewrap/Moving

WARNING

All shipping hardware must be correctly installed for shipping.



ADVERTENCIA

Todo hardware debe ser instalado correctamente para el envío.

AVERTISSEMENT

Tout le matériel de transport doit être installé correctement avant l'expédition.

- Remove the discs.
- Select disc "0001"
- When the disc clamping plate comes down on the CD player, remove power.
- Unplug the connector at J7 on the Power Supply.

Install the shipping bolts through the mechanism base on each side and completely tighten.

Note: The mechanism base must be in contact with the wooden platform and the springs must be fully compressed.

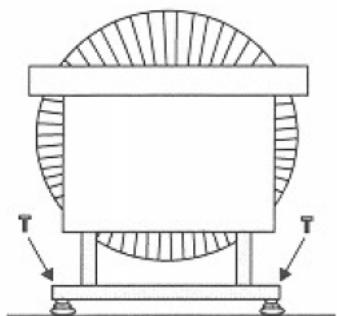


Figure 10B - Mechanism