

## SECTION 1 - DESCRIPTION

### INTRODUCTION

The Rowe/AMI Model R82 is a 200 Selection Stereo Phonograph with a 100% solid state control system. Major features of the R82 include a new selection computer which remembers the most and least popular selections and displays them, one at a time, at the touch of a button. It also provides a total selection reading for the time span since the unit was last reset. Because the selection computer registers all selections, including overplay, it provides a more accurate indication of record popularity than ever before. The selection computer is mounted to the amplifier compartment lid. Total plays register on the total play counter located on the record changer mechanism.

Another exclusive R82 feature is auto play. Auto play automatically plays a selection, completely at random, at either 20 or 40 minute time intervals. The unit also permits continuous random play, or it can be switched off completely if desired. Auto play selections do not register on the selection computer because the computer enters only selections made on the keyboard. Auto play circuitry and controls are part of the memory unit module on the right side of the record changer mechanism.

Credit is registered by the versatile credit computer which permits a wide variety of price of play programs at the flick of a switch. A selector module on the right side cabinet wall incorporates a free play switch for test purposes. This unit also has a receptacle to accept an optional plug-in premium pricing unit.

The memory module is mounted to the right side of the mechanism frame. This module includes a charger and batteries for maintaining selections in memory when power is turned off and incorporates the auto play feature. Record changer operation is controlled by a plug-in mechanism control unit on the left side of the record changer mechanism.

Light emitting diodes (LED's) on the mechanism control, memory, and main power supply modules indicate the presence of voltage and signal information. The credit and selection panel uses five LED's to signal the customer. The three digit selection code is displayed on a digital annunciator which confirms selections as well as showing the selection playing.

The preamplifier, amplifier, and transformer package are mounted in a sealed compartment. The reason for this is to maintain adequate air circulation to cool these components but to prevent outside air from entering the cabinet. This keeps the cabinet interior and records cleaner.

In addition to exclusive operating features and eye-catching good looks, the R82 sounds good. No need for regular maintenance; a few drops of oil every five years keeps the record changer mechanism running smoothly.

The big sound starts with a fine quality Shure cartridge and diamond stylus mounted in a counterbalanced tone arm. The sound is then boosted by a 64-watt (RMS) solid state preamplifier and amplifier. Automatic volume control, automatic record quality control, and automatic loudness contour built into the preamplifier maintain a consistent high quality regardless of record condition. Two low frequency speakers in a duct-tuned bass reflex enclosure, two wide-range mid-high frequency speakers, and one front firing mid-high frequency speaker project high level sound over a wide listening area.

A quadraphonic sound system using four separate channels of amplification and an SQ\* logic decoder is available as a factory installed option. Included in an array of optional accessories is a 120 watt (RMS) solid state stereo amplifier for locations with many extension speakers. An optional overload indicator is available to warn the installer if his extension speaker hookup causes an overload.

### ACCESSORY EQUIPMENT

Phonograph accessory equipment is listed in the following table. All accessory equipment and kits include mounting parts and installation instructions. These accessories are available from your Rowe/AMI Distributor. Contact Rowe Customer Services for information on special accessories and hookups. New accessories will be announced as they become available in service bulletins issued by Rowe International, Inc. These service bulletins are mailed to all Rowe Distributors.

\* Trademark CBS, Inc.

TABLE 1-1. ACCESSORY EQUIPMENT

PART NO.	DESCRIPTION	FUNCTION
605-07406	Optional 120-watt (RMS) Stereo Amplifier and Output Transformer Package.	Used in locations with heavy extension speaker requirements. Plugs into phono harness. Delivers 120W (RMS) power. Includes matching output transformer package.
209-66808	Dollar Bill Acceptor Kit. (Includes Bill Stacker)	Accepts valid one dollar bills in U.S. currency and establishes one dollar's worth of credit in the phonograph credit computer.

PART NO.	DESCRIPTION	FUNCTION
208-66819	Model MBB Digital Print-Out Money Meter Kit	Solid state device records total receipts on ticket inserted at each service call. The surest security device available. Plug-in installation.
201-15377	Model MCA Money Counter Kit	Records total cash input. Does not have print-out feature.
301-65327	Amplifier Overload Tester	Warns installer if extension speaker hook-up causes an overload.
201-15303	Monitor Alarm Kit	Makes an incredibly loud noise if an attempt is made to pry open or smash in cash box door. Consists of a horn operated by a replaceable Freon aerosol can. Because the alarm is not electrically operated and is not accessible without a key, it cannot be disarmed.
204-66681	Automix Kit	Enables phonograph to play 33 and 45 RPM records interchangeably.
201-15350	Phono Paging System Amplifier Accessory Kit	New improved Paging System, not affected by A.V.C. All plug-in unit, complete with microphone and 50 feet of microphone cable. Receptacle provided for additional microphone, not supplied. Allows use of phono sound system for paging.
202-15350	Background Music Adaptor Amplifier Accessory Kit	Allows Customusic Program to play through phonograph speaker system. Automatically cuts off and advances to next selection when record is selected at phonograph. Includes provisions for one microphone, not supplied.
601-03441 604-03441	WRD Wallette Wallbox (3 Coin) WRD Wallette Wallbox (4 Coin)	Remote control unit for solid state phonograph. Has self-contained credit and pricing and selection system. Takes nickels, dimes, quarters and half-dollars. No stepper or code converter needed.
401-06891	Auxilliary Power Supply	Permits solid state phono operation with WRD Wallbox.
206-15336	Code Converter Kit	Permits solid state phono operation with WRA and WRC wallboxes.
205-66934	Code Converter Kit	Permits solid state phono operation with Seeburg 160 digital wallbox.
401-05627	Auxiliary Power Supply	Powers up to 6 Rowe/AMI WRA or WRC Wallette wallboxes. Low voltage supply separate from that required for the phonograph.
401-05678	Secondary Power Supply	Powers each additional six or more Rowe/AMI WRA or WRC Wallette wallboxes.
SPEC 5054	12-Conductor Cable	For connecting Wallette WRA or WRC to phonograph.
SPEC 5076	9-Conductor Cable	For connecting WRD Wallette to phonograph.
601-02187	Extension Speaker (Model EX-201)	12-watt, compact "bookshelf" speaker system contains: one 8-inch full range speaker.
601-02188	Extension Speaker (Model EX-301)	25-watt, two channel system includes 3-1/2 inch tweeter and 10-inch bass speaker.
601-02105	Extension Speaker (Model EX-401)	25-watt, high efficiency, two-channel sytem includes horn and cone type speakers.
301-06322	Remote Volume and Cancel Control	Remote stereo volume control and cancel button.

**FOR THIS SECTION, SELECT VIEW(TOP TOOL  
BAR),THEN CLICK ON PAGE LAYOUT,THEN  
FACING**

TABLE 1-1. ACCESSORY EQUIPMENT (Continued)

PART NO.	DESCRIPTION	FUNCTION
207-08199	Remote Volume and Cancel Control Cable	For connecting remote volume control to Phonograph. 4-conductor cable, 50' length.
201-66867	Dual Channel Plug	Parallels two channels for monaural input. Separates phono and extension speakers. Requires 5-wire preamp.
308-06322	Dual Channel Remote Volume Control	For use with 201-66867 dual channel plug. Controls volume of each channel separately. Requires 5-wire preamp.
401-07139	Selection Computer Kit (R80S, R81 Models)	Stores record selections for popularity readout. Standard on R82.
702-00430	Premium Pricing Switch	Plugs into selector logic module. Sets premium price in 60, 70, 80 and 90 selection groups.

**OPTIONAL TEST EQUIPMENT**

Rowe International, Inc. has arranged with Kurz Kasch, Inc. to provide diagnostic circuit boards to check phonograph components. These circuit boards must be used together with the Kurz Kasch Model TF-650-5A Test Fixture. The following circuit boards are available from Kurz Kasch, Inc., Electronics Division, 1501 Webster Street, Dayton, Ohio 45404. Please order as follows:

<u>BOARD PART NO.</u>	<u>COMPONENT TESTED</u>
193A	Credit Computer
203	Memory Module
204	Selector Logic Module

**OPERATION  
SELECTION CYCLE**

The phonograph incorporates a three digit numerical identification system (100 through 299) instead of letters and numbers. Selections beginning with the number 1 are left side selections, while a selection beginning with a 2 designation is on the right side of the record. For example: selection 200 is on the flip side of selection 100.

Before making a selection, the three digit selection number appears on the annunciator display as the record playing. Pressing the first digit of a selection erases the display and lights the "Your Selection" lamp. When the selection is entered and has been displayed for five seconds, the display switches back to the selection playing.

Using the selection keyboard, it is possible to choose a first number for which there is no selection; for example, the number 3. In this instance, the "Reset and Reselect" lamp flashes, indicating that this selection cannot be made. Pressing the RESET button on the selector keyboard resets the selection circuit to receive the correct selection.

The selector logic module incorporates a free play switch (TEST-NORM) and provisions for setting selections 60 through 99 for premium pricing.

The toggle shifter coil is energized for right side play only; left side shift is provided by a spring return mechanism. The mechanism rotates 360 degrees to scan for a selection and

will stop at selection 27 or 77, whichever is closer after the scan is complete.

The optional dollar bill acceptor operates directly from 120 vac and requires only one pigtail connection to the credit circuit. Instead of a stepper, a code converter is used to provide wallbox (WRA, WRC) operation. No stepper or code converter is necessary if the solid state WRD Wallette is used.

The memory unit contains a DC converter incorporating battery power source. The battery maintains voltage to the memory unit to retain selections when the phonograph is turned off temporarily or if power is interrupted. If power has been turned off for several hours, the battery may be discharged. If completely discharged, allow a few minutes before operating phonograph.

**ALLOW THE MECHANISM TO SCAN OUT ON INITIAL START BEFORE MAKING A SELECTION**

**AUTO PLAY**

The auto play feature stimulates phonograph play by letting the customer know that it's there. It plays a flip side selection completely at random at 20 or 40 minute time intervals. The phonograph is shipped from the factory with the flip position slide switch set to off. The switch can be set for 20 or 40 minute time intervals or for continuous operation.

Because auto play operates completely at random, it is completely independent from the selection and memory circuits. If a malfunction in one or both of these circuits should occur, the continuous operation feature provides music to the location until a replacement plug-in unit can be installed.

The auto play memory unit includes the battery and charger that was a separate unit in R80S and R81 Models. The auto play type memory with battery can be installed on these models. The R80S, R81 memory without auto play will operate the R82 provided the D.C. Converter is also installed.

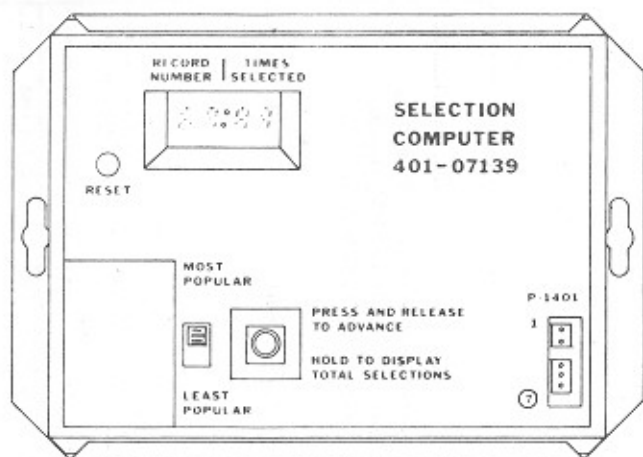


FIGURE 1-2. SELECTION COMPUTER

### SELECTION COMPUTER

The selection computer displays the most and least popular selections on a large, bright four digit display (see figure 1-2). The unit is microprocessor controlled. Without getting too technical at this point, let's just say that a microprocessor is a complete miniature computer which incorporates a program, a memory, and a central processing unit in one chip.

When the phonograph is operating normally and the console switch is in the on position, the computer monitors the clock and data lines. The format of the data on these lines is different for selection and play. When the computer recognizes a selection, it increments a spot in its memory. There is one spot in the memory for each record location. A battery in the computer insures that the selection record will be maintained even if the power plug is pulled.

The computer will count up to 99 selections for each record. Pushing the RESET button clears all memory to zero. Selections are read out one at a time.

To read the records selected the least, switch to the LEAST POPULAR position. When the console switch is set to off, the selection computer automatically goes into the read mode and searches its memory for a record which has zero selections. The record number will show on the first two digits of the display marked RECORD NUMBER. The number of times it was selected will appear on the second two digits marked TIMES SELECTED.

Push and release the pushbutton and the next least chosen record will be displayed. If there are two records with the same number of selections, the lower record number will be displayed first, then the higher number.

After the pushbutton has been pushed 100 times and all the record selections have been displayed, the display will show hyphens. In most instances, an operator will want to know only his lowest five or six records. Setting the console switch to on and then back to off will set the count back to the least played selection.

The most popular records are read by switching to the MOST POPULAR position. When the console switch is set to off, the most popular selection will be displayed. When the pushbutton is pushed and released, the next popular record will be displayed. This can be continued 100 times until hyphens are displayed.

If you've read from the bottom up and you want to know the most popular records, switch to the MOST PLAYED position and push and release the pushbutton. The computer will automatically change modes and start from the top.

If the button is held down for one-half to one second, the display will stay blank for a while and then show the total selections made since the last time the unit was cleared. This can be done at any time. When the button is released; the display will continue to show total selections. Push and release the button to read the next most popular record. The selection computer will not recognize auto play selections, and, because it indicates only the number of times a selection is made, it provides an accurate indication of overplay.

The RESET button resets the computer recordkeeping to zero. This button is recessed to prevent it from being pressed accidentally.

### COMPATIBILITY CHART

The table on the following page shows the compatibility of various component systems and accessories with solid state phonographs. Use this table as an aid in determining interchangeability of accessories, for field exchange and ordering purposes.

To check if a component or accessory is applicable to a particular phonograph, first locate the item in the PRODUCT column, then reference across horizontally until the phonograph model designation is located in the EQUIPMENT column.

The following key explains abbreviations used in the chart:

O.K. component or accessory can be installed or is directly interchangeable.

X component or accessory cannot be used in the particular phonograph.

STD. supplied as original equipment.

OPT. available as an option on original equipment.

CONV. convertible for use with the phonograph model indicated. See remarks column, service text, or contact Rowe Customer Services.

TABLE 1-2. COMPATIBILITY CHART

EQUIPMENT	PRODUCT	R-80S	R-81	R-82	RI-2	CTI-1S	HMJ	WRD	COMMENTS
Record Changer Mech.	601-03065	STD.	STD.	O.K.	O.K.	STD.	STD.	X	200 selections - Can use on RI-2 by adding jumper wire W-501 to 601-08060 selector logic or substituting 603-08060 sel. logic.
Record Changer Mech.	604-03065	X	X	STD.	X	X	STD.	X	120 Selections
Record Changer Mech.	602-03065	X	X	X	STD.	X	X	X	
Credit Computer	601-07674	STD.	STD.	STD.	STD.	STD.	X	STD.	
Selector Logic	601-08060	STD.	STD.	STD.	CONV.	STD.	X	WILL SELECT, NO SOUND.	
Selector Logic	602-08060	O.K.	O.K.	O.K.	CONV.	O.K.	X	STD.	Same as 601-08060 but speaker relays added.
Selector Logic	603-08060	CONV.	CONV.	CONV.	STD.	CONV.	X	CONVERTIBLE NO SOUND.	Same as 601-08060 but jumper W501 added to reduce to 120 selections.
Selection Computer	401-07139	O.K.	O.K.	STD.	O.K.	O.K.	O.K.	X	D.C. Converter 301-07541 required for use with R-82 to hold selections when power is off.
Memory Unit	601-07666	STD.	STD.	O.K.	STD.	STD.	STD.	X	
Memory Unit	301-07855	O.K.	O.K.	STD.	O.K.	O.K.	O.K.	X	D.C. Converter 301-07541 not required for substitution in models other than R-82.
Mechanism Control	401-06905	STD.	STD.	STD.	STD.	STD.	STD.	X	

Digital Display	402-06904	X	X	X	X	X	X	X	X	X	X	X	LED display units are interchangeable. Circuit boards are different.
Digital Display	403-06904	X	X	X	X	X	X	X	X	X	X	X	
Digital Display	401-05487	X	X	X	X	X	X	X	X	X	X	X	
Digital Display	401-07130	X	X	X	X	X	X	X	X	X	X	X	
Main Power Supply	401-06894	STD.	STD.	STD.	STD.	STD.	STD.	STD.	STD.	STD.	STD.	STD.	120 Volt
Main Power Supply	402-65079	STD.	STD.	STD.	STD.	STD.	STD.	STD.	STD.	STD.	STD.	STD.	220 or 240 Volt
64W Power Amplifier & Transformer	601-02179	STD.	STD.	STD.	STD.	STD.	STD.	STD.	STD.	STD.	STD.	STD.	
64W Amplifier, 5 wire	602-02179	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	For dual channel add 201-66867 adapter plug and dual channel volume control, 308-06322.
Pre-amp & Transformer	404-06322	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	
120W Amplifier, 2 wire	601-07406	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	
Pre-amp & Transformer	403-06336	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	For dual channel add 201-66867 adapter plug and dual channel volume control, 308-06322.
120W Amplifier, 5 wire	602-07406	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	
Pre-amp & Transformer	403-06336	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	
Quad Amplifier	602-07411	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	
with 2 transformers	404-06322	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	
BA-4 Bill Acceptor	203-66808	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	
includes Bill Stacker	601-07660	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	
BA-4 Bill Acceptor	209-66808	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	
includes Bill Stacker	601-08576	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	Locked cash box.
BA-4 Bill Acceptor	207-66808	X	X	X	X	X	X	X	X	X	X	X	
Burglar Alarm	201-15303	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	
Burglar Alarm	201-17250	X	X	X	X	X	X	X	X	X	X	X	
Wallette (WRA)	601-03400	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	Code converter replaces stepper to adapt to Rowe solid state phonos. Specify phono model when ordering.
Wallette (WRC)	603-03400	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	
Power Supply	401-05627	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	Use only with Rowe solid state phonos. One per each six WRD's.
Power Supply	401-05678	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	Plug-in adapter allows paging from 1 or 2 mikes over phono sound system. Fits all amplifiers shown.
Code Converter	201-15336	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	
Wallette (WRD)	601-03440	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	Similar to above. Plays background music over phono system or allows paging from 1 mike. Priority is (1) paging, (2) phono, (3) background music.
Power Supply	401-06891	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	Includes adapter harness 301-65315.
Paging Kit	201-15350	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	Includes adapter harness 302-65315.
Background Music Interface Kit	202-15350	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	O.K.	Includes adapter harness 303-65315.
Model MBB	204-66819	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	Includes adapter harness 305-65315.
Printout	205-66819	X	X	X	X	X	X	X	X	X	X	X	Use only with Rowe solid state phonos. Records income from phono and WRD.
Money Meter	206-66819	X	X	X	X	X	X	X	X	X	X	X	
Money Counter (MCA)	208-66819	X	X	X	X	X	X	X	X	X	X	X	
Non-print	201-15377	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	OPT.	