



R-85 Phonograph

Field Service Manual and Parts Catalog

Customer Services Tech. Aid-800-631-8084

PART NO. 2-18226-02
THIRD EDITION
MARCH 1981

SPECIFICATIONS:

GENERAL

DEPTH	28-1/4 in. (71.8 cm.)
WIDTH	41-1/2 in. (105.4 cm.)
HEIGHT	53 in. (134.6 cm.)
SHIPPING WEIGHT (DOMESTIC)	380 lbs. (172.37 Kg.)
NET WEIGHT	335 lbs. (151.96 Kg.)
POWER REQUIREMENTS	120 VAC, 60 Hz., 380 watts 4.1 amps. 220/240 VAC, 50 Hz., 390 watts 2.2 amp.

RECORD CHANGER MECHANISM

CAPACITY	100 records
RECORD SIZE	7 inches
SPEED	45 RPM 33 and 45 RPM (with optional Automix)

CREDIT AND PRICING SYSTEM

ACCUMULATOR TYPE CREDIT SYSTEM - DOLLAR BILLS OPTIONAL	
COINS ACCEPTED	Nickels Dimes Quarters Half-Dollars Dollar Coins
TOTAL CREDIT ACCUMULATIONS	99
PRICING	See Pricing, Page 7

SOUND SYSTEM

CARTRIDGE	
TYPE	Shure Dynetic Variable Reluctance
FREQUENCY RESPONSE	20 to 20,000 Hz.
CHANNEL SEPARATION	25 db @ 1,000 Hz.
NOMINAL COMPLIANCE	20 x 10 ⁻⁶ cm/dyne
TRACKING FORCE	3-4 grams
OUTPUT	7 mv.
STYLUS	1 mil. diamond

POWER AMPLIFIER

125 watt Stereo	
FTC Rating, 4 Ohm Loads @ 1% THD	144 watts RMS
FTC Rating, 70V Lines @ 1% THD	126 watts RMS

PREAMPLIFIER

AVC CONTROL RANGE	40 db
TREBLE CONTROL	12 db/octave 10,000 Hz. full 6,000 Hz. moderate 3,000 Hz. low

BASS CONTROL	Compensates for bass loss at low volume levels 12 db per octave.
--------------	------------------------------------------------------------------

Part No. 2-18226-02

R-85 PHONOGRAPH



SELECTION SYSTEM

CAPACITY 200 Selections

TRANSFORMER PACKAGE

POWER LEVELS FOR PHONOGRAPH SPEAKERS 1, 4, 16, 28, 64 watts
 PROVIDES 70-VOLT LINE FOR EXTENSION SPEAKERS

SPEAKER SYSTEM

	LOW FREQUENCY	MID/HIGH FREQUENCY
SPEAKER DIAMETER	10 inches	6 inches
VOICE COIL DIAMETER	1-1/2 inches	1 inch
IMPEDANCE	30 ohms	8.5 ohms
CROSSOVER	400 Hz.	
SYSTEM FREQUENCY RESPONSE		50 to 12,000 Hz.

LIGHTING

FRONT DOOR (Lower and Upper) Fluorescent, 30 watts, 36 inch (T-8), 7-00601-12

CONTROL PANEL Fluorescent 13W, 21 inch, Part No. 7-00601-15

CREDIT WINDOW Light Emitting Diode 7-00353-03

DISCO FLASHING LIGHTS T-1 3/4 Sub miniature
 12V, 1 Watt

FUSES AND CIRCUIT BREAKERS

MAIN POWER SUPPLY

120 VAC CIRCUIT (Transformer
 Primary Only) 2 Amp Circuit Breaker, 7-00733-15

120 VAC CIRCUIT 10 Amp Circuit Breaker, 7-00734-25

+ 28 VDC CIRCUIT 5 Amp Slo-Blo Fuse 7-00721-06

+ 8 VDC CIRCUIT 5 Amp Slo-Blo Fuse 7-00721-06

AMPLIFIER

Stereo - 125 W

120 VAC CIRCUIT 3 Amp Circuit Breaker 7-00733-17

DC CIRCUIT 5 Amp Fuse, Type MTH-5 (4) 7-00720-10

IMPORTANT

THIS IS A SECTIONALIZED SERVICE MANUAL/PARTS CATALOG. PLEASE TAKE THE TIME TO READ THIS PAGE, AND REVIEW THE TABLE OF CONTENTS THOROUGHLY TO OBTAIN MAXIMUM BENEFITS FROM THIS PUBLICATION.

The first five sections of this Manual are organized to fully realize the serviceability which is engineered into each Phonograph.

These sections are intended primarily for location use to provide familiarization with phonograph components and accessories. Included are detailed system descriptions, procedures for unpacking, set up & installation, programming, routine location servicing and a valuable procedure guide for sequential troubleshooting to isolate a malfunction to one of the plug-in circuit modules.

The troubleshooting isolation procedure detailed in Section 4 is based entirely on visual observation, utilizing the LED indicator lamps on the main power supply and circuit modules. Also in Section 4 are comprehensive Block and Wiring Diagrams.

Section 5 illustrates locations of fuses and circuit breakers and offers a compatibility chart.

Section 6, the PARTS CATALOG, contains a complete listing of procurable replacement parts except for electronic components that are listed directly on the wiring diagrams.

A separate publication, OPERATION SEQUENCE AND SCHEMATICS, elaborates to provide information for the repair of circuit boards and the replacement of electronic components. The information and procedures are intended for an ADVANCED LEVEL OF MAINTENANCE where test equipment is available and service personnel have had electronics training. This publication is available from your distributor. Please order Part No. 3-65355-06.

WARNING: This equipment generates, uses, and can radiate radio frequency energy. Operation of this equipment in a residential area could cause interference to radio communications. If this should happen contact your distributor or Rowe International, Inc. directly. As permitted by regulation it has not been tested for compliance pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference.

warranty

Rowe extends to the original operator of this equipment the following warranty:

All parts are guaranteed to be free of defects in material and workmanship for the specific periods which follow. Rowe agrees to repair without charge during such period any part which proves defective upon examination by Rowe. All costs of shipping an allegedly defective part to or from Rowe's offices shall be borne by the original operator.

Mechanical Moving Parts	5 years
Electrical and Electronic Parts	2 years
Lamps and Styli	90 days

In the case of parts supplied to Rowe as components, Rowe extends the same warranty period as extended by the original manufacturer.

The above warranty applies provided that all parts of the machine have been serviced properly as directed in the service manual, and provided the alleged defective part, upon examination by Rowe, shall prove to be thus defective.

This warranty will not apply to any machine or any part which has been subjected to any accident, abuse, or misuse.

ROWE INTERNATIONAL, INC. EXTENDS NO WARRANTY, EXPRESSED OR IMPLIED, TO PURCHASERS OR USERS OF ITS PRODUCTS EXCEPT AS HEREIN SET FORTH, WHETHER BY OPERATION OF LAW OR OTHERWISE.

TABLE OF CONTENTS

	PAGE
SPECIFICATIONS	i
HOW TO USE THIS MANUAL	iii
SECTION 1 - SYSTEM DESCRIPTION	
Introduction - Major Components	1
Mechanism	1
Central Control Computer	1
Sound System	2
Selection System	3
Power Supply	3
Accessory Equipment	5
SECTION 2 - INSTALLATION AND PROGRAMMING	
Introduction	6
Unpacking Instructions	6
Programming - Credit and Selection System	7
Operational Information	9
Sound System	10
Record Changer - Mechanism	17
Coin Switch Adjustment	24
Coin Acceptor	25
SECTION 3 - ROUTINE SERVICE	
Introduction	27
Changing Records	27
Changing Title Strips	27
Removing Cash Bag	27
Reading Memorec	28
Replacing Lamps	29
Cleaning	29
SECTION 4 - TROUBLESHOOTING	
Introduction	30
Continuous Free Play	30
Troubleshooting Charts	31
Sequence of Operation	35
Block Diagram	66
Wiring Diagram	68
Sound System Quick Check	70
SECTION 5 - ADDITIONAL INFORMATION	
Location of Fuses & Circuit Breakers	72
Compatibility Chart	73
SECTION 6 - PARTS CATALOG	74

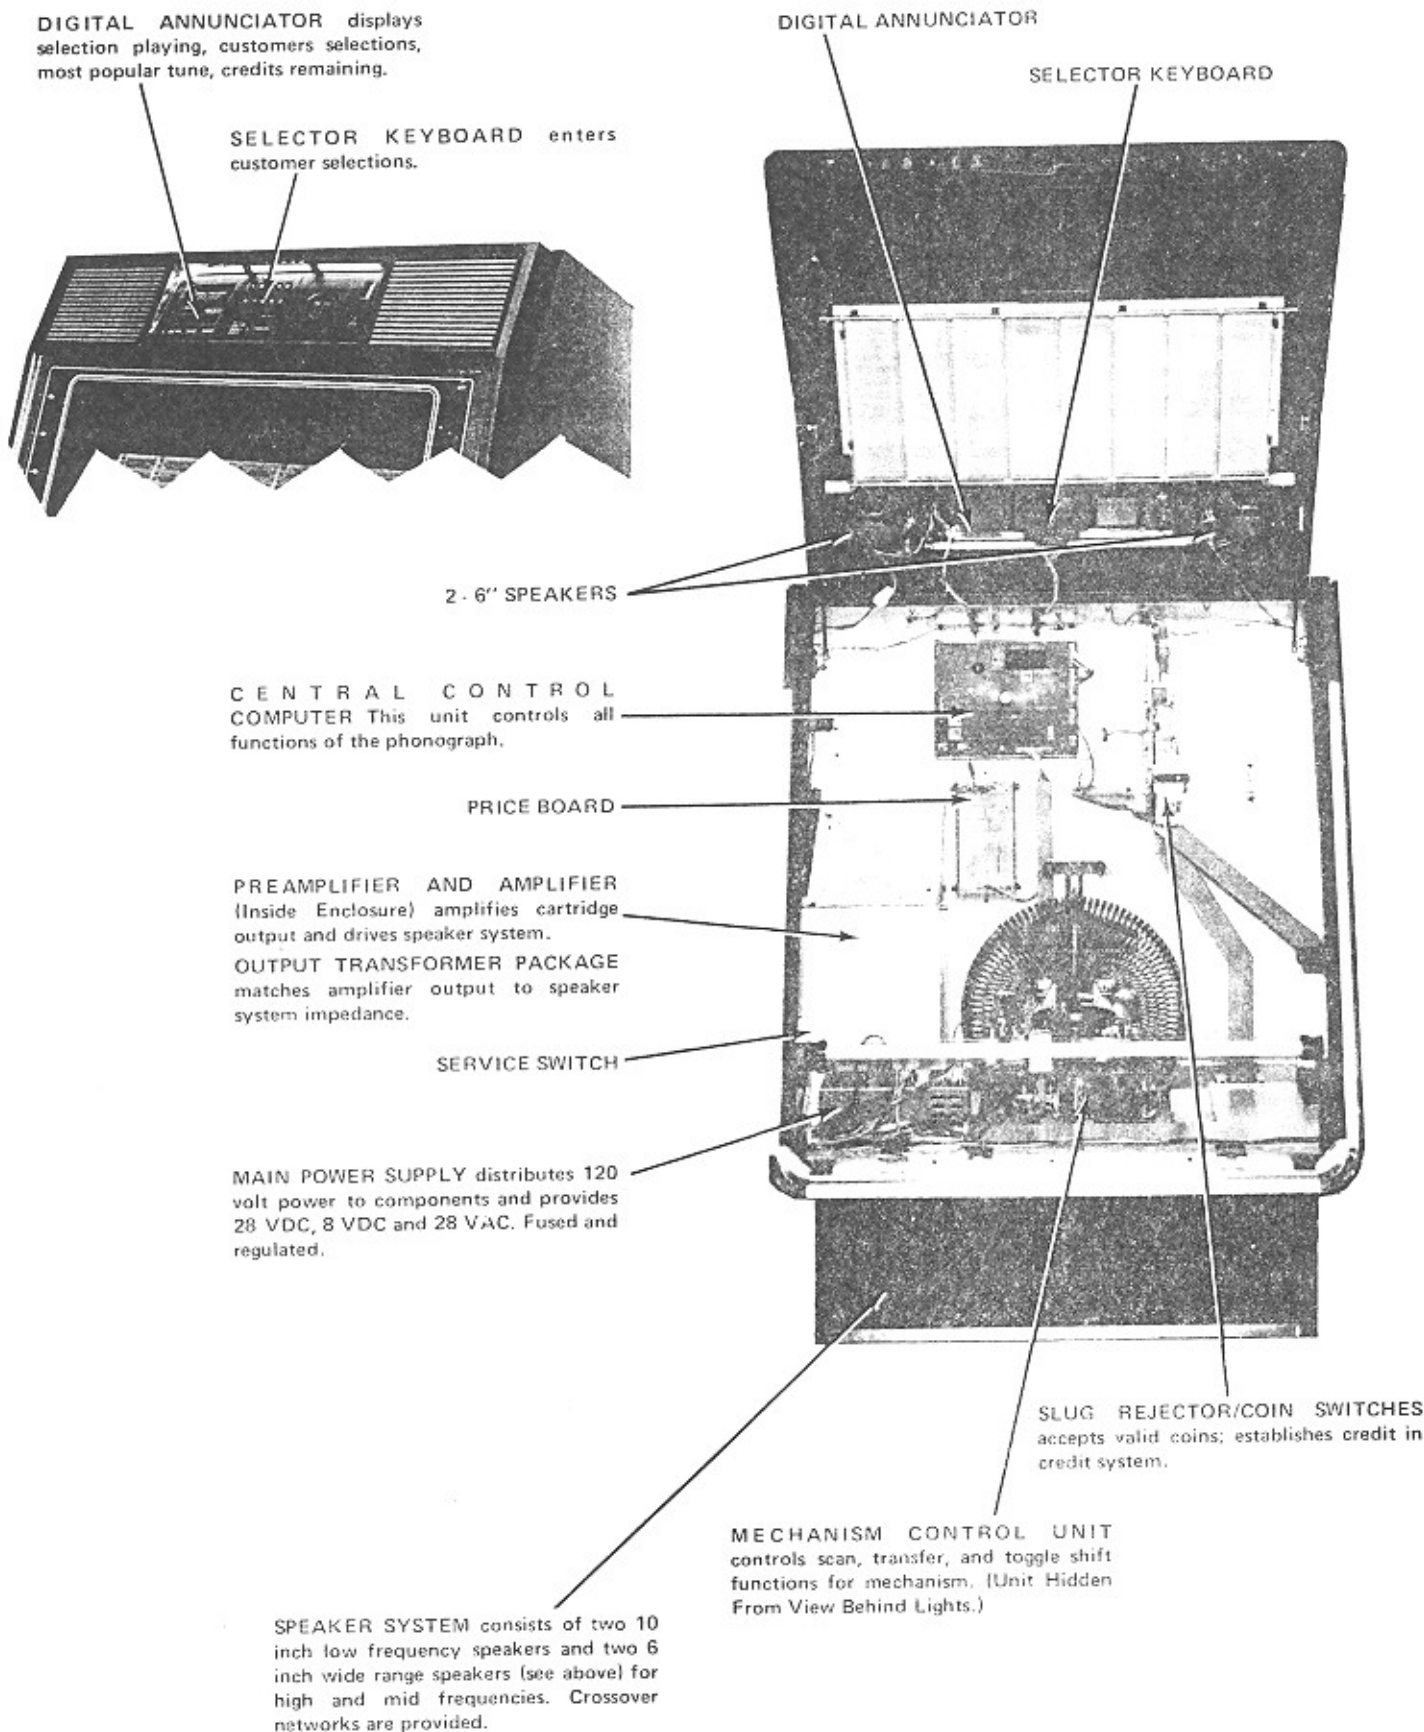


FIGURE 1. PHONOGRAPH MAJOR COMPONENTS