

Zeta plus Zip instruction for setting

ZETA MACHINE

Enter in Zeta parameters and set parameter **CR = 0**
and **maximun credit parameter** (without abbreviation) =**0**

Now set **CR = 1** (EXECUTIVE)
SC = 1 (BASIC COIN VALUE)
PD = 3 (DECIMAL POINT POSITION)

After enter in **ZIP PROGRAMMER MENU**

MACHINES MENU

SYSTEM TYPE: **EXECUTIVE**

BASE UNIT: **1**

DECIMAL POINT: **D**

Now you should read the credit on the key on the machine display