

# **SERVICE MANUAL**

## **Programming manual**

### **“Colibrì”**

**IL CONTENUTO DI QUESTO MANUALE E' DESTINATO AL PERSONALE ADDETTO AI SERVIZI TECNICI**


**THE CONTENTS OF THIS DOCUMENT ARE INTENDED FOR NECTA'S AFTER SALES PERSONNEL**

#### **INTRODUCTION**

The programming instructions described below are used to change the product dose settings, set the sales prices, set any discounts, move through the operating modes, test the failures indicated and read the audit data.

## 1 - PROGRAMMING PUSH-BUTTON FUNCTIONS

The selection push-button panel is used also for programming operations, and in this mode it takes on the following functions:

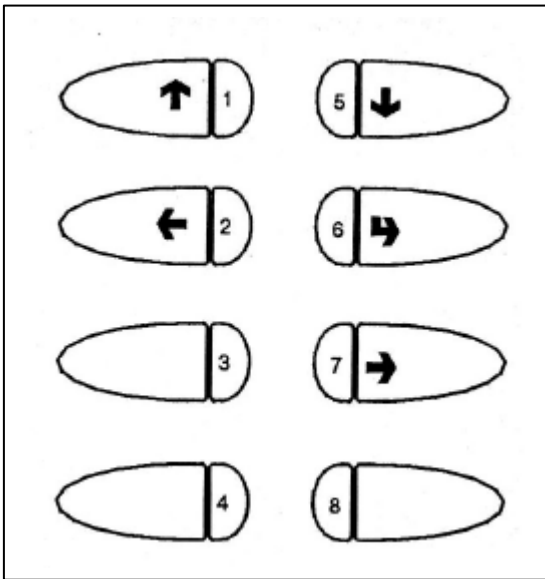

- 1- ↑ Previous function / increase data (+1)
- 2- ← Exit function / cancel change
- 3- Free
- 4- Free
- 5- ↓ Next function / decrease data
- 6- → Confirm function / confirm data
- 7- → Change data
- 8- Reset failures

## 2 - OPERATING MODES

The machine can be in three different operating modes, and according to the mode the vending machine push-buttons take on different functions:

### 2.1 NORMAL OPERATING MODE (VENDING)

### 2.2 MAINTENANCE

### 2.3 PROGRAMMING MODE


### 2.1 NORMAL OPERATING MODE (VENDING)

When switching the machine on, the display indicates the message START for a few seconds, then the vending machine is set to vending mode. The display indicates the message **"Ready for use"**

## 2.2 MAINTENANCE

With the vending machine in normal operating mode, press once the programming button located on the inside of the door, on the push-button board, and the vending machine will be set to **"maintenance"** mode.

The display indicates the message:

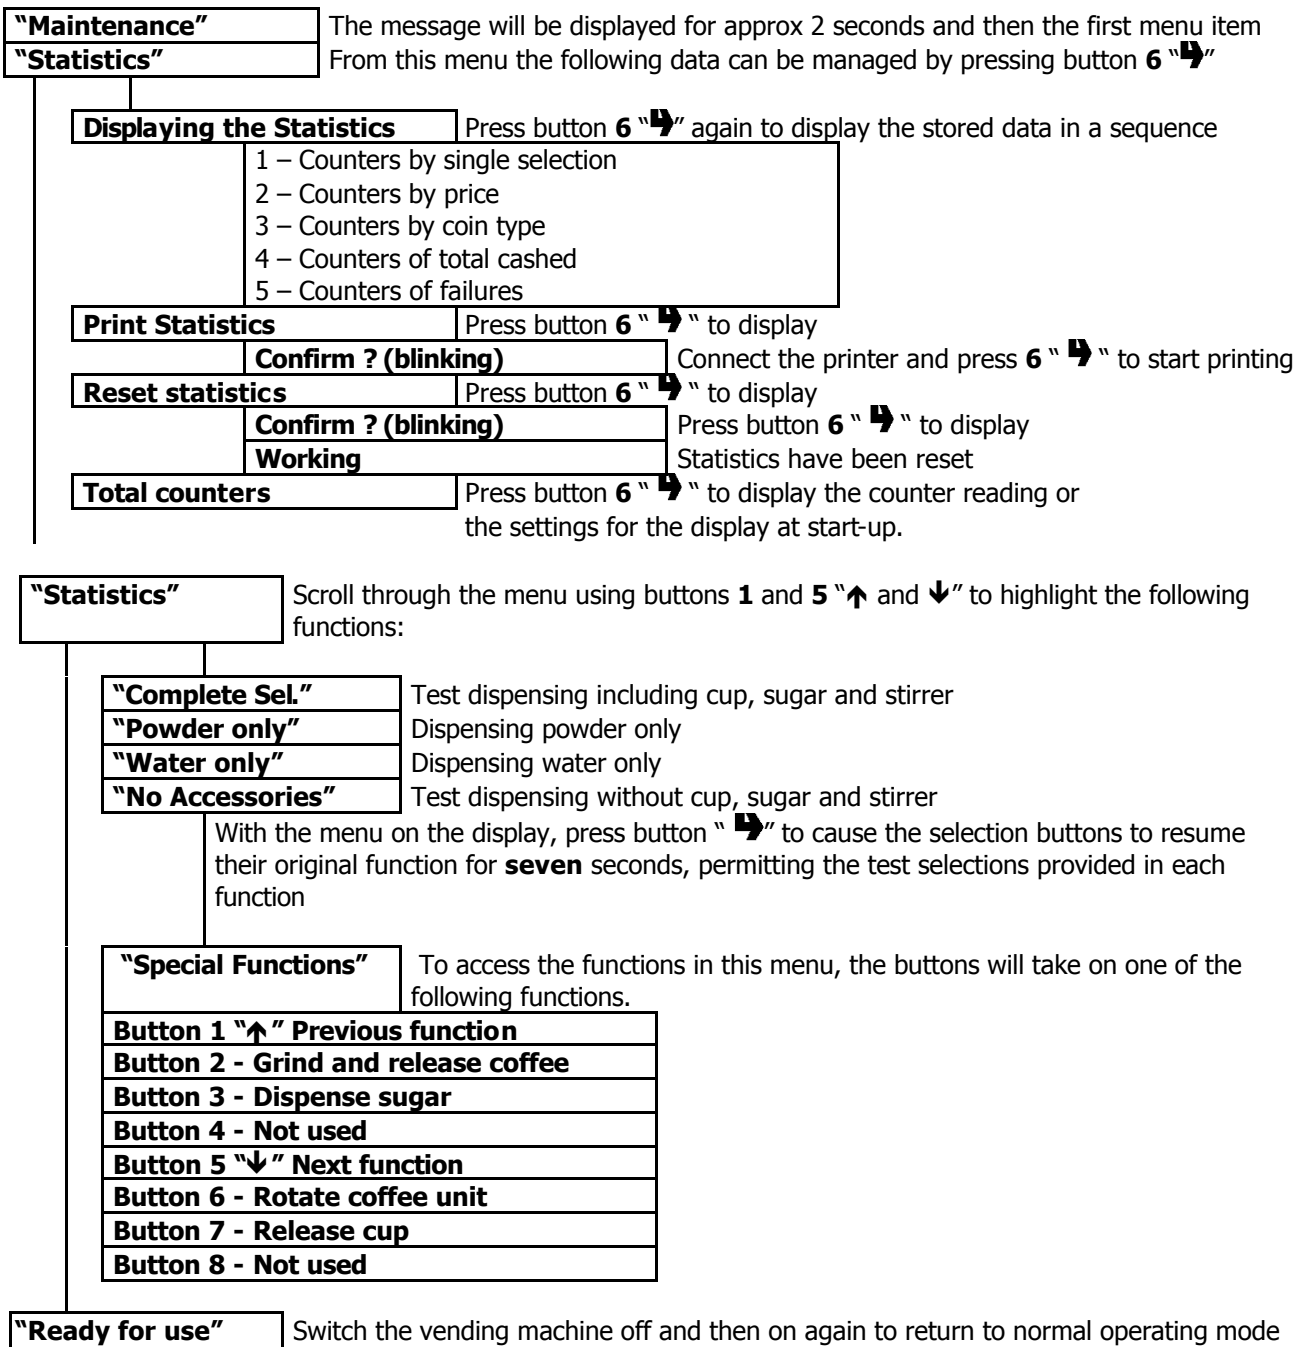


## 2.3 PROGRAMMING

With the vending machine in normal operating mode, press twice the programming button located on the inside of the door, on the push-button board, and the vending machine will be set to "**Programming**" mode.

### Programming

The message will be displayed for approx 2 seconds and then the first menu item

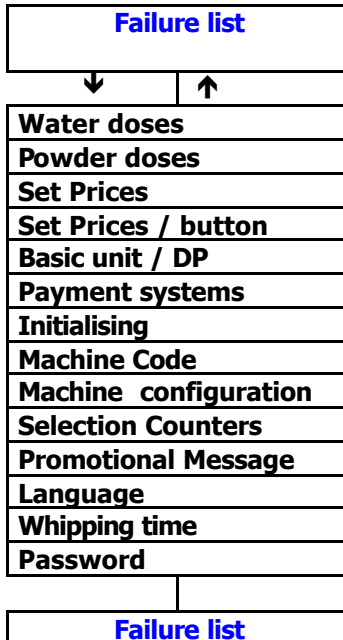

Scroll through the menu using buttons "**1** ↑ and **5** ↓" to display the following items in a sequence

After all items have been displayed the initial menu is presented

While the programming menu is displayed, do as follows to access the sub-menus:



### Failure list

Press button **6** "↵" to display the description of the failure and press in succession button **5** ↓ to display the description of the next failures (if present)  
Press button **8** to reset the failures (only as an indication to the SW, in any case concrete corrective actions must be taken)

- Air-break failure**
- Boiler failure**
- Coin mech. failure**
- RAM data**
- Water failure**
- No cups**
- Water leak**
- Volumetric counter**
- Coffee unit**
- No coffee**
- Coffee failure**
- Cup release failure**

The vending machine locks if the Air-Break microswitch is not activated after 7 selections  
The vending machine locks if after 10 sec (espresso) or after 20 sec (instant) the temperature is not OK  
The machine locks if serial communication fails for more than 30 sec  
RAM data deleted or invalid - initialising is necessary  
The machine locks if, with the solenoid valve energised, the Air-Break microswitch is not activated within one minute.  
The machine locks if after a complete cup column rotation the microswitch is not activated  
If the water inlet solenoid valve is activated without making any selections  
Failed computation of the volumetric counter within a max time  
If the position microswitch is not activated within a max time  
If the coffee volumetric doser microswitch is not activated within 15 sec  
If the doser microswitch is not deactivated after releasing ground coffee  
If the microswitch is not activated after releasing

### Water doses

Press button **6** "↵" to access the list of dose codes

Scroll through the list using buttons "**1** ↑ and **5** ↓" to access the desired item

A1  
A2  
....

After the desired item is shown press button **7** → causing the display to **blink**, then the value can be changed using buttons **1** and **5**  
The value is indicated as **CV** (wheel pulses)

**Powder doses** Press button **6** "↵" to access the list of dose codes  
 Scroll through the list using buttons "**1** ↑ and **5** ↓" to access the desired item  
 After the desired item is shown press button **7** → causing the display to **blink**, then the value can be changed using buttons **1** and **5**  
 The value is indicated as **DS** (tenths of a second)

A1
A2
.....

**Set Prices** Press button **6** "↵" to access the list of prices  
 Scroll through the list using buttons "**1** ↑ and **5** ↓" to access the desired item  
 After the desired item is shown press button **7** → causing the display to **blink**, then the value can be changed using buttons **1** and **5**  
 The value is indicated as **No** of basic units (coins)

Price No 1
-.-.
Price No 8

**Set Prices / button** Press button **6** "↵" to access the list combinations per button  
 Scroll through the list using buttons "**1** ↑ and **5** ↓" to access the desired item  
 After the desired item is shown press button **7** → causing the display to **blink**, then the selection status (enabled or disabled) can be changed using buttons **1** and **5**  
 Press button **6** "↵" again to highlight the No of the concerned price  
 Press button **7** →, the value will start **blinking** and can be changed using buttons **1** and **5**  
 Repeat the operation for all buttons 1 to 8

Button 1 = ON
Button 1 = OFF
Button 1 = ON
Price No xxx
Button 8 = ON
Button 8 =
Button 1 = ON
Price No xxx

↕ ↑

**Basic unit / DP** Press button **6** "↵" to display the current value of the basic unit and  
 DP = Decimal point  
 Use buttons "**1** ↑ and **5** ↓" to display alternating the basic unit and the DP  
 Press button **7** →, the display will start **blinking** and the values can be changed using buttons "**1** ↑ and **5** ↓"

Basic unit xxx.x
Basic unit xx.xx
Basic unit xx.xx
Basic unit x.xxx

**Payment systems** Press button **6** "↵" to display the payment system to be set as default  
 As standard feature a validator / totalizer is provided, for other systems / protocols specific kits must be used

Validator
12 / 24 V power supply
Validator lines A / F
Credit ON / OFF
Executive std.
Price holding
ECS
URW3

Press button **6** "↵" to display the payment system to be installed  
 Press button **6** "↵" again to highlight the operating voltage (12/24V)  
 Press button **5** ↓ to highlight the validator line and press button **6** "↵" to access the line value (**blinking**), press **7** → to change it

Press button **6** "↵" to select whether the credit is to remain available (for three minutes) or be returned - "**1** ↑ ON and **5** ↓" OFF

To activate this menu press button **6** "↵" (only with Kit)

To activate this menu press button **6** "↵" (only with Kit)

To activate this menu press button **6** "↵" (only with Kit)

To activate this menu press button **6** "↵" (only with Kit)

The following menu "initialising" permits all data to be reset to factory default settings

It must be used in the event of data (RAM) errors or of replacing the EPROM: After initialising all data that were changed from the default settings must be reprogrammed.

<b>Initialising</b>	Press button <b>6</b> "↵" to display the message "Confirm?" "
<b>Confirm ?</b>	Press button <b>6</b> "↵" again to display the message "Machine type C / I"
<b>Machine Type C / I</b>	Use buttons <b>1</b> ↑ and <b>5</b> ↓" to select C (espresso) or I (instant)
<b>Country</b>	Press button <b>6</b> "↵" to confirm and <b>1</b> ↑ and <b>5</b> ↓" to scroll the countries
<b>Name of country</b>	Press button <b>6</b> "↵" to select the Country among the available ones, then confirm
<b>Layout</b>	Press button <b>6</b> "↵" to access the layout menu, using buttons <b>1</b> ↑ and <b>5</b> ↓"
<b>Layout N.</b>	select among the displayed ones and with <b>7</b> → confirm the layout
<b>Tank on/ off</b>	Press button <b>6</b> "↵" to access the "tank" menu, using buttons <b>1</b> ↑ and <b>5</b> ↓"
<b>Working</b>	select on / off (ON = water supply from the tank, OFF = water supply from the mains) with button <b>6</b> "↵" confirm and the display indicates the message " <b>Working</b> "

<b>Machine Code</b>	Press button <b>6</b> "↵" to display the current code, then press button <b>7</b> → and the first digit starts blinking
<b>Cod = 0 000</b>	and with buttons <b>1</b> ↑ and <b>5</b> ↓" set the desired digit, with button <b>6</b> "↵" confirm and go to the second digit, and so on to the end of the digits

<b>Config. Machine</b>	Press button <b>6</b> "↵" to display the 1st sub-menu " <b>Tank</b> "
<b>Tank ON / OFF</b>	Press button <b>7</b> → and the message "Tank ON / OFF" starts blinking, with button <b>2</b> ← exit
<b>Disp. cup</b>	Use buttons " <b>1</b> ↑ and <b>5</b> ↓" to go to the next sub-menu and proceed as above
<b>Disp. stirrer</b>	ON or OFF is activated according to the selection
<b>Heating mixers</b>	In this case, proceeding as above, activate mixer heating with a pre-selection (water only) Dispensing water only

From the following menu a pre-set maximum number of espresso coffee selections can be entered, for the purpose of preventing the liquid waste container from overflowing, as it is of small size (this is to be activate only if not using a support cabinet)

<b>Selection Counters</b>	Press button <b>6</b> "↵" to display the 1st sub-menu " <b>Password</b> "
<b>Password ####</b>	Enter the PW and press button <b>6</b> "↵" to access the next sub-menu
<b>Espresso coffee</b>	Press button <b>6</b> "↵" again to access the menu for setting the max N.
<b>P=nnnn A= nnnn</b>	press button <b>6</b> "↵" and the set value start <b>blinking</b> , then using buttons " <b>1</b> ↑ and <b>5</b> ↓" set the values.
<b>P=nnnn A= nnnn</b>	

↓ ↑

**Repeat the same operations for sub-menu "Instant"**

<b>Promotional Message</b>	Press button <b>6</b> "↵" to highlight the message "Message ON / OFF"
<b>Message ON / OFF</b>	<b>ON</b> = enabled, <b>OFF</b> = disabled, with buttons " <b>1</b> ↑ and <b>5</b> ↓" select the desired option
<b>Text to be change or to be entered</b>	If enabled, press button <b>6</b> "↵" and the first character will start blinking, to be changed using the selection buttons, which in this menu take on the following meaning Button 1 - Previous character Button 2 - Next character Button 3 - Upper / lower case Button 4 - A B C D E F G H I Button 5 - J K L M N O P Q R Button 6 - S T U V W Y Z Button 7 - 0 1 2 3 4 5 6 7 8 9 Button 8 - ! " # \$ % , - . / * + The characters are displayed alternated, pressing the button sequentially and are stored by pressing button <b>2</b> ←

<b>Language</b>	Press button <b>6</b> "↵" to access the menu and display the first available language
<b>Italian</b>	Press button <b>7</b> → and the selected language starts blinking, press button <b>6</b> "↵" to confirm To display the other available languages press buttons " <b>1</b> ↑ and <b>5</b> ↓" Proceed as above to select and confirm
<b>French</b>	
<b>German</b>	
<b>Spanish</b>	
<b>Flemish</b>	
<b>Portuguese</b>	
<b>Swedish</b>	
<b>Danish</b>	
<b>Finnish</b>	
<b>Greek</b>	

---

<b>Whipping time</b>	This menu is used to set the whipping time for Instant coffee selections
<b>Whipping t/s xxx</b>	Press button <b>7</b> → to access the function, press button <b>7</b> → and the default time starts blinking, using buttons " <b>1</b> ↑ e <b>5</b> ↓" change such time Press button <b>6</b> "↵" to confirm the change
<b>T / S x x x</b>	

<b>Password</b>	This menu is used to activate or deactivate the request for the factory-set password
<b>Password YES/ NO</b>	Press button <b>6</b> "↵" and the message " <b>password ON / OFF</b> " starts blinking Press buttons " <b>1</b> ↑ and <b>5</b> ↓" to select the option and confirm with button <b>6</b> "↵" (the factory setting CANNOT be changed)

↓ ↑

<b>Failure list</b>	After all items have been displayed the initial menu is presented
---------------------	---