

## Contents

<b>Programming</b>	<b>4</b>
<b>Programming with the operating panel</b>	<b>4.1</b>
General remarks	4.1.1
Program structure	4.1.2
Function of the push buttons in the programming mode	4.1.3
Access to the programming mode	4.1.4
Quitting the programming mode	4.1.5
Selecting and displaying values	4.1.6
Changing values and checking their setting	4.1.7
Setting the starting position of the actuator	4.1.8
Setting the boiler temperature	4.1.9
Setting the max. filling time of the boiler at start up	4.1.10
Setting the max. filling time of the boiler during operation	4.1.11
Setting the leak control	4.1.12
Changing over from coffee delivery to tea delivery	4.1.13
Setting the brewing time for coffee or tea	4.1.14
Setting the brewing time for mocha	4.1.15
Setting the dosing factor	4.1.16
Setting the beverage strength for mild coffee or tea via the product quantity	4.1.17
Setting the beverage strength for normal coffee or tea via the product quantity	4.1.18
Setting the beverage strength for strong coffee or tea via the product quantity	4.1.19
Setting the beverage strength for mild mocha via the product quantity	4.1.20
Setting the beverage strength for normal mocha via the product quantity	4.1.21
Setting the beverage strength for strong mocha via the product quantity	4.1.22
Activation / deactivation of the sensor for cup and pot delivery	4.1.23
Activation / deactivation of the sensor for pot delivery	4.1.24
Setting the starting number for multibrew	4.1.25
Enabling / disabling delivery at low temperature	4.1.26
Delivery mode for hot water	4.1.27
Setting the portion size for coffee or tea	4.1.28
Setting the portion size for mocha	4.1.29
Setting the portion size for hot water	4.1.30
Setting the water quantity for the rinsing process	4.1.31
Setting the mode for the rinsing process	4.1.32
Selection of the payment system	4.1.33
Price setting for coffee or tea	4.1.34
Price setting for mocha	4.1.35
Price setting for portioned hot water delivery	4.1.36
Price number setting for mild coffee or tea delivery	4.1.37
Price number setting for normal coffee or tea delivery	4.1.38
Price number setting for strong coffee or tea delivery	4.1.39
Price number setting for mild mocha delivery	4.1.40

Price number setting for normal mocha delivery	4.1.41
Price number setting for strong mocha delivery	4.1.42
Price number setting for mild multibrew coffe or tea delivery	4.1.43
Price number setting for normal multibrew coffe or tea delivery	4.1.44
Price number setting for strong multibrew coffe or tea delivery	4.1.45
Price number setting for mild multibrew mocha delivery	4.1.46
Price number setting for normal multibrew mocha delivery	4.1.47
Price number setting for strong multibrew mocha delivery	4.1.48
Price number setting for portioned hot water delivery	4.1.49
Price number setting for portioned hot water delivery - multibrew	4.1.50
Resetting to the manufacturer's settings	4.1.51
Test delivery (product quantity)	4.1.52
Test delivery (water volume)	4.1.53
Explanation of the displays	4.1.54

<b><i>Programming with the service device</i></b>	<b>4.2</b>
General remarks on the service device	4.2.1
Entering time and date into the service device	4.2.2
Reading off data from the service device	4.2.3
Program structure	4.2.4
Function of the buttons of the service device	4.2.5
Access to the programming mode with the service device	4.2.6
Quitting the programming mode with the service device	4.2.7
Selecting and displaying values	4.2.8
Changing values and checking the setting	4.2.9
Resetting to the manufacturer's settings	4.2.10
Display of the total number of delivered beverage portions	4.2.11
Display of the paid delivered portions of coffee or tea	4.2.12
Display of the free delivered portions of coffee or tea	4.2.13
Display of the paid delivered portions of mocha	4.2.14
Display of the free delivered portions of mocha	4.2.15
Display of the paid delivered portions of hot water	4.2.16
Display of the free delivered portions of hot water	4.2.17
Display of the paid delivered portions of coffee or tea in pots	4.2.18
Display of the free delivered portions of coffee or tea in pots	4.2.19
Display of the paid delivered portions of mocha in pots	4.2.20
Display of the free delivered portions of mocha in pots	4.2.21
Display of the paid delivered portions of hot water in pots	4.2.22
Display of the free delivered portions of hot water in pots	4.2.23
Display of the total of the delivered product quantity	4.2.24
Display of the total of the delivered portion quantities	4.2.25
Display of the total of the delivered coffee or tea product quantity	4.2.26
Display of the total of the delivered coffee or tea portions	4.2.27
Display of the total of the delivered mocha product quantity	4.2.28
Display of the total of the delivered mocha portions	4.2.29
Display of the total of the delivered hot water portions	4.2.30
Display of the total of the delivered coffee or tea product quantity in multibrew mode	4.2.31
Display of the total of the delivered coffee or tea portions (multibrew mode)	4.2.32

Display of the total of the delivered mocha product quantity in multibrew mode	4.2.33
Display of the total of the delivered mocha portions (multibrew mode)	4.2.34
Display of the total of the delivered hot water portions (multibrew mode)	4.2.35
Changing the dispenser over from coffee to tea	4.2.36
Calibration of the brewer valve	4.2.37
Calibration of the hot water valve	4.2.38
Calibration of the product quantity	4.2.39
Setting the beverage strength for mild mocha via the product quantity with test delivery	4.2.40
Setting the beverage strength for normal mocha via the product quantity with test delivery	4.2.41
Setting the beverage strength for strong mocha via the product quantity with test delivery	4.2.42
Setting the portion size for mocha	4.2.43
Setting the brewing time for mocha	4.2.44
Settings for coffee or tea	4.2.45
Delivery mode for hot water	4.2.46
Portion size for hot water with test delivery	4.2.47
Setting the water quantity for the rinsing process	4.2.48
Setting the mode for the rinsing process	4.2.49
Setting the boiler temperature	4.2.50
Enabling / disabling delivery at low temperature	4.2.51
Setting the max. filling time for the boiler at start up	4.2.52
Setting the max. filling time for the boiler during operation	4.2.53
Setting the leak control	4.2.54
Activation / deactivation of the sensor for cup / pot delivery	4.2.55
Activation / deactivation of the sensor for pot delivery	4.2.56
Selection of the payment system	4.2.57
Price setting for coffee or tea	4.2.58
Price setting for mocha	4.2.59
Price setting for hot water	4.2.60
Setting the price numbers for a portion of mild coffee or tea	4.2.61
Setting the price numbers for a portion of normal coffee or tea	4.2.62
Setting the price numbers for a portion of strong coffee or tea	4.2.63
Setting the price numbers for a portion of mild mocha	4.2.64
Setting the price numbers for a portion of normal mocha	4.2.65
Setting the price numbers for a portion of strong mocha	4.2.66
Setting the price numbers for a pot of mild coffee or tea	4.2.67
Setting the price numbers for a pot of normal coffee or tea	4.2.68
Setting the price numbers for a pot of strong coffee or tea	4.2.69
Setting the price numbers for a pot of mild mocha	4.2.70
Setting the price numbers for a pot of normal mocha	4.2.71
Setting the price numbers for a pot of strong mocha	4.2.72
Setting the price numbers for a portion of hot water	4.2.73
Setting the price numbers for a pot of hot water	4.2.74
Setting the starting number for multibrew	4.2.75
Setting the programming for the operating panel	4.2.76

# 4. Programming

## 4.1 Programming with the operating panel

### 4.1.1 General remarks

- Various adjustments of the dispenser can be changed to suit the different requirements.

 Do not change adjustments without reason. Some parts of the software can only be accessed by the service technician. He achieves access by using a certain push button combination which is not known to the operator. The chap. Program structure indicates for the individual menu items whether they can be accessed only by the service technician or also by the operator.

In this description we assume that the dispenser is in that programming mode which can only be accessed by the service technician. The adjustments of those menu items that are also accessible by the operator are described in detail. For the other menu items please refer to the chap. Programm structure.

 Every change to a setting is saved immediately. There is no special saving procedure.

**ATTENTION:** Only actuate the push buttons as described in these instructions. Otherwise you might change values unintentionally.

 If an adjustment has been changed by mistake you can reset it to the manufacturer's setting (see chap. "Resetting to the manufacturer's settings"). If the dispenser operates with values that differ from the manufacturer's settings this has to be documented.

 For test deliveries the holder (1) for the measuring cup can be suspended.



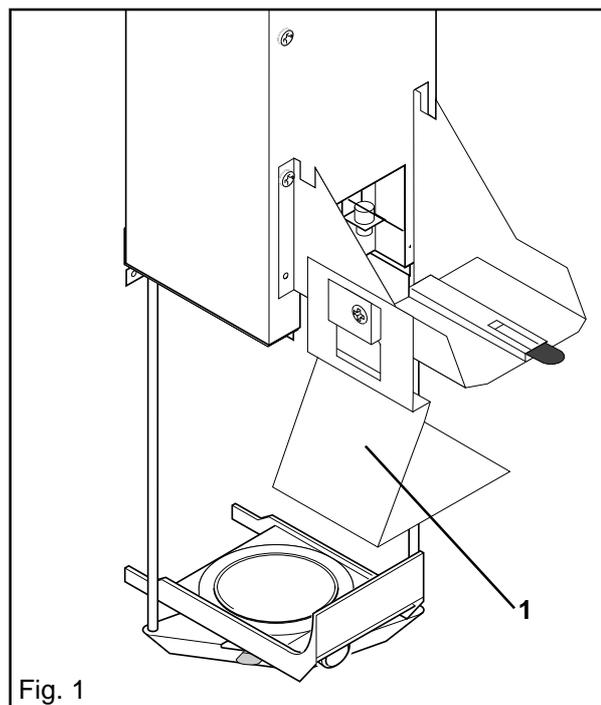


Fig. 1

4.1.2 Program structure (complete program)

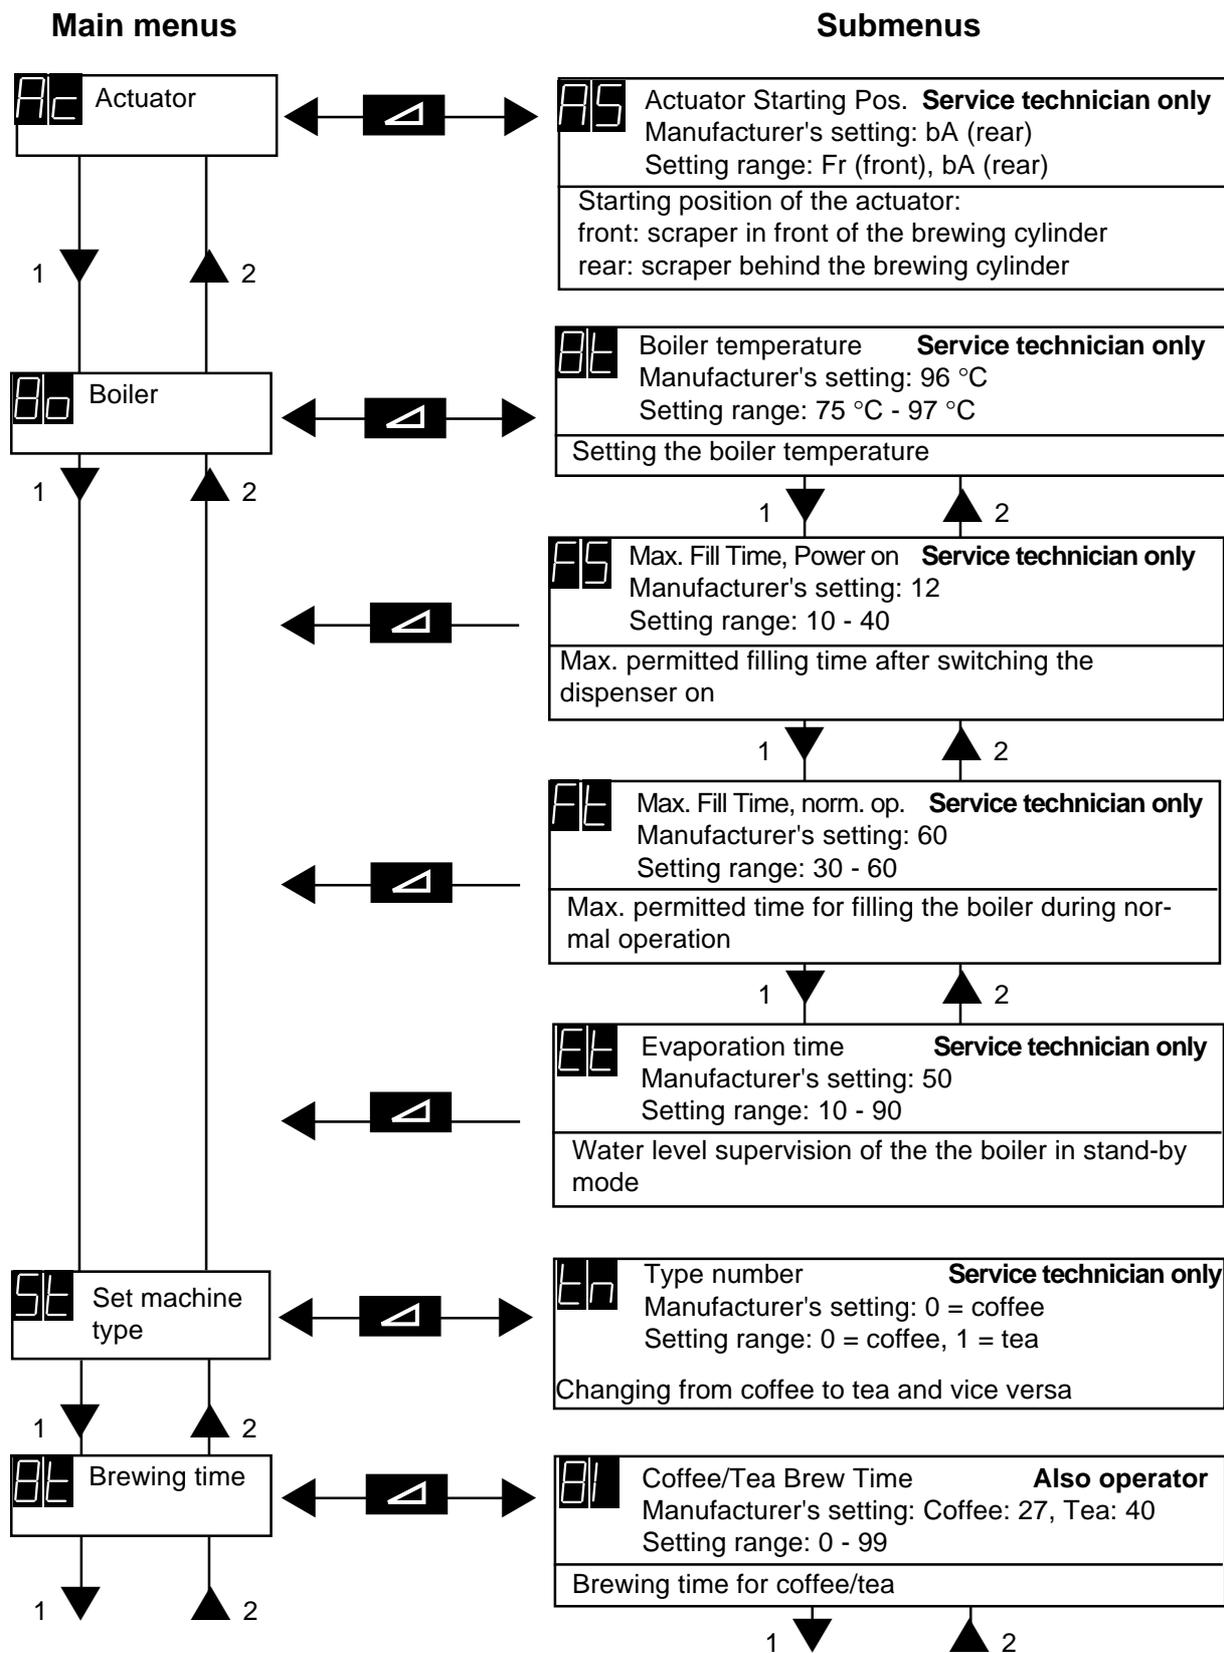


1 ▼ = [Down Arrow], ▲ 2 = [Up Arrow]

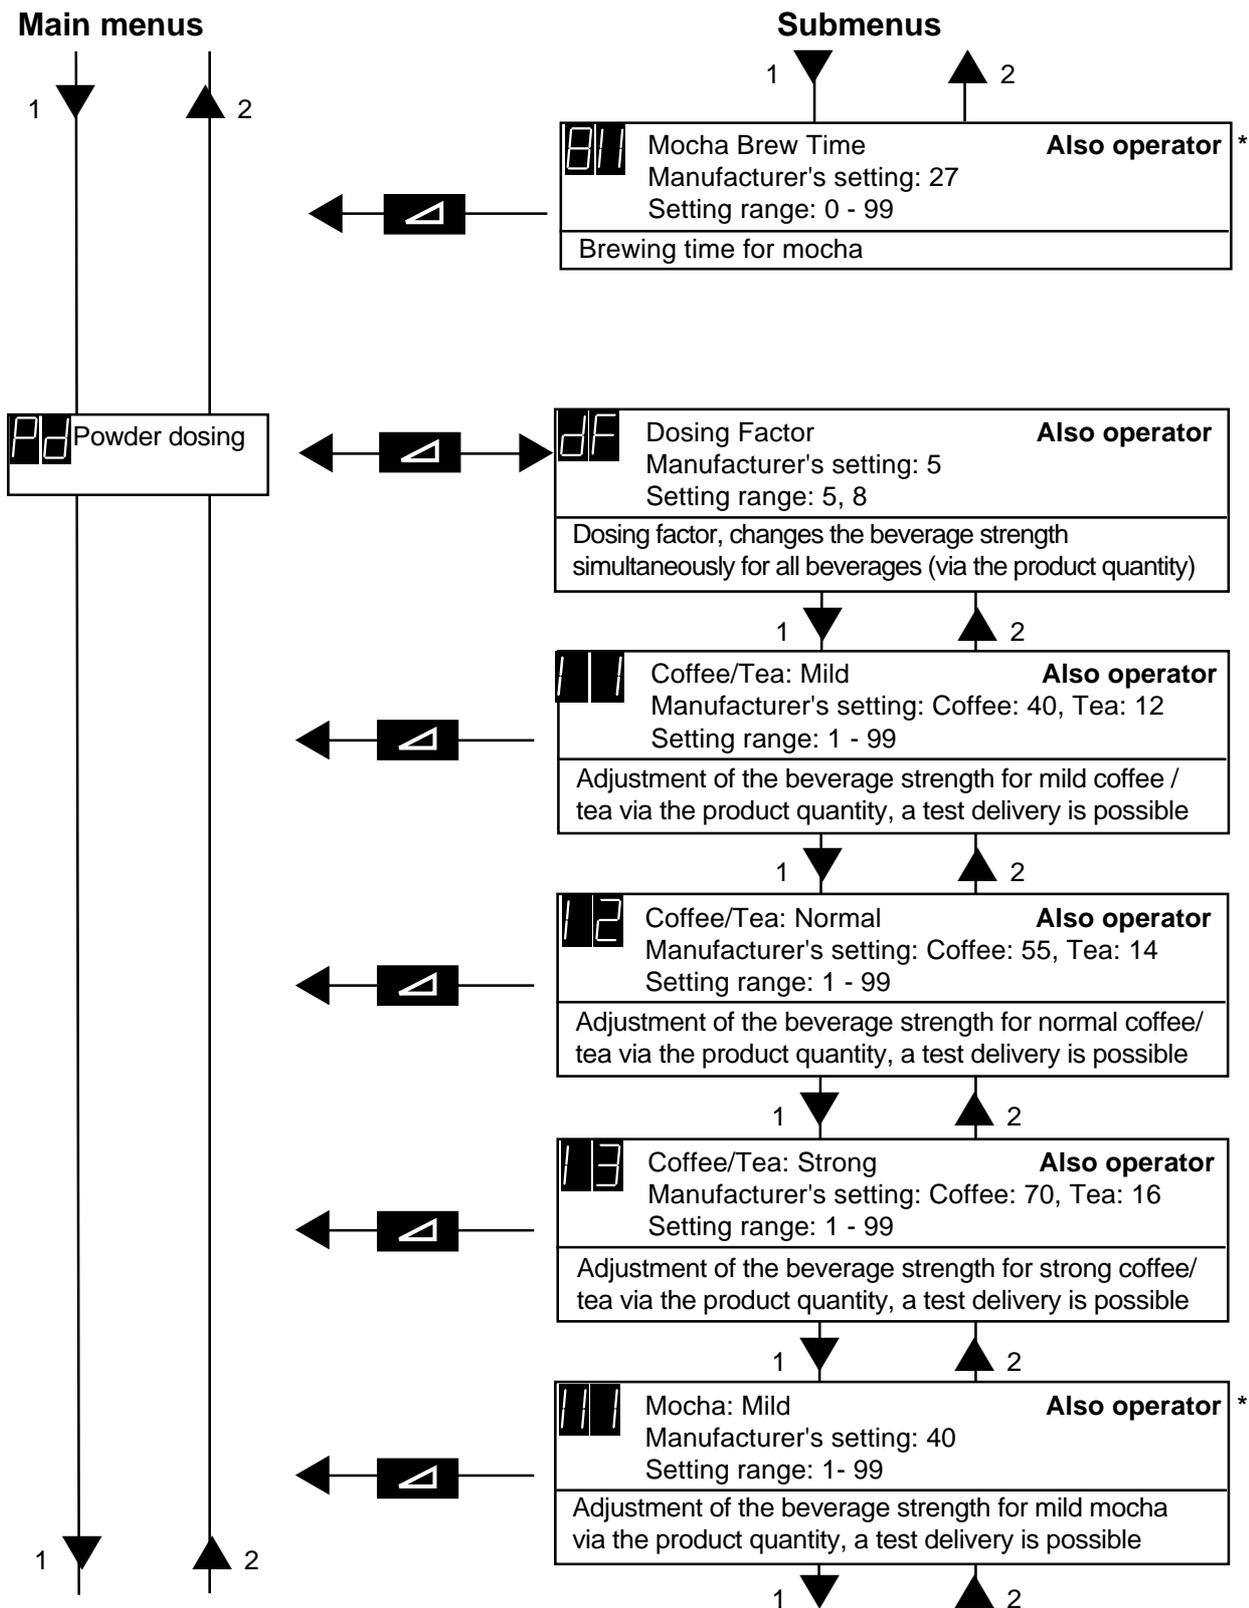


1 ▼ = ,      ▲ 2 = 

\*These steps are not possible for dispensers with tea delivery

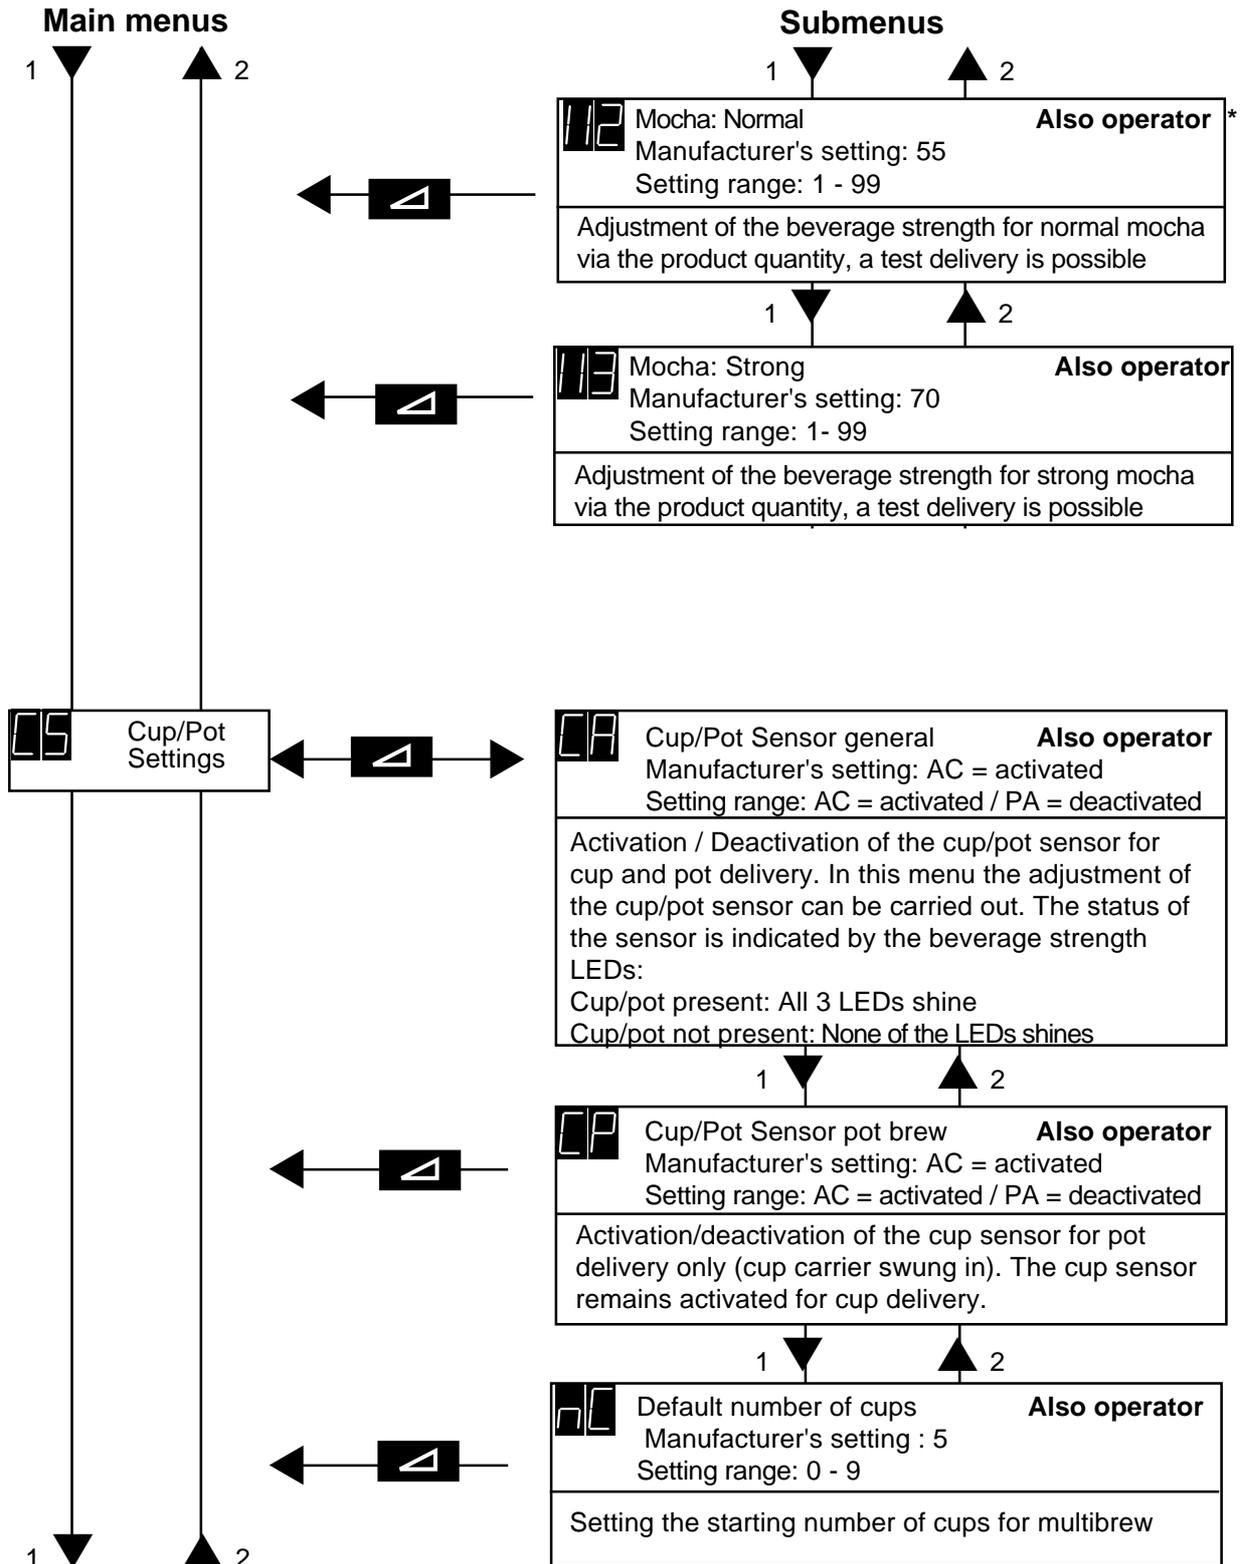

1 ▼ =  ,    ▲ 2 = 

\*These steps are not possible for dispensers with tea delivery

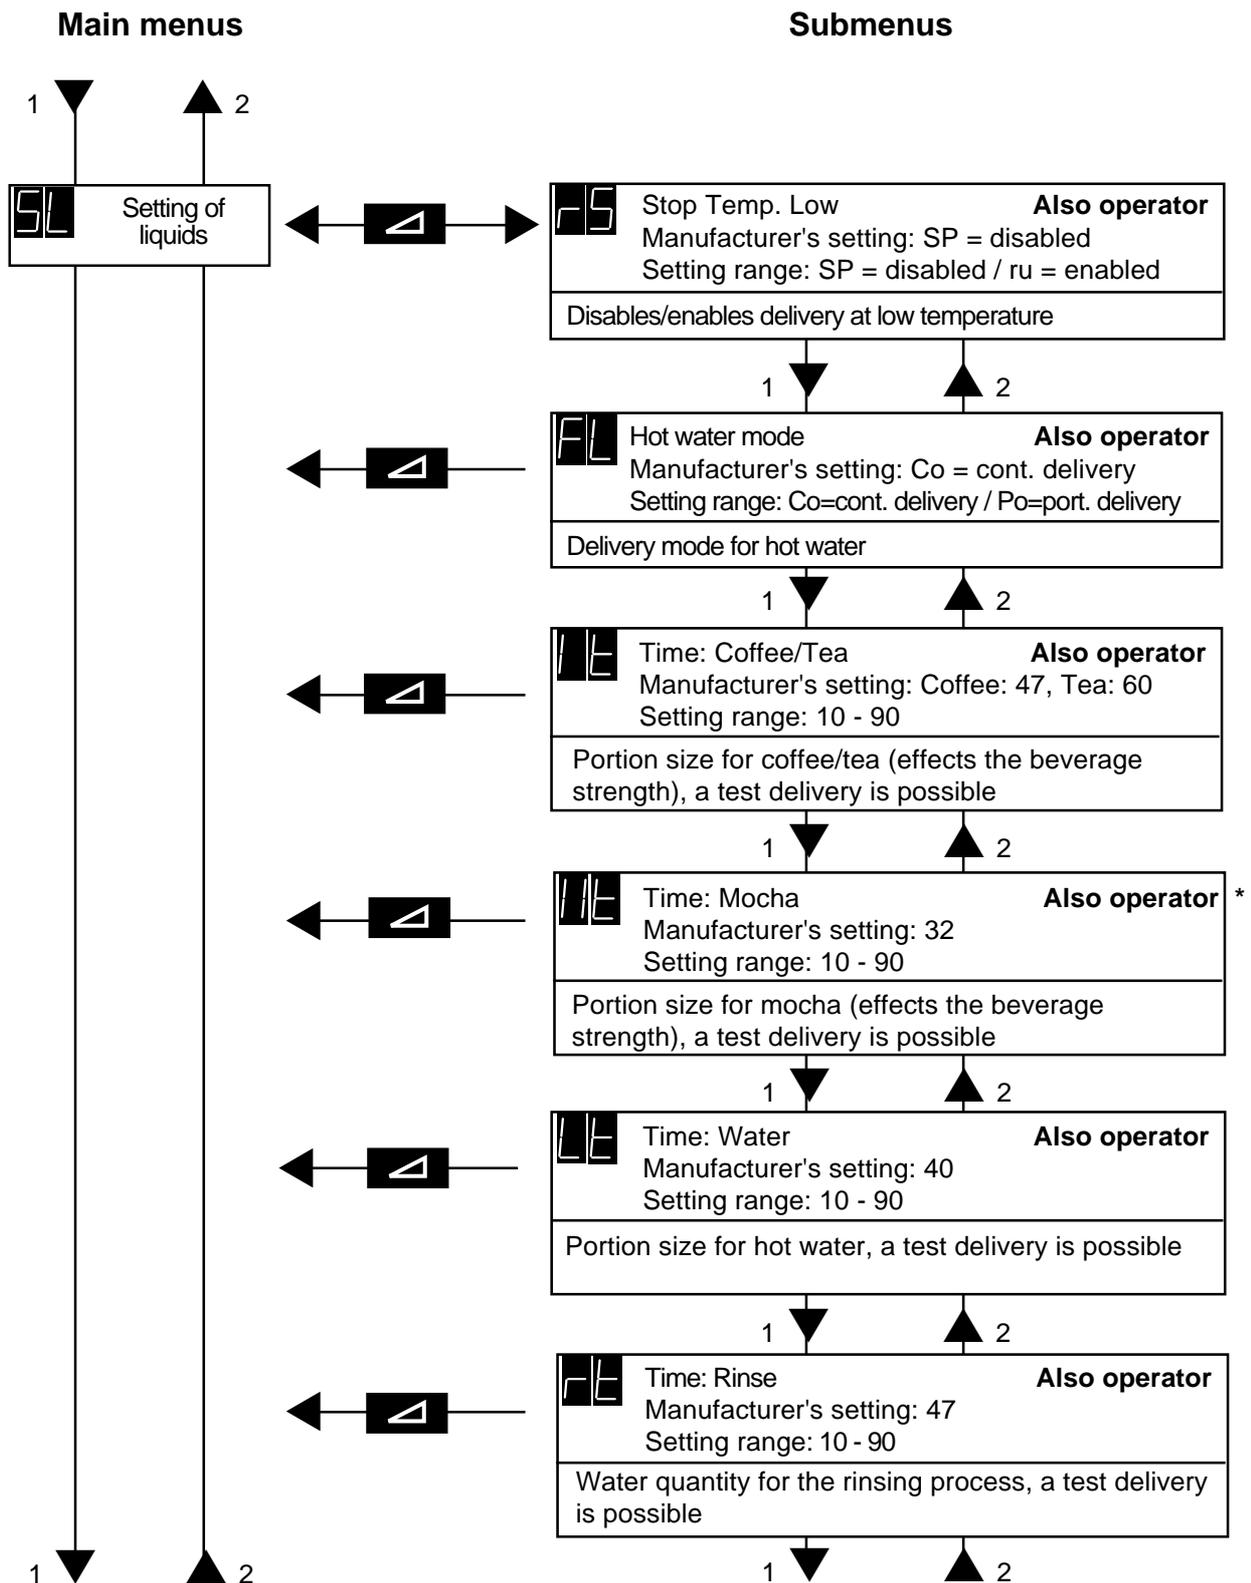


1 ▼ =  , ▲ 2 = 

\*These steps are not possible for dispensers with tea delivery


Main menus

Submenus

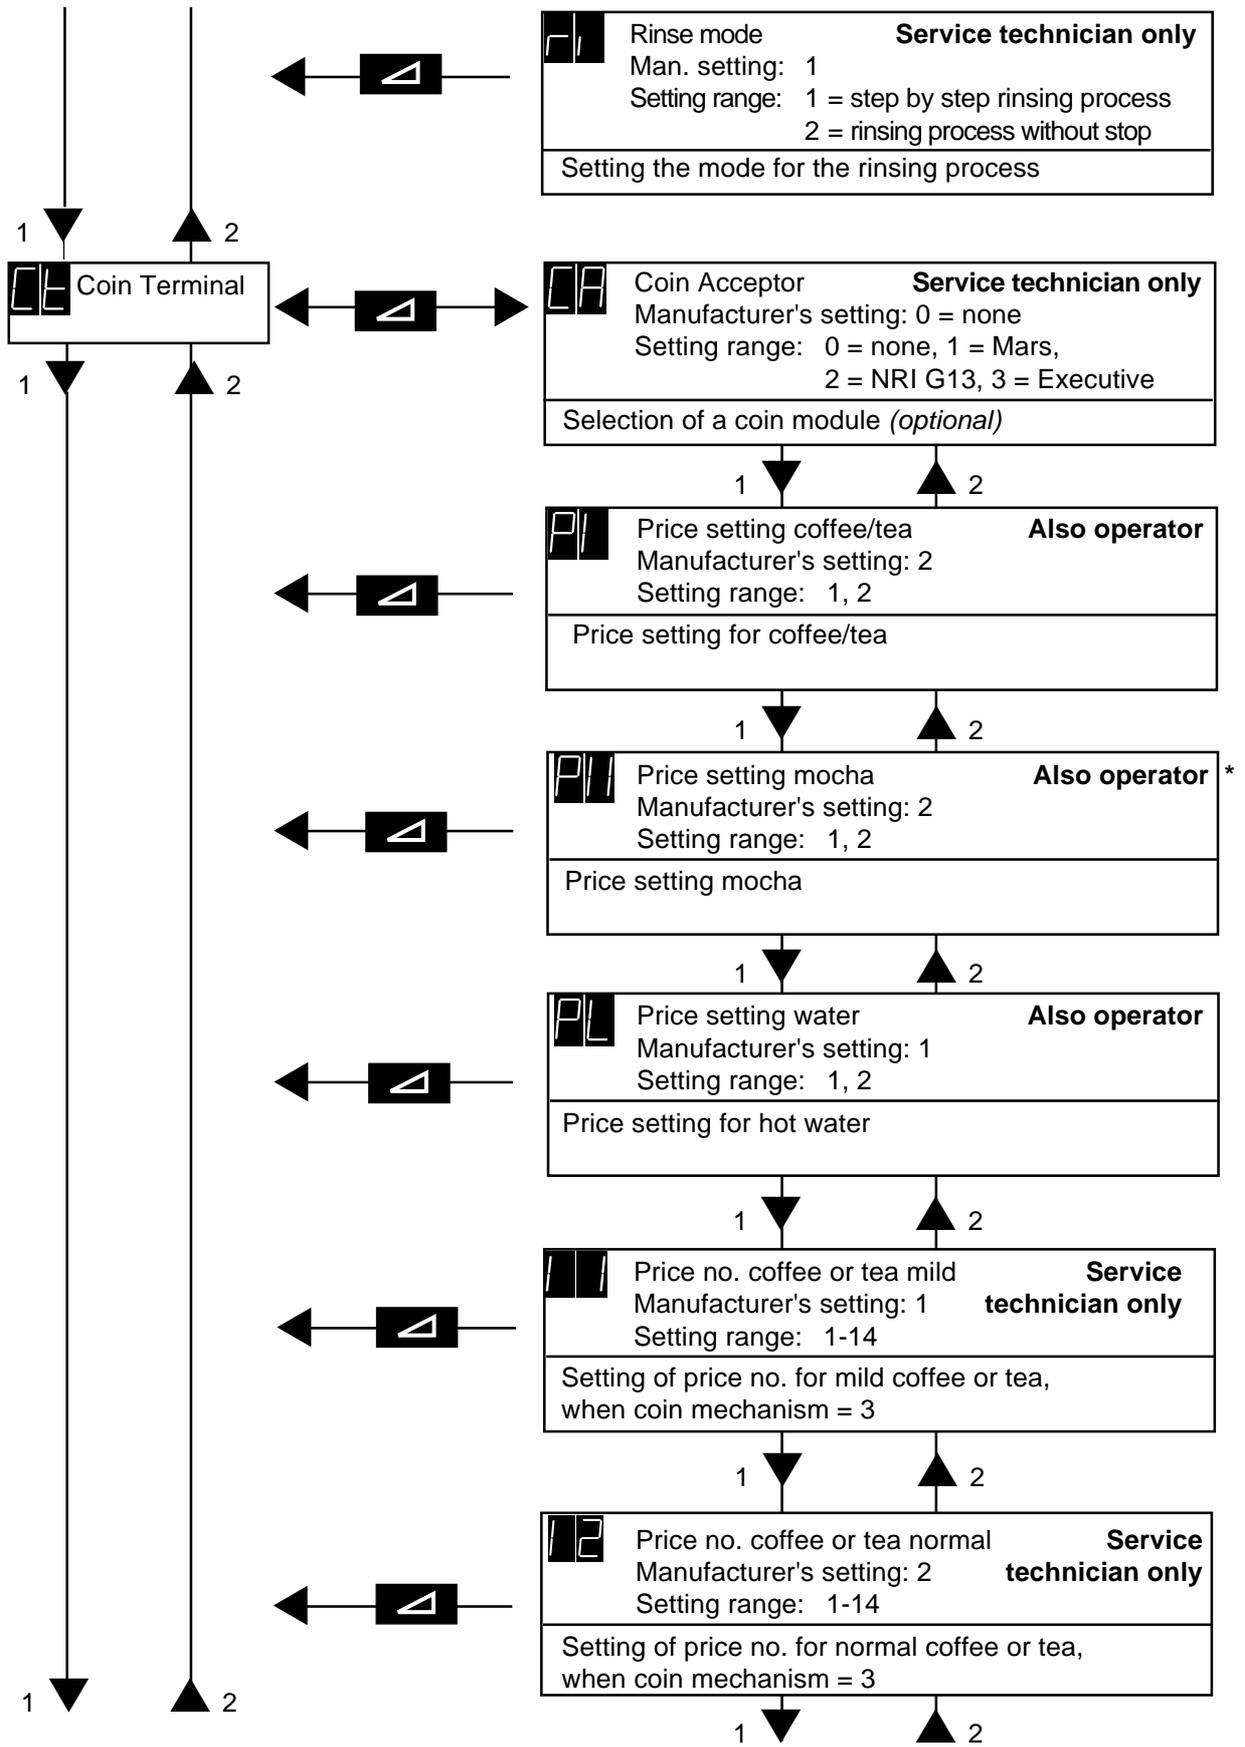


1 ▼ = , ▲ 2 = 

\*These steps are not possible for dispensers with tea delivery

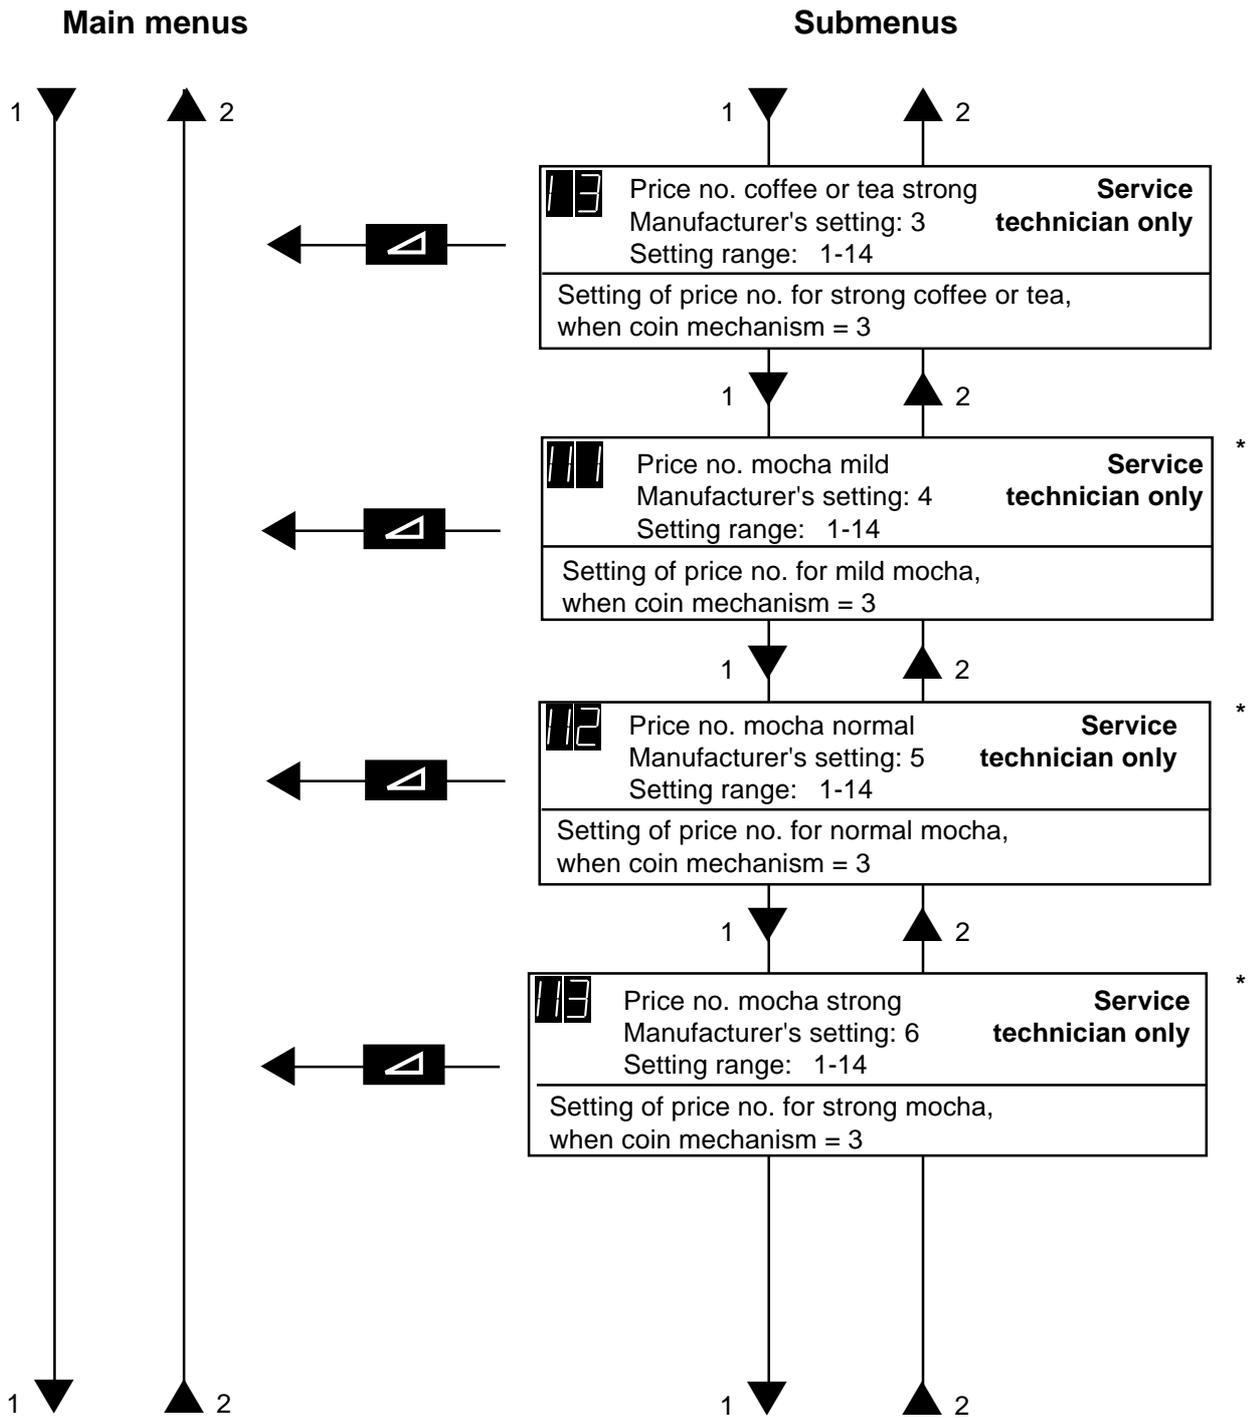


1 ▼ = ,      ▲ 2 =

\*These steps are not possible for dispensers with tea delivery

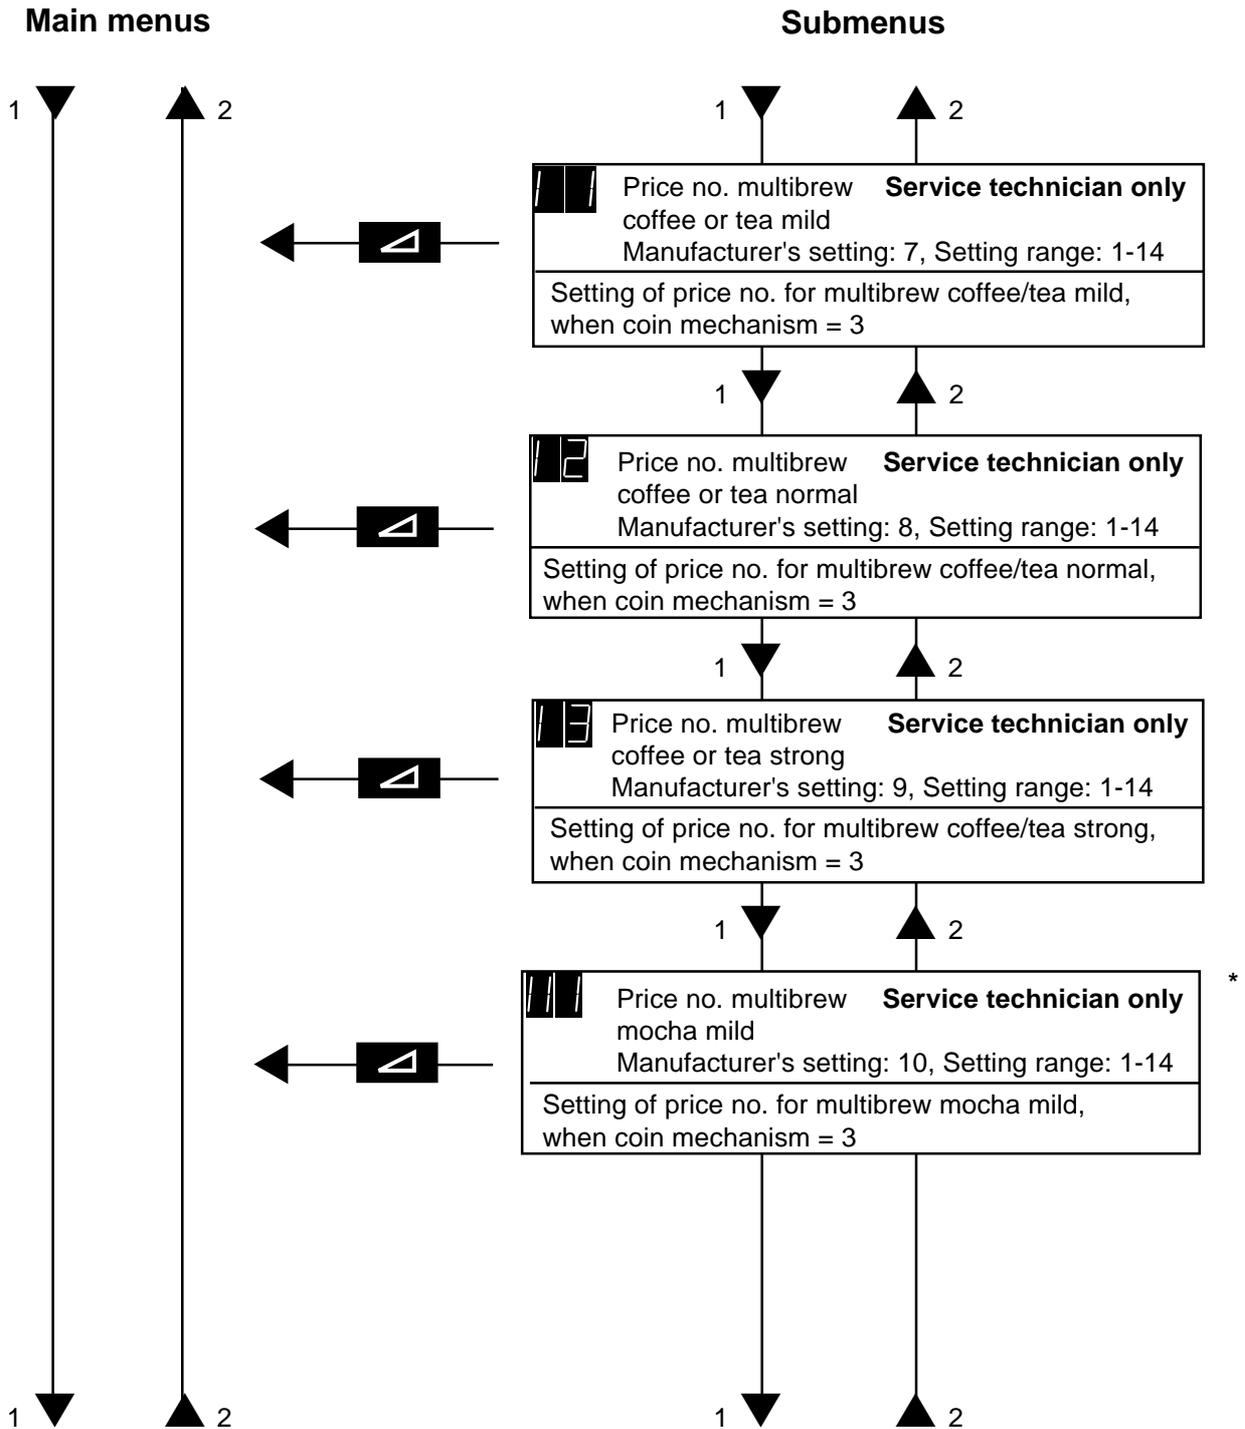

1 ▼ = ,    ▲ 2 = 

\*These steps are not possible for dispensers with tea delivery

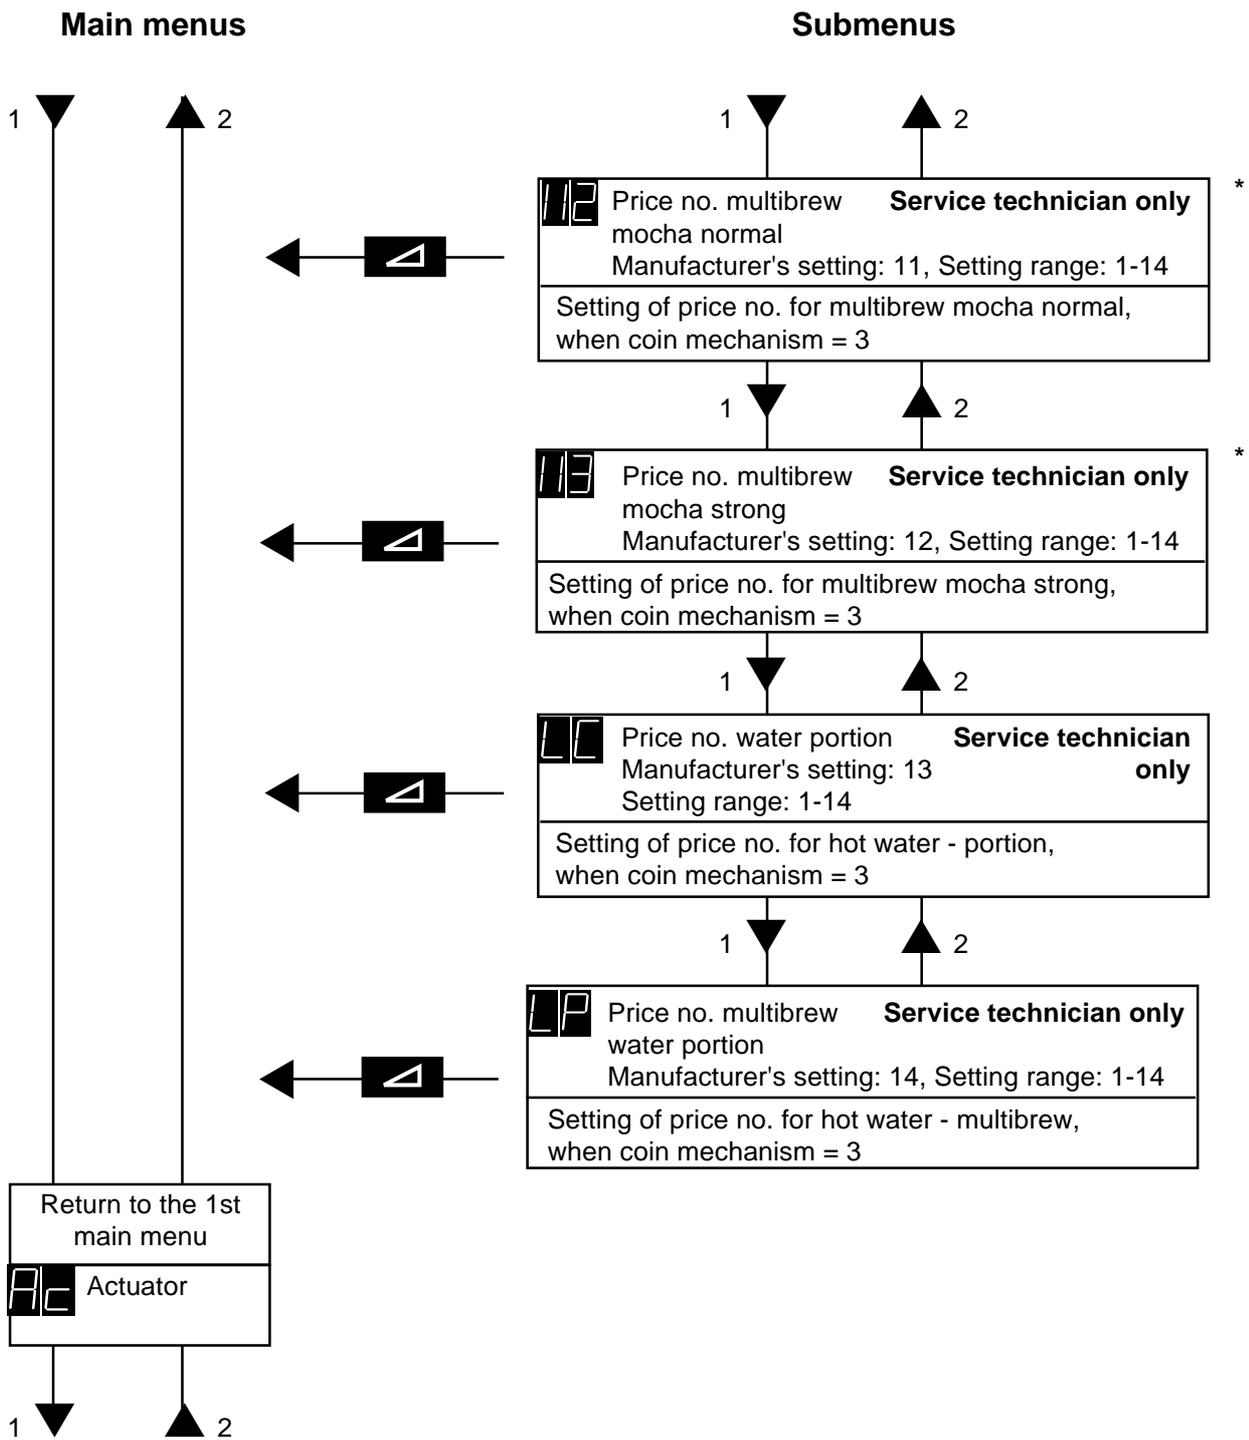

1 ▼ =  ,    ▲ 2 =     \*These steps are not possible for dispensers with tea delivery

### 4.1.3 Function of the push buttons in the programming mode

<div style="border: 1px solid black; padding: 2px; display: inline-block;">Rinse button</div> + 	<p>Activation of the programming mode for the operator / quitting the programming mode, for the operator and the service technician</p>
 +  	<p>Activation of the menus for the service technician</p> <p>Paging forwards through the list of main or submenus. After the last menu the first one reappears.</p>
	<p>Paging backwards through the list of main or submenus. After the first menu the last one reappears.</p>
	<p>Changing between main menu and submenu.</p> <p>For dispensers with coffee delivery:</p>
	<p>Increasing the set value by 1.</p>
	<p>Decreasing the set value by 1.</p>
 + 	<p>Resetting to the manufacturer's setting</p> <p>For dispensers with tea delivery</p>
	<p>Increasing the set value by 1.</p>
	<p>Decreasing the set value by 1.</p>
 + 	<p>Resetting to the manufacturer's setting</p>
<div style="border: 1px solid black; padding: 2px; display: inline-block;">Rinse button</div> + <div style="border: 1px solid black; padding: 2px; display: inline-block;">Safety switch</div>	<p>Test delivery</p>



Operating unit with delivery of coffee



Operating unit with delivery of tea

#### 4.1.4 Access to the programming mode

Button




- Open the left door.
- Wait until the LED of the beverage strength button is extinguished.
- Simultaneously actuate the "rinse button" and the "multibrew button".
- You are now in that part of the program which is accessible to the operator. You can display values and change them.

Display




Access to the menus for the service technician:

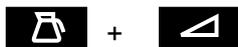

- Simultaneously actuate the "multibrew button" and the "beverage strength button".
- The full programm is now accessible.



#### 4.1.5 Quitting the programming mode

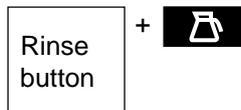

- Simultaneously actuate the "rinse button" and the "multibrew button". The LEDs of the "beverage strength button" shine for 5 sec.
- Close the left door. The dispenser is again ready for operation.



It is possible to quit the programming mode in every position in the program.

### 4.1.6 Selecting and displaying values (service technician)

Button		Display
	- Enter the programming mode (see chap. Access to the programming mode)	
	1. Selection of the main menu	
	- Paging forwards: "multibrew button"	
	or paging backwards: "hot water button"	
 4x	<b>Example:</b> Actuate the "multibrew button" 4 times to select the "dosing system"	
	2. Selection of the submenu	
	- Actuate the "beverage strength button"	
	- The first submenu in the group "powder dosing" is displayed.	
	- Paging forwards: "multibrew button"	
	or paging backwards: "hot water button" to select the submenu.	
 3x	<b>Display:</b> 13 for "strong coffee" is displayed.	
 1)	- Actuate the "coffee button"	
 2)	or the "mocha button", the display then shows the set value.	
	- Use the "beverage strength button" to return to the main menu.	

with tea: Press 1)  or 2) 

### 4.1.7 Changing values and checking their setting

Button

- Enter the programming mode (see chap. Access to the programming mode).
- Select the menu (see chap. Selecting and displaying values).
- The designation of the selected value is displayed.

Display



or



1)

- Actuate the "coffee" or the "mocha" button". The set value is then displayed.



2)

- To increase the value: use the "coffee button" to increase the value in steps of 1.



3)

- To decrease the value: use the "mocha button" to decrease the value in steps of 1.

#### Checking the setting:



- Actuate the "multibrew button" and the next menu is displayed.



- Actuate the "hot water button" and the menu which has just been set is displayed again.

- Check whether the value is correct.

- Quit the programming mode  
or  
select a new menu.

with tea: 1) press  or   
 2)  to increase the value  
 3)  to decrease the value

### 4.1.8 Setting the starting position of the actuator

Button			Display	
Rinse button	+		- Simultaneously actuate the "rinse button" and the "multibrew button".	
	+		- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
			- Actuate the "beverage strength button".	
	or	 1)	- Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: Fr (front), bA (rear) Manufacturer's setting: bA	
	or	 2)	- Changing the setting: Actuate the "coffee" or "mocha button"	
			Checking the setting:	
			- Actuate the "beverage strength button".	
			- Actuate the "beverage strength button"	
	or	 3)	- Actuate the "coffee" or the "mocha button" and check the setting.	
Rinse button	+		- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or   
 2) press  or   
 3)  or  : to check the adjustment

### 4.1.9 Setting the boiler temperature

Button			Display	
	+		- Simultaneously actuate the "rinse button" and the "multibrew button".	
	+		- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
			- Actuate the "multibrew button".	
			- Actuate the "beverage strength button".	
	or	 1)	- Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 75 °C–97 °C Manufacturer's setting: 96 °C	
	or	 2)	- Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:				
			- Actuate the "multibrew button".	
			- Actuate the "hot water button"	
	or	 3)	- Actuate the "coffee" or the "mocha button" and check the setting.	
	+		- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or 
- 2)  to increase the value  
 to decrease the value
- 3)  or  : to check the adjustment

### 4.1.10 Setting the max. filling time of the boiler at start up

Button			Display	
	+		- Simultaneously actuate the "rinse button" and the "multibrew button".	
	+		- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
			- Actuate the "multibrew button".	
			- Actuate the "beverage strength button".	
			- Actuate the "multibrew button".	
	or	 1)	- Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 10–40 (100–400 sec.) Manufacturer's setting: 12 (120 sec.)	
	or	 2)	- Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:				
			- Actuate the "multibrew button".	
			- Actuate the "hot water button"	
	or	 3)	- Actuate the "coffee" or the "mocha button" and check the setting.	
	+		- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	


- with tea: 1) press  or 
- 2)  to increase the value  
 to decrease the value
- 3)  or  : to check the adjustment

### 4.1.11 Setting the max. filling time of the boiler during operation

Button			Display	
	+		- Simultaneously actuate the "rinse button" and the "multibrew button".	
	+		- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
			- Actuate the "multibrew button".	
			- Actuate the "beverage strength button".	
	2x		- Actuate the "multibrew button" twice.	
	or	 1)	- Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 30–60 sec. Manufacturer's setting: 60 sec.	
	or	 2)	- Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:				
			- Actuate the "multibrew button".	
			- Actuate the "hot water button"	
	or	 3)	- Actuate the "coffee" or the "mocha button" and check the setting.	
	+		- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or 
- 2)  to increase the value  
 to decrease the value
- 3)  or  : to check the adjustment

### 4.1.12 Setting the leak control

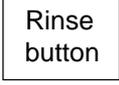Button			Display	
	+		- Simultaneously actuate the "rinse button" and the "multibrew button".	
	+		- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
			- Actuate the "multibrew button".	
			- Actuate the "beverage strength button".	
	3x		- Actuate the "multibrew button" 3 times.	
	or	 1)	- Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 5–90 min. Manufacturer's setting: 10 min.	
	or	 2)	- Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:				
			- Actuate the "hot water button".	
			- Actuate the "multibrew button"	
	or	 3)	- Actuate the "coffee" or the "mocha button" and check the setting.	
	+		- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or   
 2)  to increase the value  
 to decrease the value  
 3)  or  : to check the adjustment

### 4.1.13 Changing over from coffee delivery to tea delivery

Button		Display
	- Open the left door	
<span style="border: 1px solid black; padding: 2px;">Rinse button</span> + 	- Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 2x	- Actuate the "multibrew button" twice.	
	- Actuate the "beverage strength button".	
 or  1)	- Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range 0 = coffee, 1 = tea, Manufacturer's setting: 0	
 or  2)	- Changing the setting: Actuate the "coffee" or the "mocha" button	
Checking the setting:		
 2x	- Actuate the "beverage strength button" twice.	
 or  3)	- Actuate the "coffee" or the "mocha button" and check the setting.	
<span style="border: 1px solid black; padding: 2px;">Rinse button</span> + 	- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	


with tea: 1) press  or   
 2) press  or   
 3)  or  : to check the adjustment

### 4.1.14 Setting the brewing time for coffee or tea

Button			Display
		- Open the left door.	
	+ 	- Simultaneously actuate the "rinse button" and the "multibrew button".	
	+ 	- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
	3x	- Actuate the "multibrew button" 3 times.	
		- Actuate the "beverage strength button".	
	or 	1) - Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 0–99, Manufacturer's setting: Coffee: 27 (2.7 sec), Tea: 40 (4.0 sec)	
	or 	2) - Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:			
		- Actuate the "multibrew button".	 4)
		- Actuate the "hot water button"	
	or 	3) - Actuate the "coffee" or the "mocha button" and check the setting.	
	+ 	- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	


- with tea: 1) press  or 
- 2)  to increase the value  
 to decrease the value
- 3)  or  : to check the adjustment
- 4) Not for dispensers with tea delivery

### 4.1.15 Setting the brewing time for mocha \*

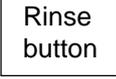Button		Display
	- Open the left door.	
 + 	- Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 3x	- Actuate the "multibrew button" three times.	
	- Actuate the "beverage strength button".	
 1x	- Actuate the "multibrew button" once.	
 or 	- Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 0–99, Manufacturer's setting: 27 (2.7 sec)	
 or 	- Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:		
	- Actuate the "hot water button".	
	- Actuate the "multibrew button"	
 or 	- Actuate the "coffee" or the "mocha button" and check the setting.	
 + 	- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

\* Not possible for dispensers with tea delivery.

### 4.1.16 Setting the dosing factor

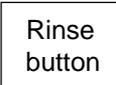Button		Display
	- Open the left door.	
 + 	- Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 4x	- Actuate the "multibrew button" four times.	
	- Actuate the "beverage strength button".	
 or  1)	- Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 5 or 8, Manufacturer's setting: 5	
 or  2)	- Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
	Checking the setting:	
	- Actuate the "multibrew button".	
	- Actuate the "hot water button"	
 or  3)	- Actuate the "coffee" or the "mocha button" and check the setting.	
 + 	- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or   
 2)  to increase the value  
 to decrease the value  
 3)  or  : to check the adjustment

### 4.1.17 Setting the beverage strength for mild coffee and tea via the product quantity

Button			Display
		- Open the left door.	
Rinse button	+ 	- Simultaneously actuate the "rinse button" and the "multibrew button".	
	+ 	- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
	4x	- Actuate the "multibrew button" four times.	
		- Actuate the "beverage strength button".	
	1x	- Actuate the "multibrew button" once.	
	or  1)	- Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1–99, Manufacturer's setting: Coffee: 40, Tea: 12 In this menu it is possible to carry out a test delivery (see chap. Test delivery (product quantity))	
	or  2)	- Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:			
		- Actuate the "multibrew button".	
		- Actuate the "hot water button"	
	or  3)	- Actuate the "coffee" or the "mocha button" and check the setting.	
Rinse button	+ 	- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	


- with tea: 1) press  or   
 2)  to increase the value  
 to decrease the value  
 3)  or  : to check the adjustment

### 4.1.18 Setting the beverage strength for normal coffee or tea via the product quantity

Button			Display		
	-	Open the left door.			
 Rinse button	+		-	Simultaneously actuate the "rinse button" and the "multibrew button".	
	+		-	Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 4x			-	Actuate the "multibrew button" four times.	
			-	Actuate the "beverage strength button".	
 2x			-	Actuate the "multibrew button" twice.	
 or  1)			-	Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1–99, Manufacturer's setting: Coffee: 55, Tea: 14 In this menu it is possible to carry out a test delivery (see chap. Test delivery (product quantity))	
 or  2)			-	Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:					
			-	Actuate the "multibrew button".	
			-	Actuate the "hot water button"	
 or  3)			-	Actuate the "coffee" or the "mocha button" and check the setting.	
 Rinse button	+		-	Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or 
- 2)  to increase the value  
 to decrease the value
- 3)  or  : to check the adjustment

### 4.1.19 Setting the beverage strength for strong coffee or tea via the product quantity

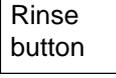Button			Display	
	-	Open the left door.		
	+		- Simultaneously actuate the "rinse button" and the "multibrew button".	
	+		- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
	4x		- Actuate the "multibrew button" four times.	
			- Actuate the "beverage strength button".	
	3x		- Actuate the "multibrew button" three times.	
	or	 1)	- Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1–99, Manufacturer's setting: Coffee: 70, Tea: 16 <i>In this menu it is possible to carry out a test delivery (see chap. Test delivery (product quantity))</i>	
	or	 2)	- Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:				
			- Actuate the "multibrew button".	
			- Actuate the "hot water button"	
	or	 3)	- Actuate the "coffee" or the "mocha button" and check the setting.	
	+		- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or 
- 2)  to increase the value  
 to decrease the value
- 3)  or  : to check the adjustment

### 4.1.20 Setting the beverage strength for mild mocha via the product quantity \*

Button	-	Display
	- Open the left door.	
 + 	- Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 4x	- Actuate the "multibrew button" four times.	
	- Actuate the "beverage strength button".	
 4x (or 3x  )	- Actuate the "multibrew button" four times.	
 or 	- Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1–99, Manufacturer's setting: 40 In this menu it is possible to carry out a test delivery ( <i>see chap. Test delivery (product quantity)</i> )	
 or 	- Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:		
	- Actuate the "multibrew button".	
	- Actuate the "hot water button".	
 or 	- Actuate the "coffee" or the "mocha button" and check the setting.	
 + 	- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	


\* Not possible for dispensers with tea delivery.

### 4.1.21 Setting the beverage strength for normal mocha via the product quantity \*

Button			Display		
	-	Open the left door.			
	+		-	Simultaneously actuate the "rinse button" and the "multibrew button".	
	+		-	Simultaneously actuate the "multibrew button" and the "beverage strength button".	
	4x		-	Actuate the "multibrew button" four times.	
			-	Actuate the "beverage strength button".	
	5x (or 2x  )		-	Actuate the "multibrew button" five times.	
	or		-	Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1–99, Manufacturer's setting: 55 In this menu it is possible to carry out a test delivery (see chap. Test delivery (product quantity))	
	or		-	Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
		Checking the setting:			
			-	Actuate the "multibrew button".	
			-	Actuate the "hot water button".	
	or		-	Actuate the "coffee" or the "mocha button" and check the setting.	
	+		-	Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

\* Not possible for dispensers with tea delivery.

### 4.1.22 Setting the beverage strength for strong mocha via the product quantity \*

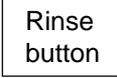Button			Display		
	-	Open the left door.			
	+		-	Simultaneously actuate the "rinse button" and the "multibrew button".	
	+		-	Simultaneously actuate the "multibrew button" and the "beverage strength button".	
	4x		-	Actuate the "multibrew button" four times.	
			-	Actuate the "beverage strength button".	
	6x (or 1x  )		-	Actuate the "multibrew button" six times.	
	or		-	Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1–99, Manufacturer's setting: 70 In this menu it is possible to carry out a test delivery (see chap. Test delivery (product quantity))	
	or		-	Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
				Checking the setting:	
			-	Actuate the "hot water button".	
			-	Actuate the "multibrew button".	
	or		-	Actuate the "coffee" or the "mocha button" and check the setting.	
	+		-	Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

\* Not possible for dispensers with tea delivery.

### 4.1.23 Activation / deactivation of the sensor for cup and pot delivery

Button		Display
	- Open the left door.	
 + 	- Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 5x (or 3x  )	- Actuate the "multibrew button" five times.	
	- Actuate the "beverage strength button".	
 or  1)	- Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Manufacturer's setting: AC Setting range: AC = sensor activated PA = sensor deactivated	
 or  2)	- Changing the setting: Actuate the "coffee" or "mocha" button	

**WARNING:** When the sensor is deactivated beverages and hot water will also be delivered when there is no cup or pot in the dispenser. There is an increased risk of being scalded.

Checking the setting:

	- Actuate the "multibrew button".	
	- Actuate the "hot water button".	
 or  3)	- Actuate the "coffee" or the "mocha button" and check the setting.	
 + 	- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or   
 2) press  or   
 3)  or  : to check the adjustment

### 4.1.24 Activation / deactivation of the sensor for pot delivery

Button			Display		
	+		-	Open the left door.	
	+		-	Simultaneously actuate the "rinse button" and the "multibrew button".	
	5x (or 3x  )		-	Simultaneously actuate the "multibrew button" and the "beverage strength button".	
			-	Actuate the "multibrew button" five times.	
	1x		-	Actuate the "beverage strength button".	
	or		1)	Actuate the "multibrew button" once.	
				Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Manufacturer's setting: AC Setting range: AC = sensor activated PA = sensor deactivated	
	or		2)	Changing the setting: Actuate "coffee" or "mocha" button	

**WARNING:** When the sensor is deactivated beverages and hot water will also be delivered when there is no cup or pot in the dispenser. Do not swing in the cup carrier and actuate a delivery button without placing vessel in the delivery area. There is an increased risk of being scalded.

Checking the setting:

			-	Actuate the "multibrew button".	
			-	Actuate the "hot water button".	
	or		3)	Actuate the "coffee" or the "mocha button" and check the setting.	
	+		-	Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or   
 2) press  or   
 3)  or  : to check the adjustment

### 4.1.25 Setting the starting number for multibrew

Button	-	Display
	- Open the left door.	
<span style="border: 1px solid black; padding: 2px;">Rinse button</span> + 	- Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 5x (or 3x  )	- Actuate the "multibrew button" five times.	
	- Actuate the "beverage strength button".	
 2x	- Actuate the "multibrew button" twice.	
  1)	- Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Manufacturer's setting: 5 Setting range: 0-9	
 or  2)	- Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
	Checking the setting:	
	- Actuate the "hot water button".	
	- Actuate the "multibrew button".	
  3)	- Actuate the "coffee" or the "mocha button" and check the setting.	
<span style="border: 1px solid black; padding: 2px;">Rinse button</span> + 	- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or 
- 2)  to increase the value  
 to decrease the value
- 3)  or  : to check the adjustment

### 4.1.26 Enabling / disabling delivery at low temperature

Button	-	Display
	- Open the left door.	
<span style="border: 1px solid black; padding: 2px;">Rinse button</span> + 	- Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 6x (or 2x  )	- Actuate the "multibrew button" six times.	
	- Actuate the "beverage strength button".	
 or  1)	- Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Manufacturer's setting: SP Setting range: SP = delivery disabled ru = delivery enabled	
 or  2)	- Changing the setting: Actuate the "coffee" or "mocha" button	


 If delivery at low temperature is enabled it is possible to deliver cold beverages. In this case the country-specific regulations concerning the temperature have to be observed.

Checking the setting:

	- Actuate the "multibrew button".	
	- Actuate the "hot water button".	
 or  3)	- Actuate the "coffee" or the "mocha button" and check the setting.	
<span style="border: 1px solid black; padding: 2px;">Rinse button</span> + 	- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	


- with tea: 1) press  or   
 2) press  or   
 3)  or  : to check the adjustment

### 4.1.27 Delivery mode for hot water

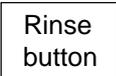Button	-	Display
	- Open the left door.	
 + 	- Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 6x (or 2x  )	- Actuate the "multibrew button" six times.	
	- Actuate the "beverage strength button".	
 1x	- Actuate the "multibrew button" once.	
 or  1)	- Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Manufacturer's setting: Co Setting range: Co = continuous delivery as long as the "hot water button" is pressed Po = delivery of 1 portion	
 or  2)	- Changing the setting: Actuate the "coffee" or "mocha" button	


**CAUTION:** There is an increased danger of being scalded when the dispenser is set to the delivery of 1 portion. After actuation of the "hot water button" hot water is delivered until the programmed quantity is delivered.

Checking the setting:

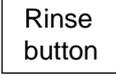	- Actuate the "multibrew button".	
	- Actuate the "hot water button".	
 or  3)	- Actuate the "coffee" or the "mocha button" and check the setting.	
 + 	- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or   
 2) press  or   
 3)  or  : to check the adjustment

### 4.1.28 Setting the portion size for coffee or tea

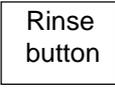Button		Changing the portion size results in a change of the beverage strength.	Display	
		- Open the left door.		
	+		- Simultaneously actuate the "rinse button" and the "multibrew button".	
	+		- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
	6x (or 2x  )		- Actuate the "multibrew button" six times.	
			- Actuate the "beverage strength button".	
	2x		- Actuate the "multibrew button" twice.	
	or		1) - Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 10–90 Manufacturer's setting: Coffee: 47 (4.7 sec), Tea: 60 (6.0 sec) In this menu a test delivery is possible (see <i>chap. Test delivery</i> (water volume)).	
	or		2) - Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:				
			- Actuate the "multibrew button".	
			- Actuate the "hot water button".	
	or		3) - Actuate the "coffee" or the "mocha button" and check the setting.	
	+		- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or 
- 2)  to increase the value  
 to decrease the value
- 3)  or  : to check the adjustment
- 4) Not for dispensers with tea delivery

### 4.1.29 Setting the portion size for mocha \*

Button



Changing the portion size results in a change of the beverage strength.

Display

	-	Open the left door.	
 + 	-	Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	-	Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 6x (or 2x  )	-	Actuate the "multibrew button" six times.	
	-	Actuate the "beverage strength button".	
 3x	-	Actuate the "multibrew button" three times.	
 or 	-	Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 10–90, Manufacturer's setting: 32 (3.2 sec) <i>In this menu a test delivery is possible (see chap. Test delivery (water volume)).</i>	
 or 	-	Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:			
	-	Actuate the "multibrew button".	
	-	Actuate the "hot water button".	
 or 	-	Actuate the "coffee" or the "mocha button" and check the setting.	
 + 	-	Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	


\* Not possible for dispensers with tea delivery.

### 4.1.30 Setting the portion size for hot water (The delivery mode for water must be set to portioned)

Button	-	Open the left door.	Display
 + 	-	Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	-	Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 6x (or 2x  )	-	Actuate the "multibrew button" six times.	
	-	Actuate the "beverage strength button".	
 4x (or 3x  )	-	Actuate the "multibrew button" four times. The designation of the menu "Portion size for hot water" is displayed.	
 or  <sup>1)</sup>	-	Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 10–90, Manufacturer's setting: 40 (4.0 sec.) In this menu a test delivery is possible (see chap. <i>Test delivery</i> (water volume)).	
 or  <sup>2)</sup>	-	Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:			
	-	Actuate the "multibrew button".	
	-	Actuate the "hot water button".	
 or  <sup>3)</sup>	-	Actuate the "coffee" or the "mocha button" and check the setting.	
 + 	-	Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	


- with tea: 1) press  or 
- 2)  to increase the value  
 to decrease the value
- 3)  or  : to check the adjustment

### 4.1.31 Setting the water quantity for the rinsing process

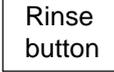Button			Display	
	-	Open the left door.		
	+		- Simultaneously actuate the "rinse button" and the "multibrew button".	
	+		- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
	6x (or 2x  )	-	Actuate the "multibrew button" six times.	
	-	-	Actuate the "beverage strength button".	
	5x (or 2x  )	-	Actuate the "multibrew button" five times.	
	or	 1)	- Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 10–90, Manufacturer's setting: 47 (4.7 sec) In this menu a test delivery is possible (see chap. <i>Test delivery</i> (water volume)).	
	or	 2)	- Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
			Checking the setting:	
	-	-	Actuate the "multibrew button".	
	-	-	Actuate the "hot water button".	
	or	 3)	- Actuate the "coffee" or the "mocha button" and check the setting.	
	+		- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or 
- 2)  to increase the value  
 to decrease the value
- 3)  or  : to check the adjustment


### 4.1.32 Setting the mode for the rinsing process

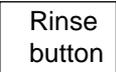Button	-	Display
	- Open the left door.	
 + 	- Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 6x (or 2x  )	- Actuate the "multibrew button" six times.	
	- Actuate the "beverage strength button".	
 6x (or 1x  )	- Actuate the "multibrew button" six times.	
 or  1)	- Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1 = step by step rinsing process 2 = rinsing process without interruption Manufacturer's setting: 1	
 or  2)	- Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
	Checking the setting:	
	- Actuate the "hot water button".	
	- Actuate the "multibrew button".	
 or  3)	- Actuate the "coffee" or the "mocha button" and check the setting.	
 + 	- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or 
- 2)  to increase the value  
 to decrease the value
- 3)  or  : to check the adjustment




4.1.34 Price setting for coffee or tea (only possible if a paying system is connected)

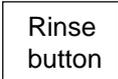Button	-	Display
	- Open the left door.	
 + 	- Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 7x (or 1x  )	- Actuate the "multibrew button" seven times.	
	- Actuate the "beverage strength button".	
 1x	- Actuate the "multibrew button" once.	
 or  1)	- Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1, 2, Manufacturer's setting: 2	
 or  2)	- Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:		
	- Actuate the "multibrew button".	
	- Actuate the "hot water button".	
 or  3)	- Actuate the "coffee" or the "mocha button" and check the setting.	
 + 	- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or   
 2)  to increase the value  
 to decrease the value  
 3)  or  : to check the adjustment

4.1.35 Price setting for mocha (only possible if a paying system is connected) \*

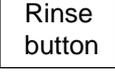Button			Display
	-	Open the left door.	
 + 	-	Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	-	Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 7x (or 1x  )	-	Actuate the "multibrew button" seven times.	
	-	Actuate the "beverage strength button".	
 2x	-	Actuate the "multibrew button" twice.	
 or 	-	Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1, 2, Manufacturer's setting: 2	
 or 	-	Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:			
	-	Actuate the "multibrew button".	
	-	Actuate the "hot water button".	
 or 	-	Actuate the "coffee" or the "mocha button" and check the setting.	
 + 	-	Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	



\* Not possible for dispensers with tea delivery.

### 4.1.36 Price setting for portioned hot water delivery (only possible if a paying system is connected)

Button	-	Action	Display
	-	Open the left door.	
<span style="border: 1px solid black; padding: 2px;">Rinse button</span> + 	-	Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	-	Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 7x (or 1x  )	-	Actuate the "multibrew button" seven times.	
	-	Actuate the "beverage strength button".	
 3x	-	Actuate the "multibrew button" three times.	
 or  1)	-	Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1, 2, Manufacturer's setting: 1	
 or  2)	-	Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:			
	-	Actuate the "hot water button".	
	-	Actuate the "multibrew button".	
 or  3)	-	Actuate the "coffee" or the "mocha button" and check the setting.	
<span style="border: 1px solid black; padding: 2px;">Rinse button</span> + 	-	Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or 
- 2)  to increase the value  
 to decrease the value
- 3)  or  : to check the adjustment

**4.1.37 Price number setting for mild coffee or tea delivery**  
 (only possible if a paying system with executive interface is connected)

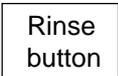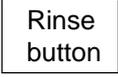Button			Display
	-	Open the left door.	
 + 	-	Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	-	Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 7x (or 1x  )	-	Actuate the "multibrew button" seven times.	
	-	Actuate the "beverage strength button".	
 4x	-	Actuate the "multibrew button" four times.	
 or  1)	-	Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1–14*, Manufacturer's setting: 1	
 or  2)	-	Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:			
	-	Actuate the "hot water button".	
	-	Actuate the "multibrew button".	
 or  3)	-	Actuate the "coffee" or the "mocha button" and check the setting.	
 + 	-	Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or   
 2)  to increase the value  
 to decrease the value  
 3)  or  : to check the adjustment

\* When adjusting the price numbers, the maximum number of prices that can be operated by the payment system must be considered (see operating instructions of the payment system).



**4.1.38 Price number setting for normal coffee or tea delivery**  
 (only possible if a paying system with executive interface is connected)

Button			Display
	-	Open the left door.	
<span style="border: 1px solid black; padding: 2px;">Rinse button</span> + 	-	Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	-	Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 7x (or 1x  )	-	Actuate the "multibrew button" seven times.	
	-	Actuate the "beverage strength button".	
 5x	-	Actuate the "multibrew button" five times.	
 or  1)	-	Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1–14*, Manufacturer's setting: 2	
 or  2)	-	Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:			
	-	Actuate the "hot water button".	
	-	Actuate the "multibrew button".	
 or  3)	-	Actuate the "coffee" or the "mocha button" and check the setting.	
<span style="border: 1px solid black; padding: 2px;">Rinse button</span> + 	-	Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or   
 2)  to increase the value  
 to decrease the value  
 3)  or  : to check the adjustment

\* When adjusting the price numbers, the maximum number of prices that can be operated by the payment system must be considered (see operating instructions of the payment system).


**4.1.39 Price number setting for strong coffee or tea delivery**  
 (only possible if a paying system with executive interface is connected)

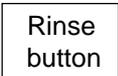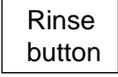Button			Display
	-	Open the left door.	
 + 	-	Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	-	Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 7x (or 1x  )	-	Actuate the "multibrew button" seven times.	
	-	Actuate the "beverage strength button".	
 6x	-	Actuate the "multibrew button" six times.	
 or  1)	-	Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1–14*, Manufacturer's setting: 3	
 or  2)	-	Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:			
	-	Actuate the "hot water button".	
	-	Actuate the "multibrew button".	
 or  3)	-	Actuate the "coffee" or the "mocha button" and check the setting.	
 + 	-	Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or   
 2)  to increase the value  
 to decrease the value  
 3)  or  : to check the adjustment

\* When adjusting the price numbers, the maximum number of prices that can be operated by the payment system must be considered (see operating instructions of the payment system).



**4.1.40 Price number setting for mild mocha delivery \*)**  
 (only possible if a paying system with executive interface is connected)

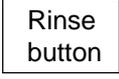Button			Display
	-	Open the left door.	
 + 	-	Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	-	Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 7x (or 1x  )	-	Actuate the "multibrew button" seven times.	
	-	Actuate the "beverage strength button".	
 7x	-	Actuate the "multibrew button" seven times.	
 or  1)	-	Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1–14*, Manufacturer's setting: 4	
 or  2)	-	Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:			
	-	Actuate the "hot water button".	
	-	Actuate the "multibrew button".	
 or  3)	-	Actuate the "coffee" or the "mocha button" and check the setting.	
 + 	-	Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

\*) Not possible for dispensers with tea delivery

\* When adjusting the price numbers, the maximum number of prices that can be operated by the payment system must be considered (see operating instructions of the payment system).


**4.1.41 Price number setting for normal mocha delivery \*)**  
 (only possible if a paying system with executive interface is connected)

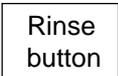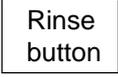Button			Display
	-	Open the left door.	
 + 	-	Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	-	Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 7x (or 1x  )	-	Actuate the "multibrew button" seven times.	
	-	Actuate the "beverage strength button".	
 8x	-	Actuate the "multibrew button" eight times.	
 or  1)	-	Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1–14*, Manufacturer's setting: 5	
 or  2)	-	Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:			
	-	Actuate the "hot water button".	
	-	Actuate the "multibrew button".	
 or  3)	-	Actuate the "coffee" or the "mocha button" and check the setting.	
 + 	-	Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

\*) Not possible for dispensers with tea delivery

\* When adjusting the price numbers, the maximum number of prices that can be operated by the payment system must be considered (see operating instructions of the payment system).



**4.1.42 Price number setting for strong mocha delivery \*)**  
 (only possible if a paying system with executive interface is connected)

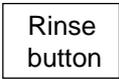Button			Display
	-	Open the left door.	
 + 	-	Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	-	Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 7x (or 1x  )	-	Actuate the "multibrew button" seven times.	
	-	Actuate the "beverage strength button".	
 9x	-	Actuate the "multibrew button" nine times.	
 or  1)	-	Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1–14*, Manufacturer's setting: 6	
 or  2)	-	Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:			
	-	Actuate the "hot water button".	
	-	Actuate the "multibrew button".	
 or  3)	-	Actuate the "coffee" or the "mocha button" and check the setting.	
 + 	-	Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

\*) Not possible for dispensers with tea delivery

\* When adjusting the price numbers, the maximum number of prices that can be operated by the payment system must be considered (see operating instructions of the payment system).

**4.1.43 Price number setting for mild multibrew coffe or tea delivery**  
 (only possible if a paying system with executive interface is connected)

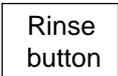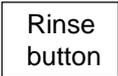Button			Display
	-	Open the left door.	
 + 	-	Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	-	Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 7x (or 1x  )	-	Actuate the "multibrew button" seven times.	
	-	Actuate the "beverage strength button".	
 10x	-	Actuate the "multibrew button" ten times.	
 or  1)	-	Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1–14*, Manufacturer's setting: 7	
 or  2)	-	Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:			
	-	Actuate the "hot water button".	
	-	Actuate the "multibrew button".	
 or  3)	-	Actuate the "coffee" or the "mocha button" and check the setting.	
 + 	-	Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or   
 2)  to increase the value  
 to decrease the value  
 3)  or  : to check the adjustment

\* When adjusting the price numbers, the maximum number of prices that can be operated by the payment system must be considered (see operating instructions of the payment system).


**4.1.44 Price number setting for normal multibrew coffe or tea delivery**  
 (only possible if a paying system with executive interface is connected)

Button	-	Display
	- Open the left door.	
<span style="border: 1px solid black; padding: 2px;">Rinse button</span> + 	- Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 7x (or 1x  )	- Actuate the "multibrew button" seven times.	
	- Actuate the "beverage strength button".	
 11x	- Actuate the "multibrew button" eleven times.	
 or  1)	- Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1–14*, Manufacturer's setting: 8	
 or  2)	- Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:		
	- Actuate the "hot water button".	
	- Actuate the "multibrew button".	
 or  3)	- Actuate the "coffee" or the "mocha button" and check the setting.	
<span style="border: 1px solid black; padding: 2px;">Rinse button</span> + 	- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or   
 2)  to increase the value  
 to decrease the value  
 3)  or  : to check the adjustment

\* When adjusting the price numbers, the maximum number of prices that can be operated by the payment system must be considered (see operating instructions of the payment system).



**4.1.45 Price number setting for strong multibrew coffe or tea delivery**  
 (only possible if a paying system with executive interface is connected)

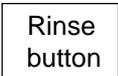Button			Display
	-	Open the left door.	
 + 	-	Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	-	Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 7x (or 1x  )	-	Actuate the "multibrew button" seven times.	
	-	Actuate the "beverage strength button".	
 12x	-	Actuate the "multibrew button" twelve times.	
 or  1)	-	Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1–14*, Manufacturer's setting: 9	
 or  2)	-	Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:			
	-	Actuate the "hot water button".	
	-	Actuate the "multibrew button".	
 or  3)	-	Actuate the "coffee" or the "mocha button" and check the setting.	
 + 	-	Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or   
 2)  to increase the value  
 to decrease the value  
 3)  or  : to check the adjustment

\* When adjusting the price numbers, the maximum number of prices that can be operated by the payment system must be considered (see operating instructions of the payment system).

**4.1.46 Price number setting for mild multibrew mocha delivery \*)**  
**(only possible if a paying system with executive interface is connected)**

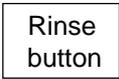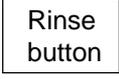Button	-	Display
	- Open the left door.	
 + 	- Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 7x (or 1x  )	- Actuate the "multibrew button" seven times.	
	- Actuate the "beverage strength button".	
 13x	- Actuate the "multibrew button" thirteen times.	
 or  1)	- Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1–14*, Manufacturer's setting: 10	
 or  2)	- Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:		
	- Actuate the "hot water button".	
	- Actuate the "multibrew button".	
 or  3)	- Actuate the "coffee" or the "mocha button" and check the setting.	
 + 	- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

\*) Not possible for dispensers with tea delivery

\* When adjusting the price numbers, the maximum number of prices that can be operated by the payment system must be considered (see operating instructions of the payment system).

**4.1.47 Price number setting for normal multibrew mocha delivery \*)**  
 (only possible if a paying system with executive interface is connected)

Button			Display		
	-	Open the left door.			
	+		-	Simultaneously actuate the "rinse button" and the "multibrew button".	
	+		-	Simultaneously actuate the "multibrew button" and the "beverage strength button".	
	7x (or 1x  )	-	Actuate the "multibrew button" seven times.		
	-	Actuate the "beverage strength button".			
	14x	-	Actuate the "multibrew button" fourteen times.		
	or	 1)	-	Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1–14*, Manufacturer's setting: 11	
	or	 2)	-	Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
		Checking the setting:			
	-	Actuate the "hot water button".			
	-	Actuate the "multibrew button".			
	or	 3)	-	Actuate the "coffee" or the "mocha button" and check the setting.	
	+		-	Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

\*) Not possible for dispensers with tea delivery

\* When adjusting the price numbers, the maximum number of prices that can be operated by the payment system must be considered (see operating instructions of the payment system).



**4.1.48 Price number setting for strong multibrew mocha delivery \*)**  
**(only possible if a paying system with executive interface is connected)**

Button		Display
	- Open the left door.	
 + 	- Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	- Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 7x (or 1x  )	- Actuate the "multibrew button" seven times.	
	- Actuate the "beverage strength button".	
 15x	- Actuate the "multibrew button" fifteen times.	
 or  1)	- Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1–14*, Manufacturer's setting: 12	
 or  2)	- Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:		
	- Actuate the "hot water button".	
	- Actuate the "multibrew button".	
 or  3)	- Actuate the "coffee" or the "mocha button" and check the setting.	
 + 	- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

\*) Not possible for dispensers with tea delivery

\* When adjusting the price numbers, the maximum number of prices that can be operated by the payment system must be considered (see operating instructions of the payment system).


**4.1.49 Price number setting for normal multibrew mocha delivery**  
 (only possible if a paying system with executive interface is connected)

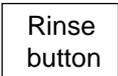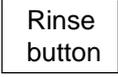Button			Display
	-	Open the left door.	
 + 	-	Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	-	Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 7x (or 1x  )	-	Actuate the "multibrew button" seven times.	
	-	Actuate the "beverage strength button".	
 16x	-	Actuate the "multibrew button" sixteen times.	
 or  1)	-	Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1–14*, Manufacturer's setting: 13	
 or  2)	-	Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:			
	-	Actuate the "hot water button".	
	-	Actuate the "multibrew button".	
 or  3)	-	Actuate the "coffee" or the "mocha button" and check the setting.	
 + 	-	Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or   
 2)  to increase the value  
 to decrease the value  
 3)  or  : to check the adjustment

\* When adjusting the price numbers, the maximum number of prices that can be operated by the payment system must be considered (see operating instructions of the payment system).

**4.1.50 Price number setting for portioned hot water delivery - multibrew**  
 (only possible if a paying system with executive interface is connected)

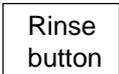Button			Display
	-	Open the left door.	
 + 	-	Simultaneously actuate the "rinse button" and the "multibrew button".	
 + 	-	Simultaneously actuate the "multibrew button" and the "beverage strength button".	
 7x (or 1x  )	-	Actuate the "multibrew button" seven times.	
	-	Actuate the "beverage strength button".	
 17x	-	Actuate the "multibrew button" seventeen times.	
 or  1)	-	Actuate the "coffee" or the "mocha button", the display shows the set value of the menu. Setting range: 1–14*, Manufacturer's setting: 14	
 or  2)	-	Changing the value: increasing: actuate the "coffee button" decreasing: actuate the "mocha button"	
Checking the setting:			
	-	Actuate the "hot water button".	
	-	Actuate the "multibrew button".	
 or  3)	-	Actuate the "coffee" or the "mocha button" and check the setting.	
 + 	-	Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").	

- with tea: 1) press  or   
 2)  to increase the value  
 to decrease the value  
 3)  or  : to check the adjustment

\* When adjusting the price numbers, the maximum number of prices that can be operated by the payment system must be considered (see operating instructions of the payment system).

### 4.1.51 Resetting to the manufacturer's setting \*

Button		Display
	-	Open the left door.
Rinse button	+ 	- Simultaneously actuate the "rinse button" and the "multibrew button".
	-	Select the submenu that shall be reset to the manufacturer's setting (see chap. Selecting and displaying values). The designation of the menu is displayed.
	or 	1) - Actuate the "coffee" or "mocha button". The display changes to the value of the menu.
	+ 	2) - Simultaneously actuate the "coffee" and the "mocha button". The selected submenu is reset to the manufacturer's setting.
	-	Check the setting.
Rinse button	+ 	- Quit the programming mode (simultaneously actuate the "rinse button" and the "multibrew button").

with tea: 1) press  or   
 2) press  and 

#### 4.1.52 Test delivery (product quantity)

- For the adjustment of the beverage strength (via the product quantity) test deliveries can be carried out.

**CAUTION:** When removing the following components observe all safety instructions and regulations indicated in chap. 6.

- Remove the filter plate holder (see chap. 5)
  - Remove the scraper (see chap. 5).
  - Remove the brewing cylinder (see chap. 5)
  - For test deliveries the holder (1) for the measuring cup can be suspended. (Fig. 1)
  - Place a suitable vessel underneath the opening of the dosing system.
- Activate the programming mode (see chap. Access to the programming mode).
  - Select the menu in which you want to carry out a test delivery (see chap. Selecting and displaying values). A test delivery can be done in the following menus:
    - mild coffee/tea
    - normal coffee/tea
    - strong coffee/tea
    - mild mocha
    - normal mocha
    - strong mocha
  - Simultaneously actuate the safety switch and the rinse button. A test quantity of the product will be delivered.
  - Weigh the test quantity. If necessary change the product quantity by changing the setting of the menu.

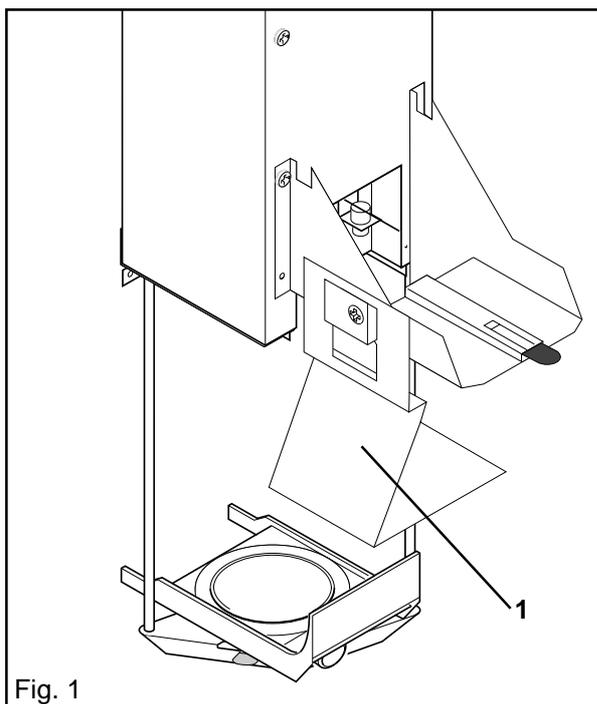


Fig. 1

### 4.1.53 Test delivery (water volume)

- For the adjustment of the portion size and the water quantity for the rinsing process test deliveries can be carried out.



Changing the portion size will effect the beverage strength.

**CAUTION:** When removing the following components observe all safety instructions and regulations indicated in chap. 1.

#### Test delivery for hot water:

- Activate the programming mode (*see chap. Access to the programming mode*).
- Select the menu "Test delivery for hot water".
- Place a sufficiently large vessel underneath the outlet.

**WARNING:** Risk of scalding!  
The delivered water could be hot!

- Simultaneously actuate the safety switch and the rinse button. The adjusted water volume is delivered.
- Measure the delivered water volume, if necessary change it by correcting the setting of the menu.

#### Test delivery for coffee, tea, mocha, rinsing process:

- Remove the product container.
- Unlock the delivery spout and tilt it upwards.
- Remove the filter plate, scraper and brewing cylinder (*see chap. 5*).
- Activate the programming mode (*see chap. Access to the programming mode*).
- Select the menu in which you want to carry out a test delivery (*see chap. Selecting and displaying values*). A test delivery can be done in the following menus:
  - Portion size for coffee/tea
  - Portion size for mocha
  - Water quantity for the rinsing process
- Place a sufficiently large vessel underneath the angle of the water inlet.

**WARNING:** Risk of scalding!  
The delivered water could be hot!

- Simultaneously actuate the door safety switch and the rinse button. The adjusted water volume is delivered.
- Measure the delivered water volume, if necessary change it by correcting the setting of the menu.

4.1.54 Explanation of the displays

	Actuator		Max. Fill Time norm. Operation	For adjusting price numbers in the menu  (coin terminal/ coin module) the following is valid:	
	Cup/Pot Sensor activated		Coffee/Tea: Mild		
	Actuator Starting Position		Coffee/Tea: Normal		Price no. Coffee or Tea mild
	Coffee/Tea Brew Time		Coffee/Tea: Strong		Price number Coffee or Tea normal
	Mocha Brew Time *		Mocha: Mild *		Price no. Coffee or Tea strong
	Back		Mocha: Normal *		Price no. Mocha mild *
	Boiler		Mocha: Strong *		Price no. Mocha normal *
	Brewing Time		Time: Coffee/Tea		Price no. Mocha strong *
	Coin Acceptor		Time: Mocha *		Price no. Multibrew Coffee or Tea mild
	Rinsing step by step		Low temperature		Price no. Multibrew Coffee or Tea normal
	Cup/Pot Sensor pot brew		Time: Water		Price no. Multibrew Coffee or Tea strong
	Cup/Pot Settings		Default number of Cups		Price no. Multibrew Mocha mild *
	Coin Terminal		Cup/Pot Sensor deactivated		Price no. Multibrew Mocha normal *
	Rinsing without stop		Powder Dosing		Price no. Multibrew Mocha strong *
	Dosing Factor		Price Setting Coffee/ Tea		Price no. Multibrew Water Portion
	Evaporation Time		Price Setting Mocha *		Rinse mode
	Hot Water Mode		Price Setting Water		Stop Temperature Low
	Front				Time: Rinse
	Max. Fill Time Power on				Delivery enabled with low temperature
					Setting of Liquids
					Delivery disabled with low temperature

\* Not possible for dispensers with tea delivery.

## 4.2 Programming with the service device

### 4.2.1 General remarks on the service device

The service device (fig. 1)


- is used to adjust the microprocessor control,
- supports the determination of errors
- can only call up data that have been stored in the electronic control
- is delivered with an adapter for the connection to the dispenser
- is equipped with a clock function



The service device must be equipped with an EPROM, version 1.4 or higher. The clock function of the service device has to be adjusted before it can be used. The display is done in the 12 hour system, that means 13.00 = 1.00 pm (see chap. «Entering date and time»).

If no **Button** is actuated the service device switches itself automatically off after approx. 30 sec.

**CAUTION:** The service device is equipped with a 9 V alkaline block battery. There is a danger of an explosion due to improper handling. The battery may not be recharged, disassembled, short circuited, burnt, be subjected to temperatures >100 °C or put into water. Replace only with a battery of the same type. Dispose properly of spent batteries.

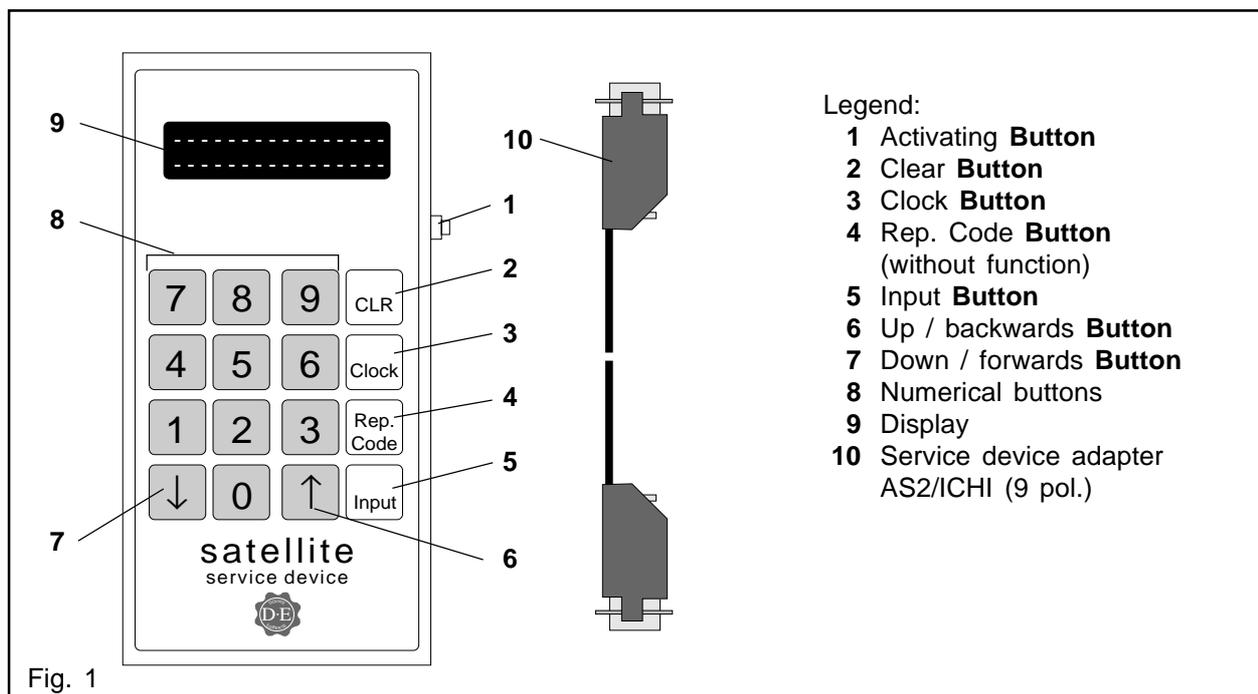

### 4.2.2 Entering time and date into the service device

**Button**



The clock function has to be adjusted before it can be used. The time is displayed in the 12 hour system, that means 13.00 = 1.00 pm.

**Display**

Activating  
Button

- Use the activating **Button** to switch the service device on.

Service Device 2  
V1.xx (15-04-88)

Clock

- Press the Clock **Button**.

Date(m-d):07-21  
Time(h-m):03-12a

Input

- Press the Input **Button** and enter the correct day (e.g. 21) via the keyboard.

Set day: 21  
-----

Input

- Press the Input **Button** and enter the correct month (e.g. 07) via the keyboard.

Set month: 07  
-----

Input

- Press the Input **Button** and enter the correct hour (e.g. 03) via the keyboard.

Set hour: 03a  
-----

↑

- The «a» in the display flashes. Use the Up **Button** to set it to p (pm = afternoon) or a (am = morning).

Input

- Press the Input **Button** and enter the correct minute (e.g. 12) via the keyboard

Set minute: 12  
-----

Input

- Press the Input **Button** several times to check the stored values. The stored data is shown one after the other. Correct them if necessary

Clock

- Press the Clock **Button** to save the values and to switch the service device off.

### 4.2.3 Reading off data on the service device

**Button**


**Display**



- Use the activating button to switch the service device on.



- Press the Clock button. The current date and time are displayed.

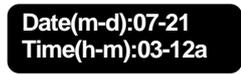

- Press the Clock button again, the service device is switched off.


Instead of the display described above the following display could be shown:



1. The battery in the service device is spent and has to be replaced with a new one.

**CAUTION:** Observe the safety instructions given in the chapter "General remarks on the service device".

### 4.2.4 Program structure

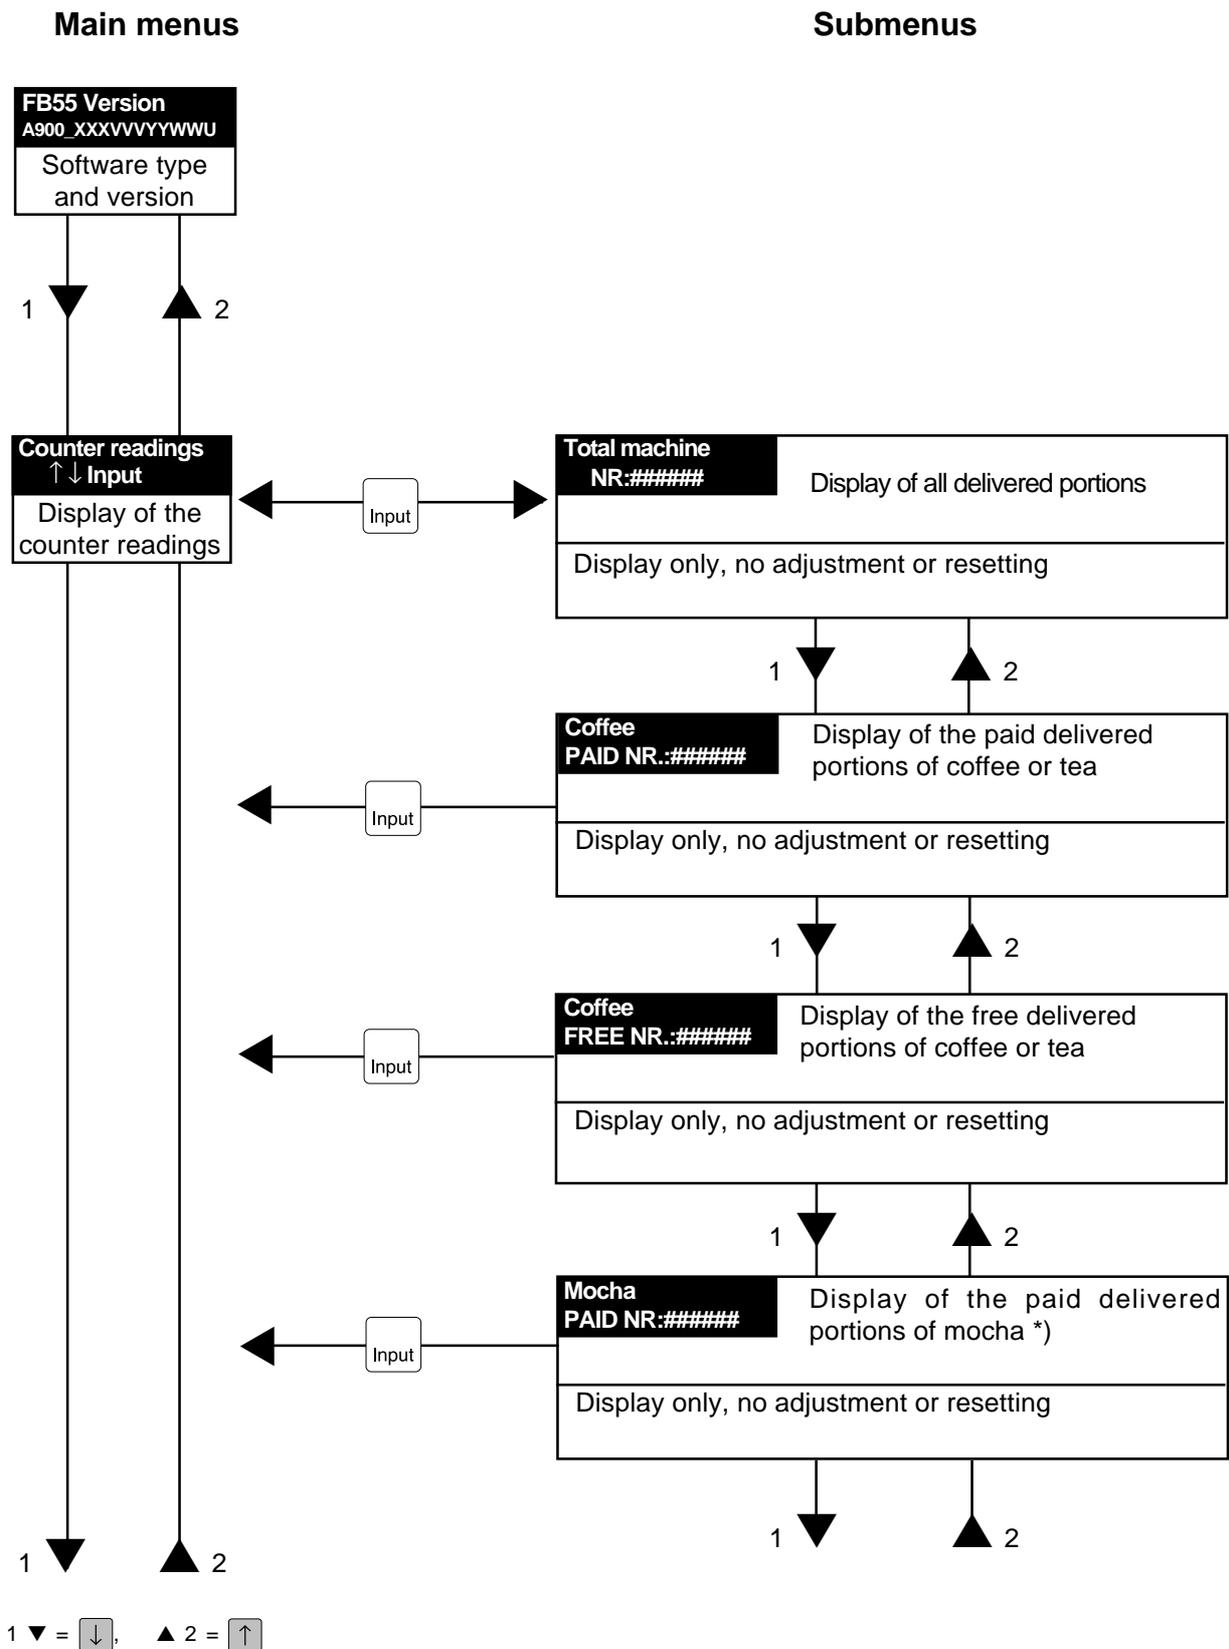


\*) Not possible with dispensers for tea delivery.










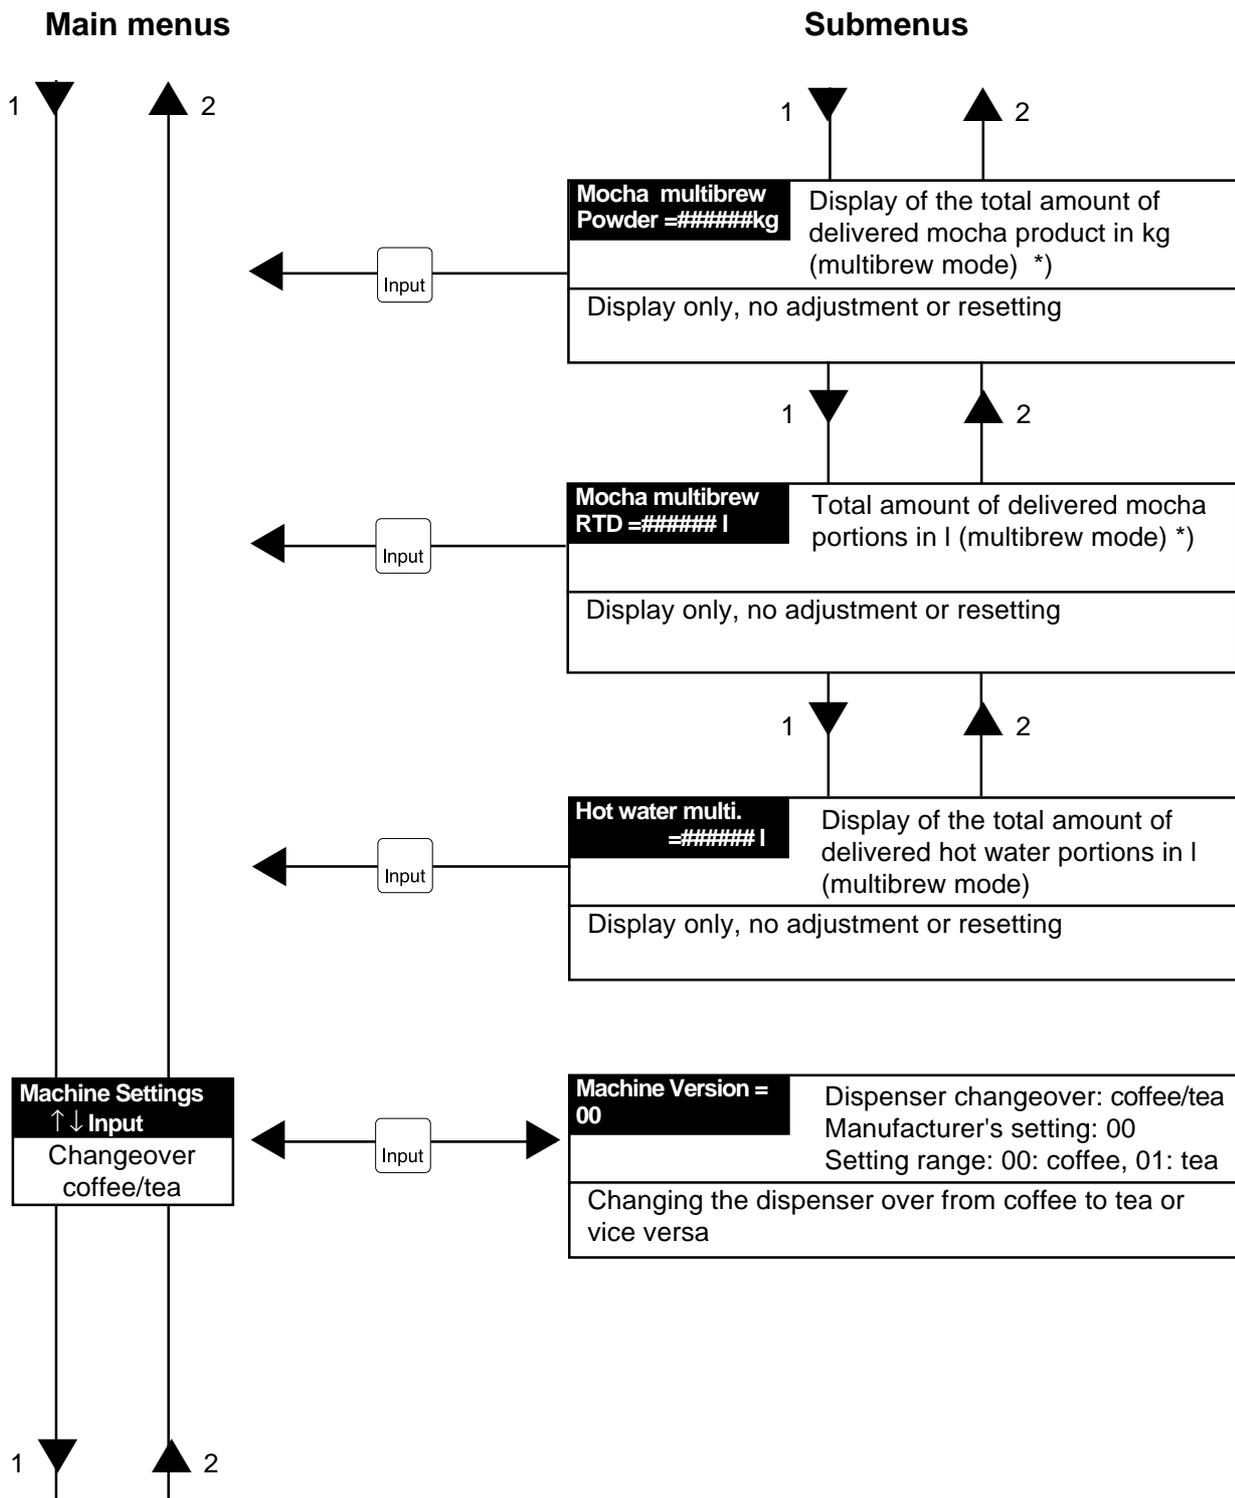


1 ▼ = ,    ▲ 2 =


\*) Not possible with dispensers for tea delivery.

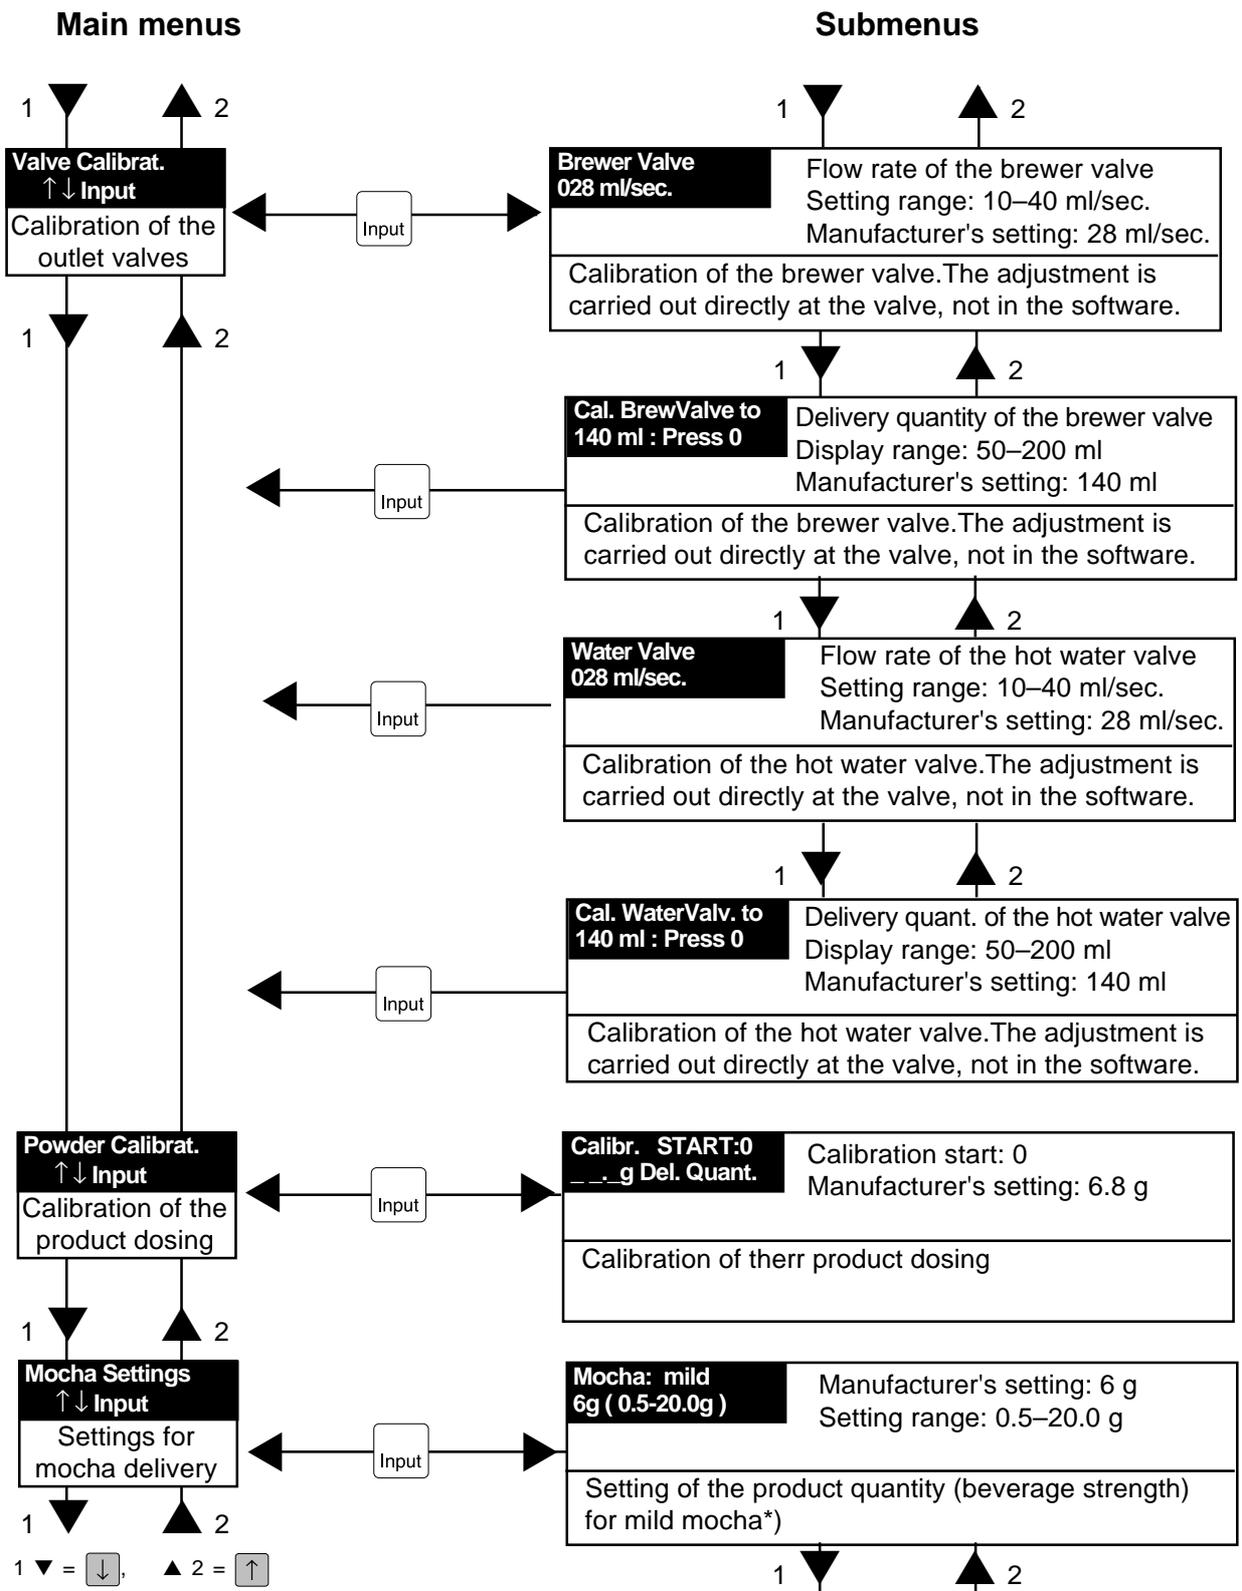

\*) Not possible with dispensers for tea delivery.

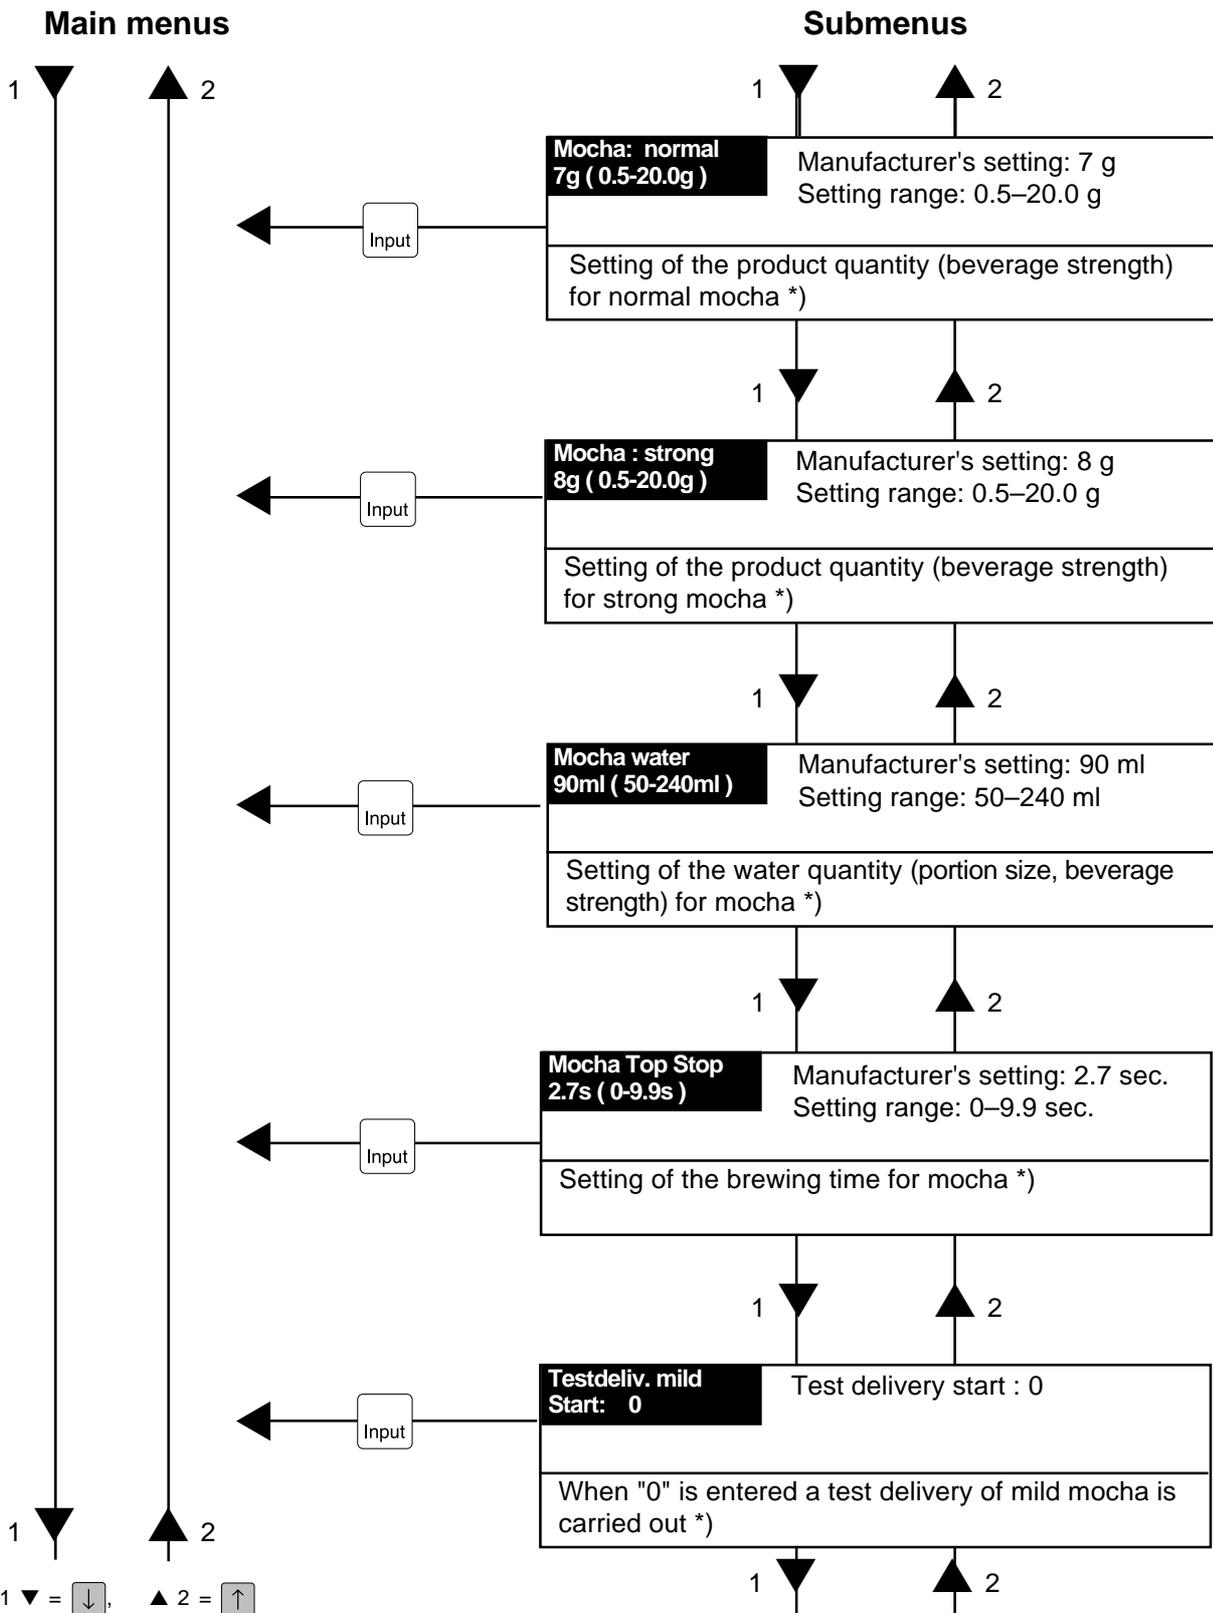


\*) Not possible with dispensers for tea delivery.

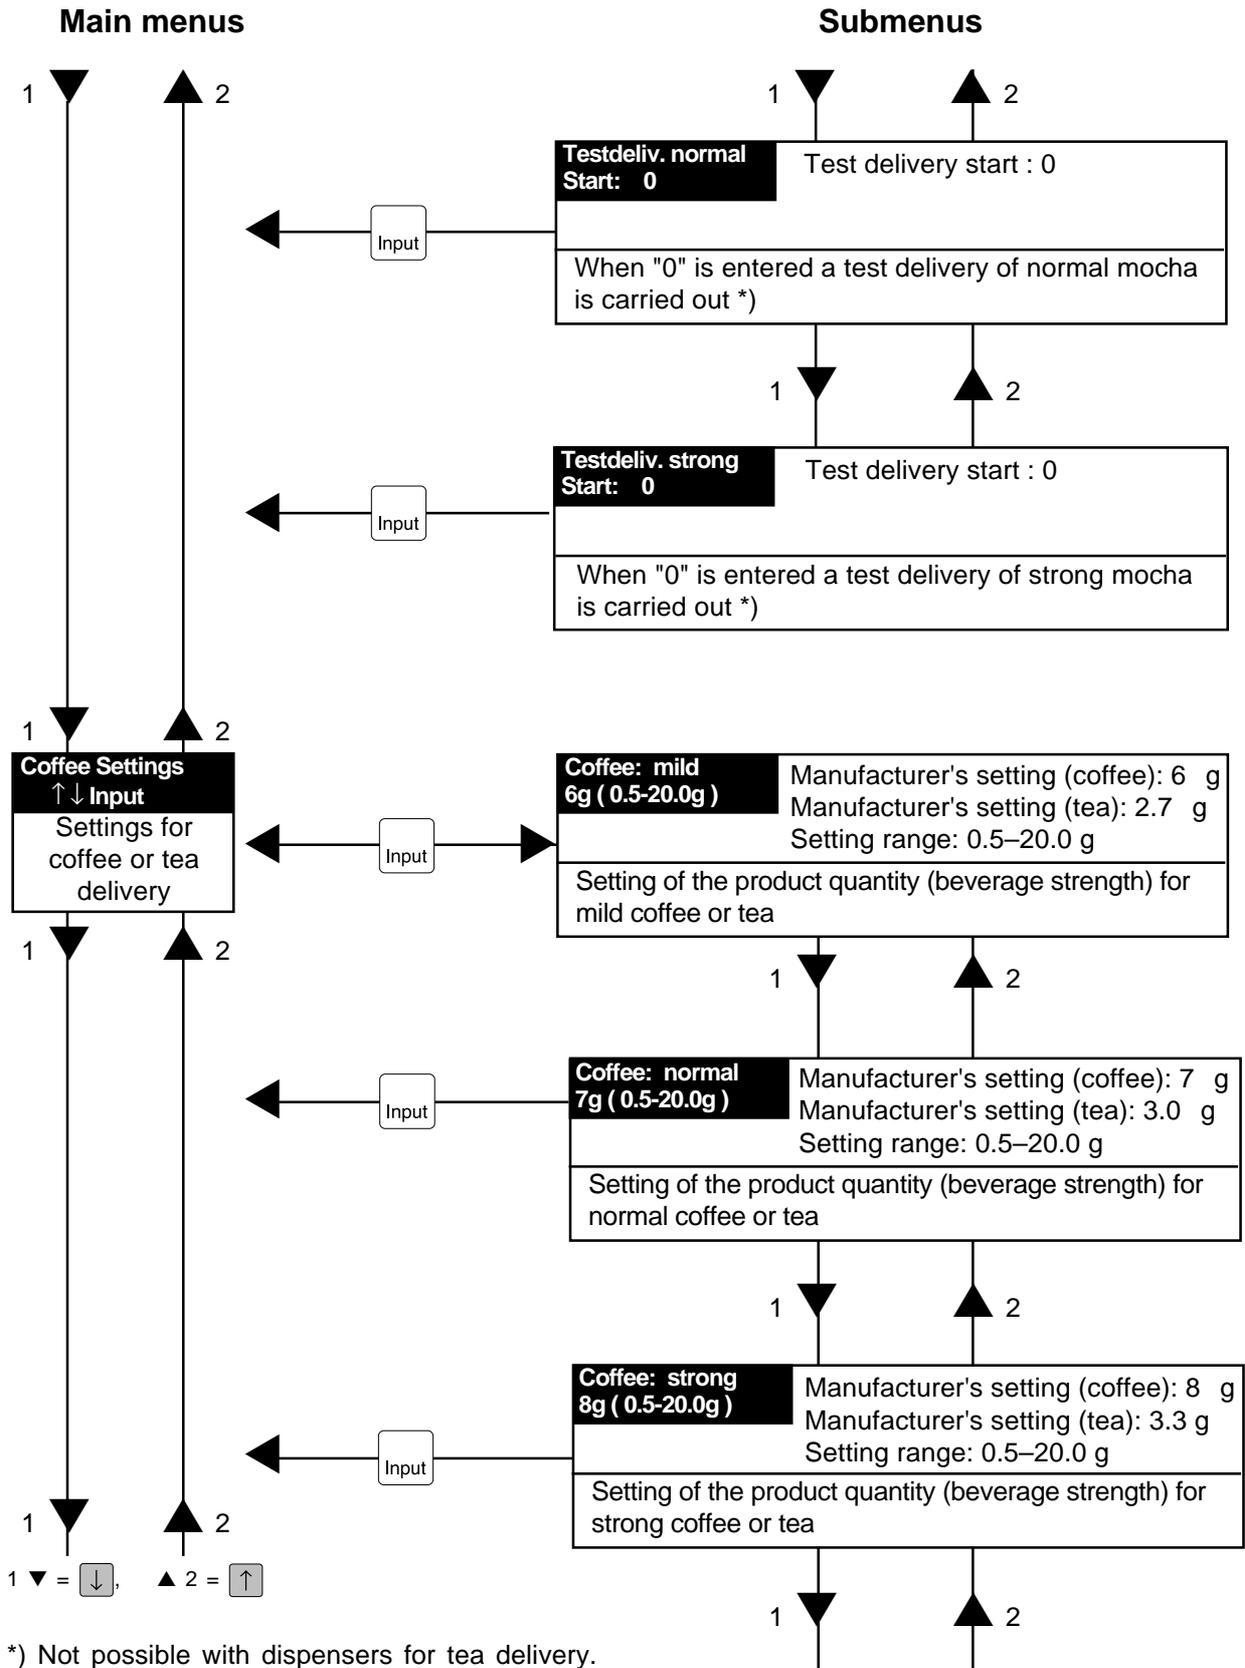


Main menus

Submenus

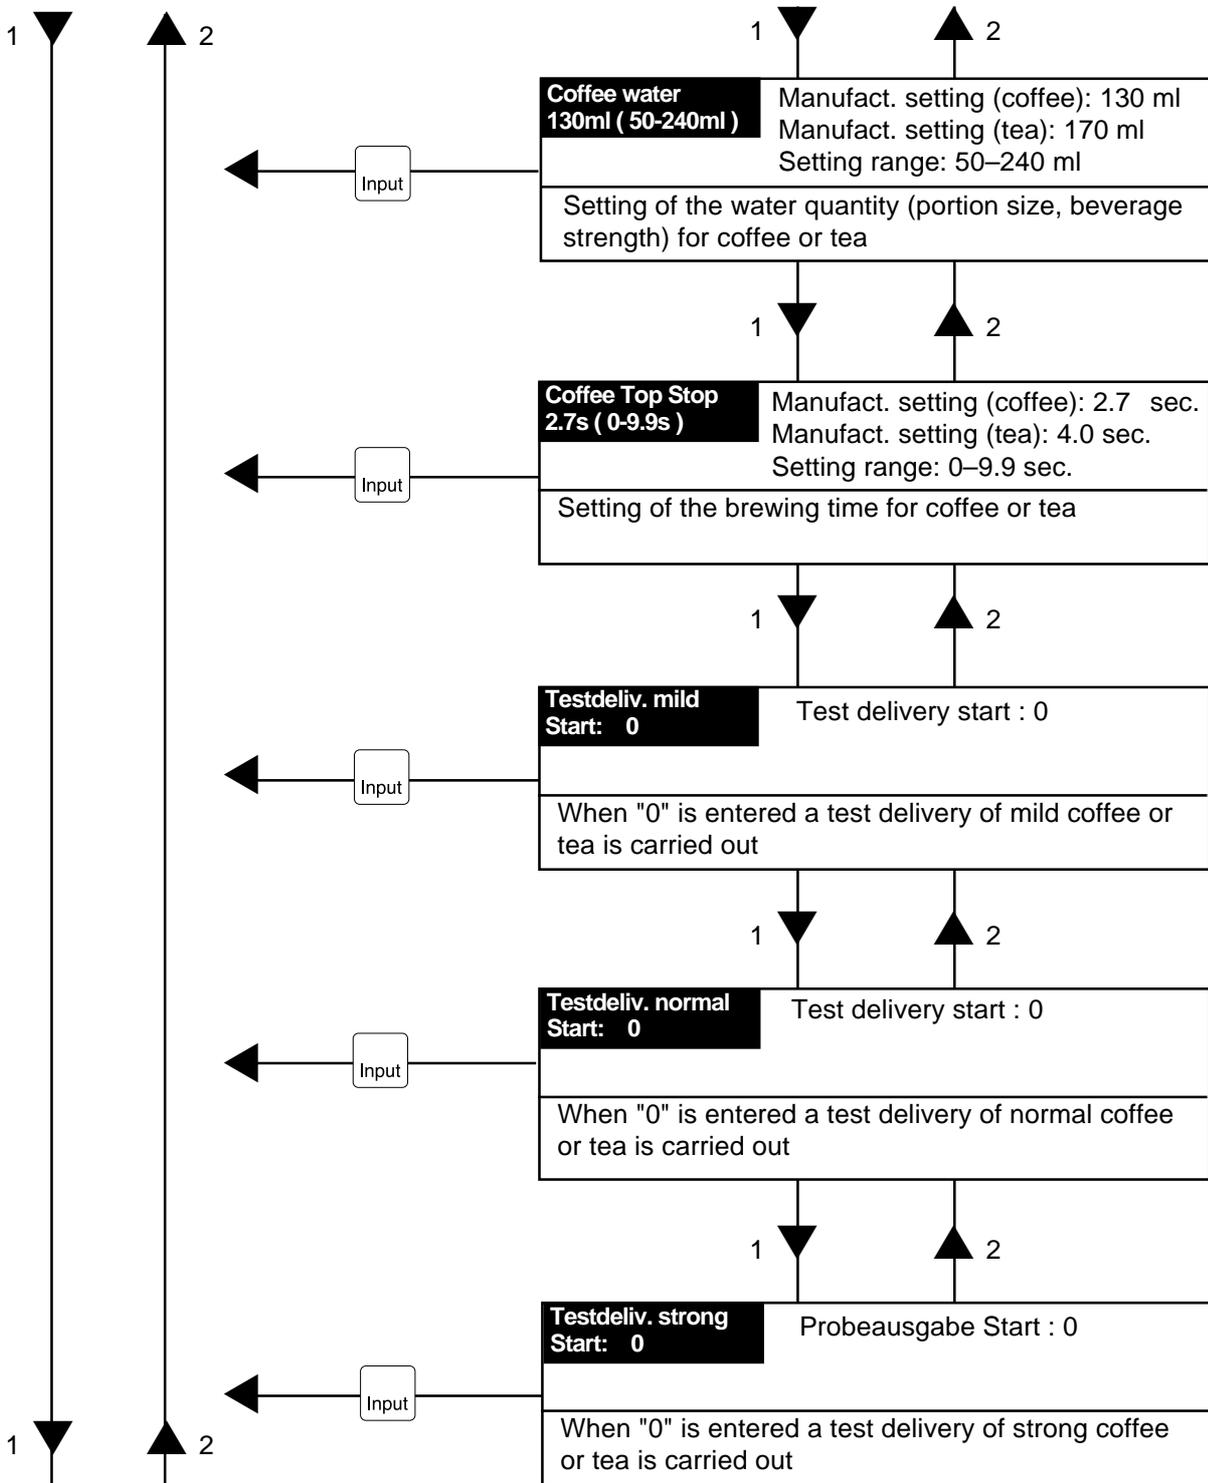


1 ▼ = [Down Arrow], ▲ 2 = [Up Arrow]

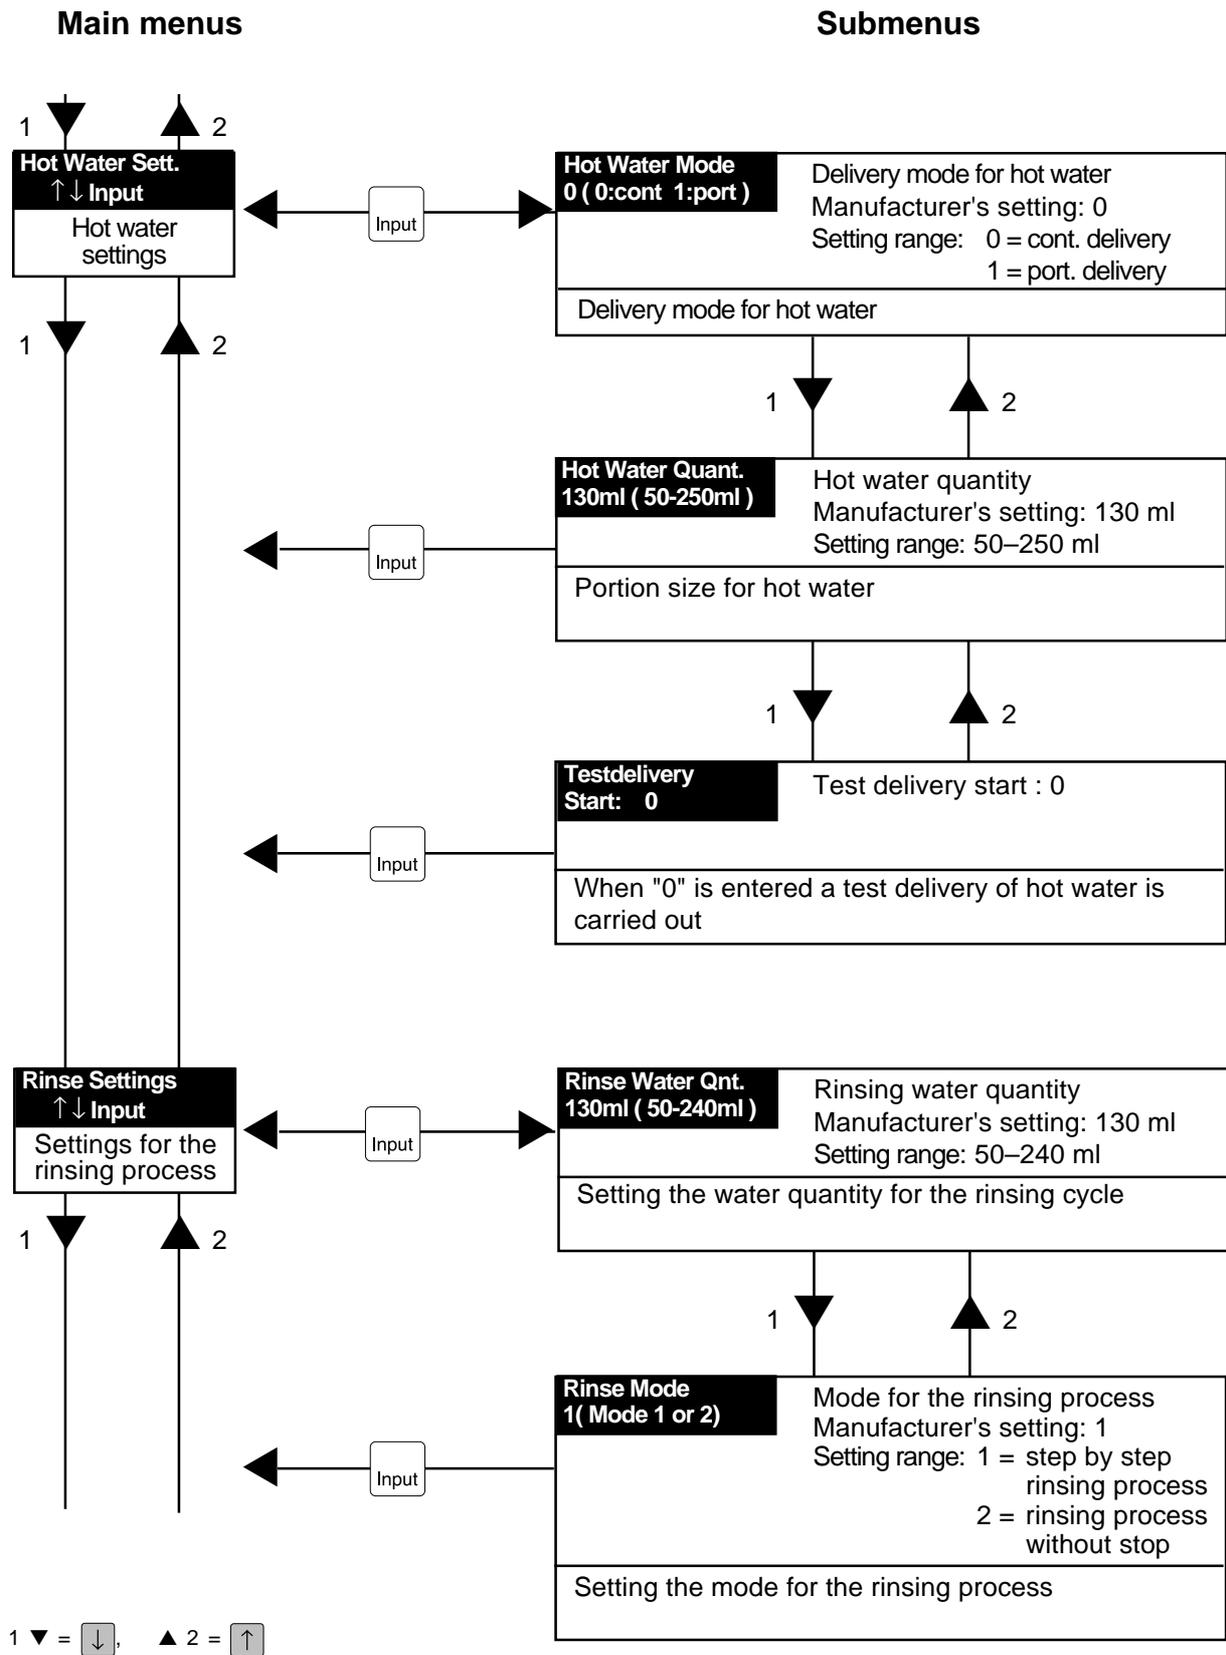


Main menus

Submenus

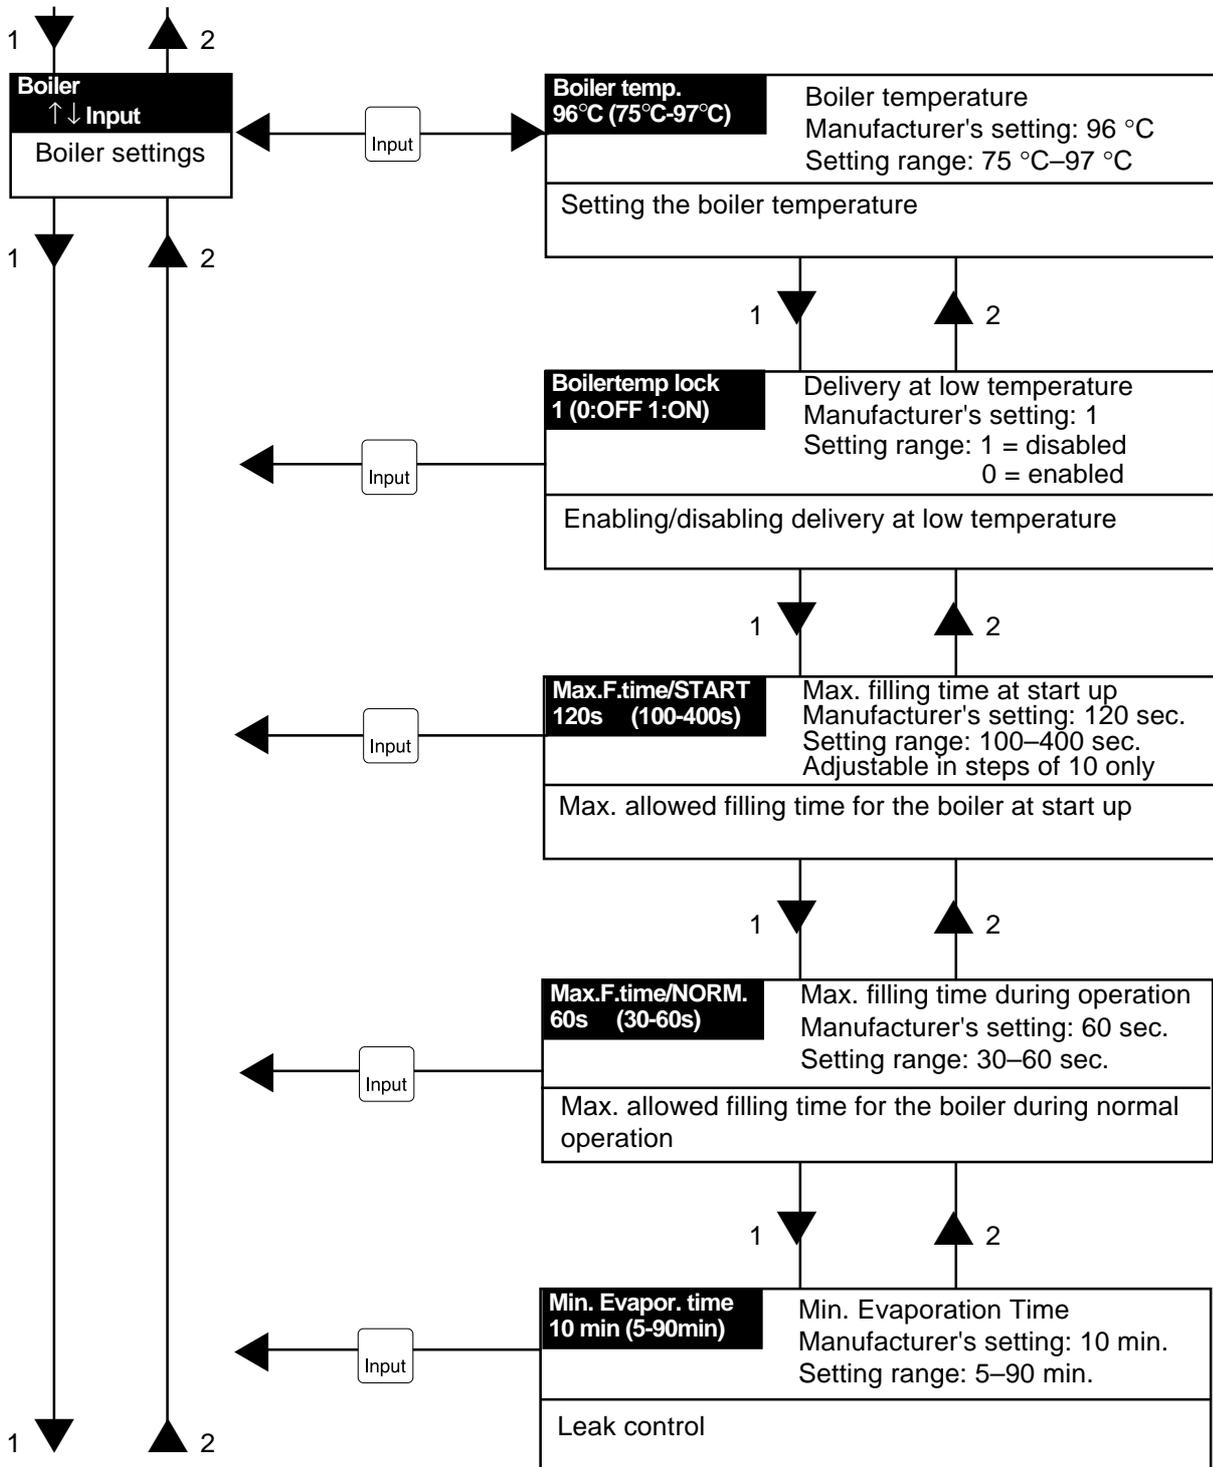


1 ▼ = [down arrow], ▲ 2 = [up arrow]

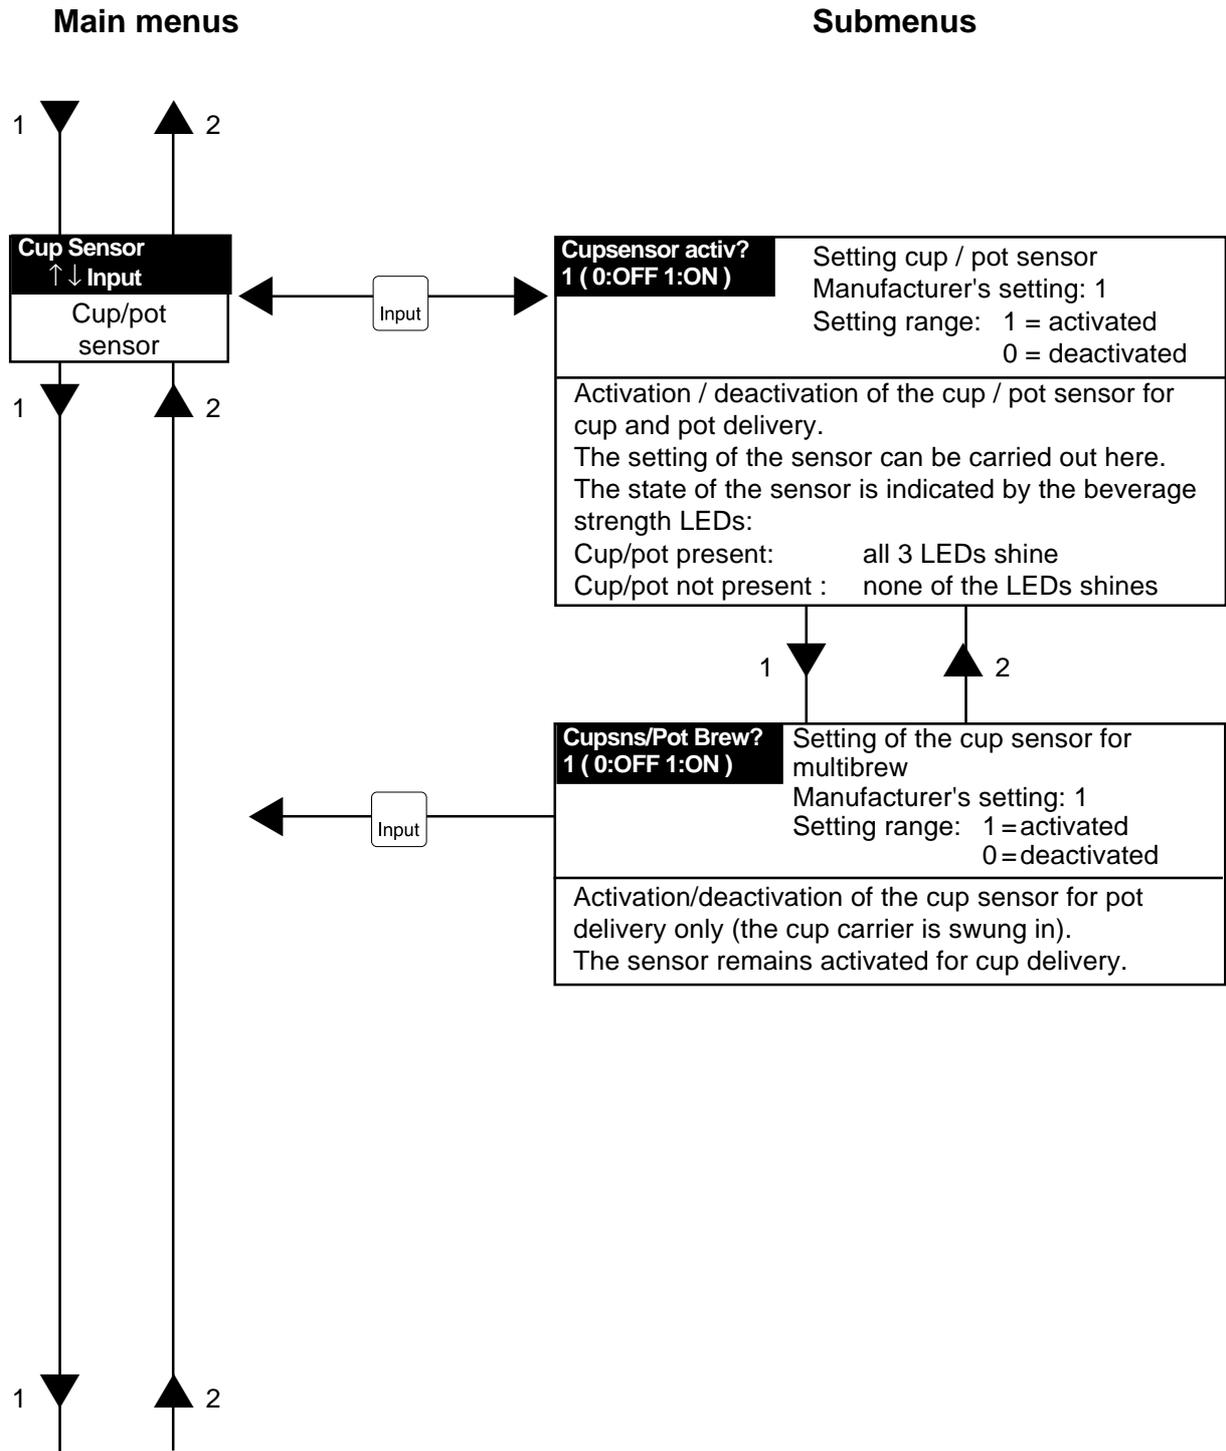

1 ▼ = [↓],    ▲ 2 = [↑]

**Main menus**


**Submenus**

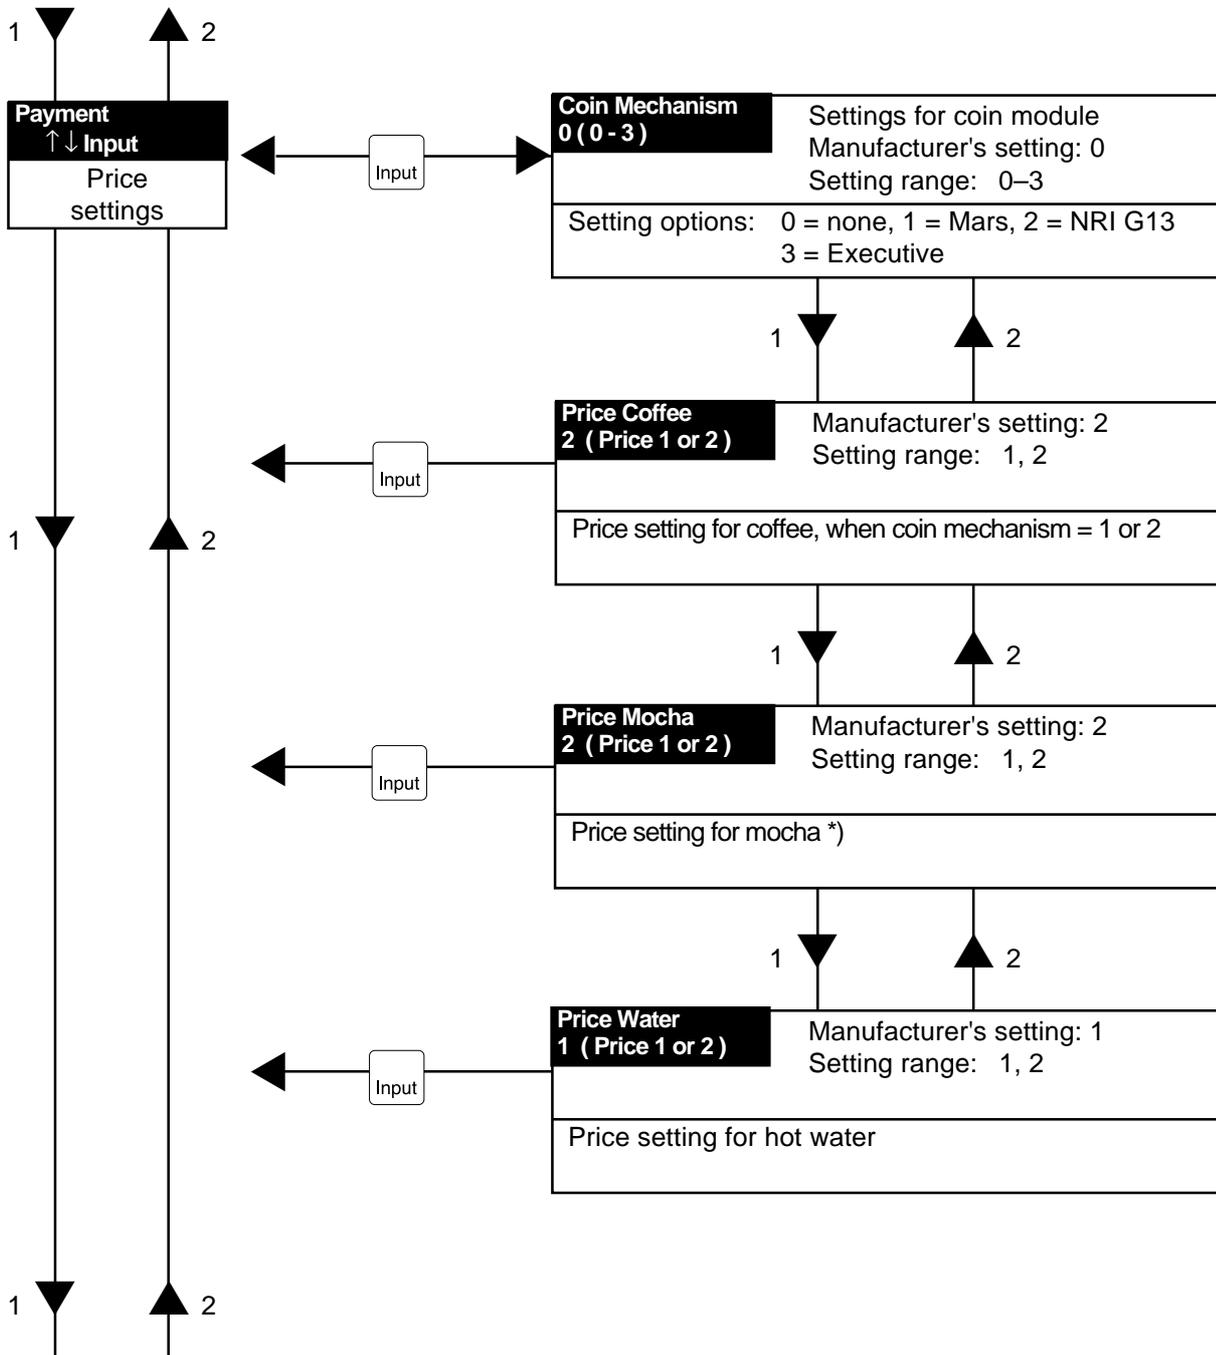


1 ▼ = [down arrow], ▲ 2 = [up arrow]

\*) Not possible with dispensers for tea delivery.



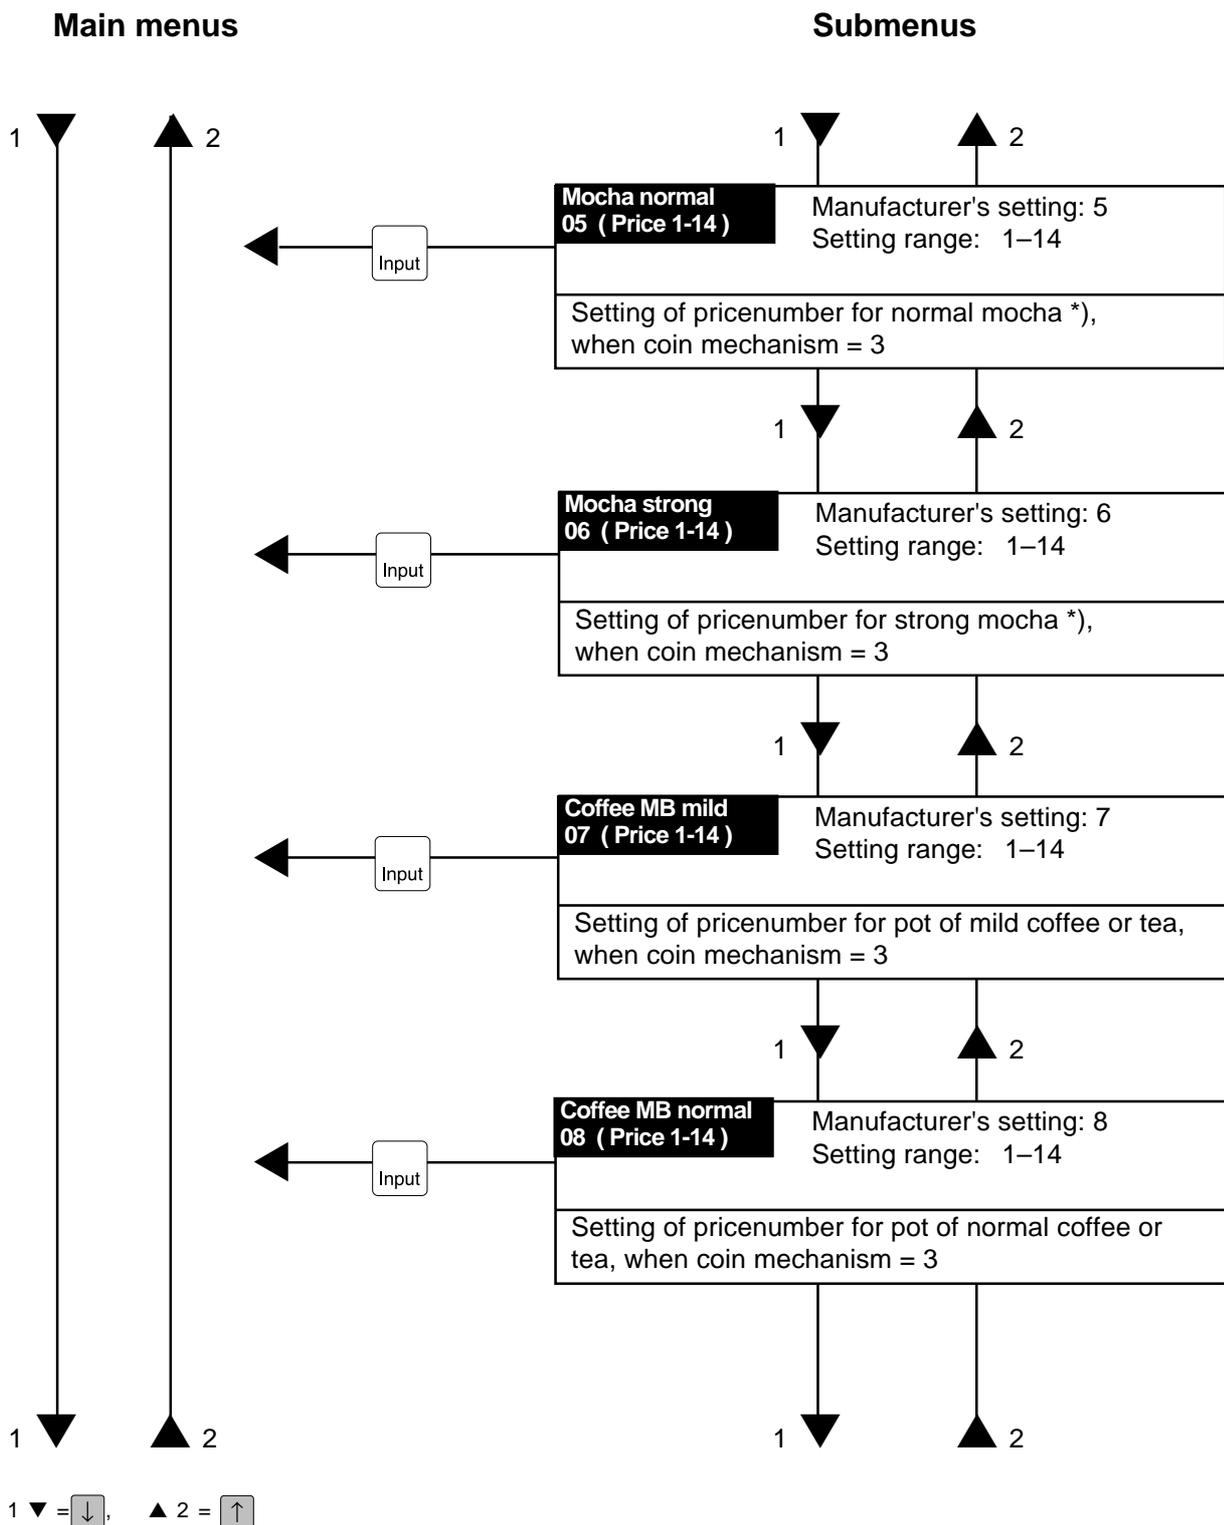


\*) Not possible with dispensers for tea delivery.

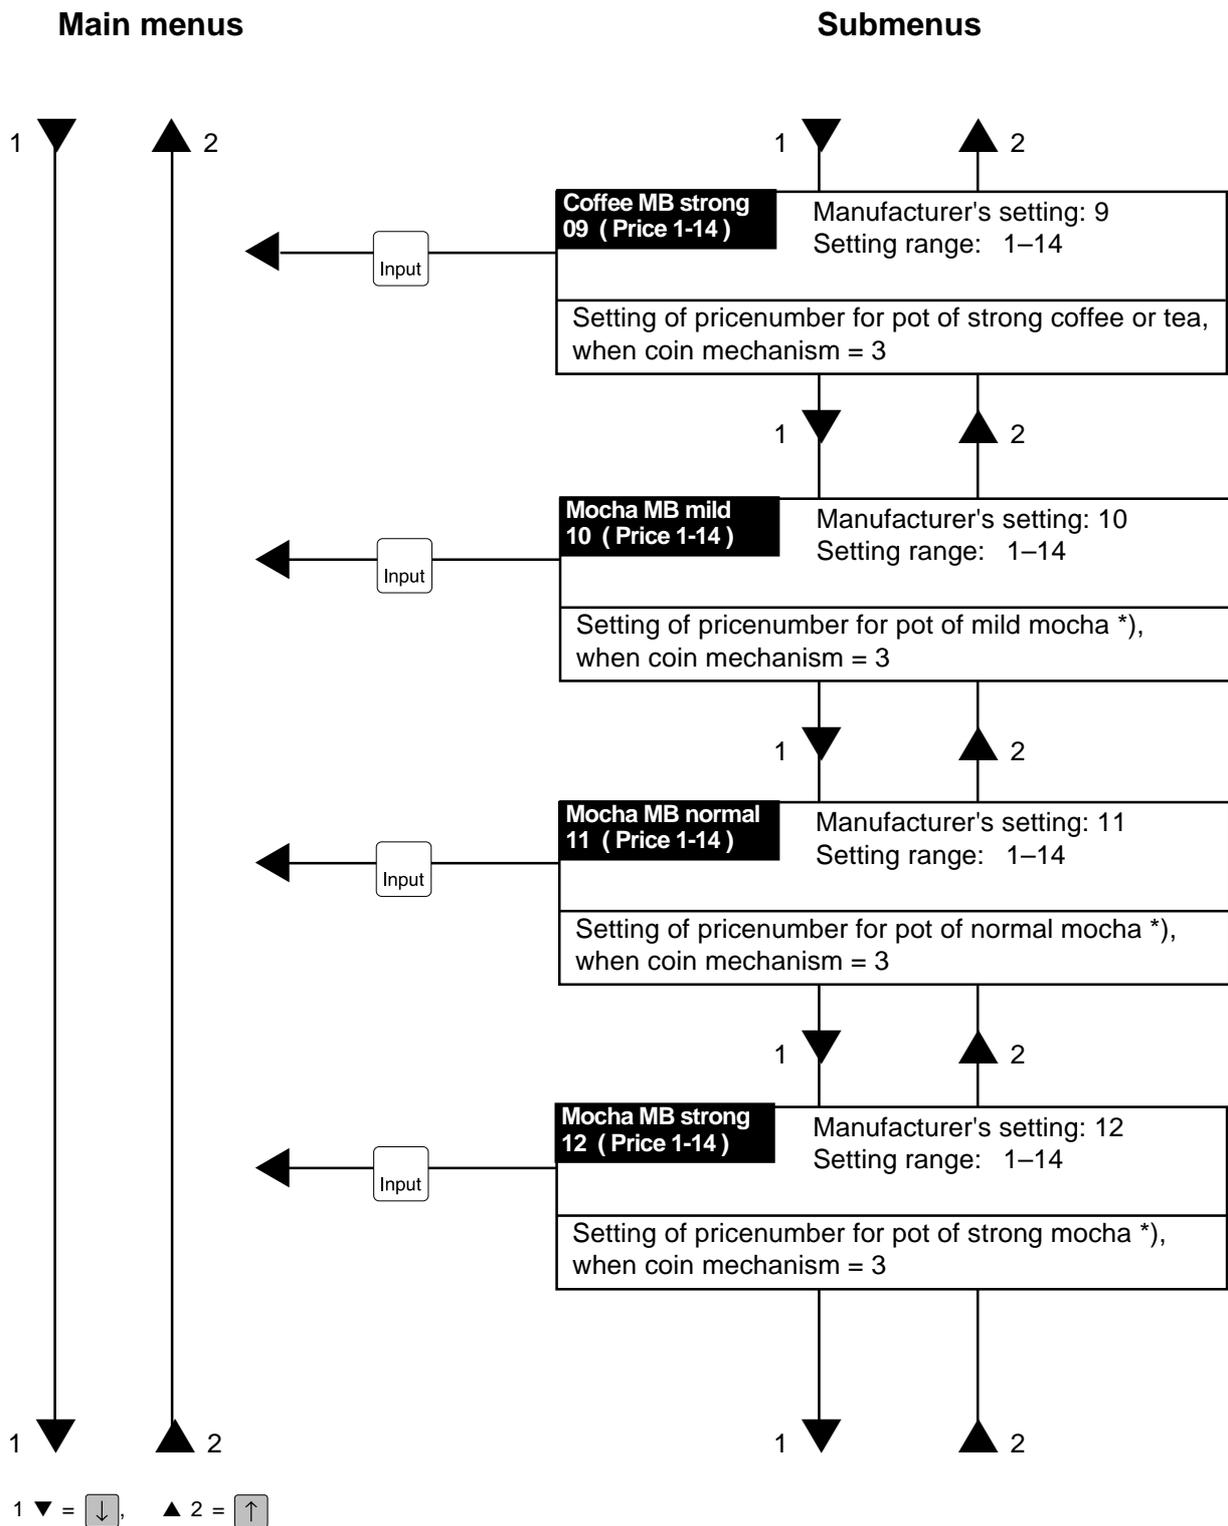

\*) Not possible with dispensers for tea delivery.

Main menus


Submenus

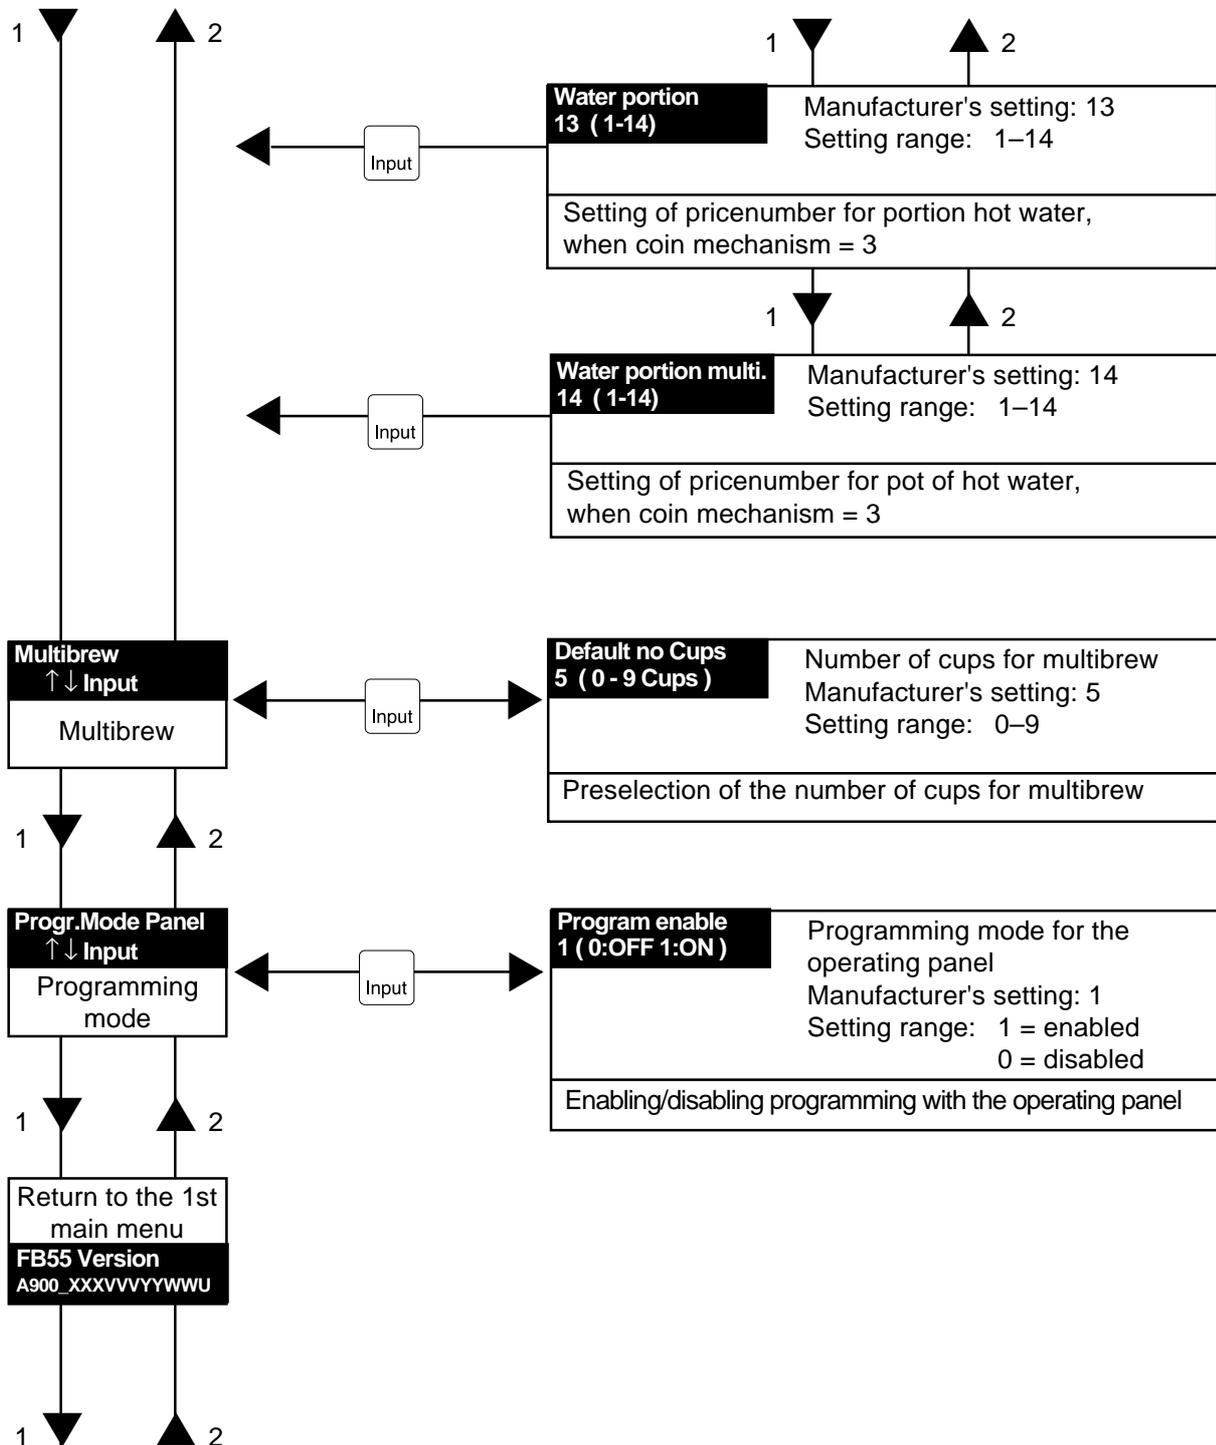

1 ▼ = [down arrow], ▲ 2 = [up arrow]

\*) Not possible with dispensers for tea delivery.

#### 4.2.5 Function of the buttons of the service device

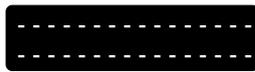

Two-line display with 16 digits each  
1st line: display of the main menu / submenu  
2nd line: display of the set value



Paging forwards through the list of main menus or submenus and saving



Paging backwards through the list of main menus or submenus and saving



Changing between main menu and submenu and saving



Erasing a set value



2x

Resetting to the manufacturer's setting



Display of date and time



without function

#### 4.2.6 Access to the programming mode with the service device

Access to the programming mode is obtained as follows:

- Switch the dispenser off at the main switch.
- Remove the cover on the socket.
- Connect the service device with the cable to the electronic control (1) (fig. 1)
- Switch the service device on.
- Switch the dispenser on at the main switch.



Every change done in the programming mode is saved automatically. There is no special saving procedure.

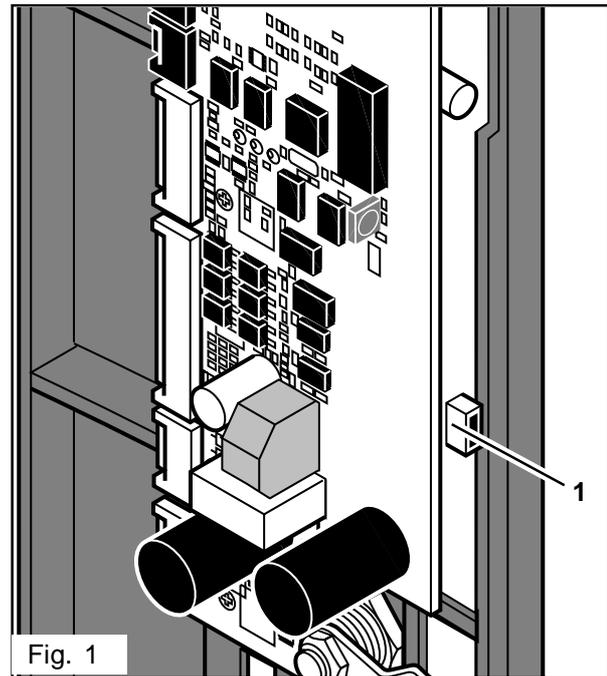


Fig. 1

#### 4.2.7 Quitting the programming mode with the service device

Quitting the programming mode:

- Switch the dispenser off at the main switch.
- Disconnect the service device from the dispenser.
- Switch the dispenser on at the main switch and close the left door. The dispenser is ready for operation after the normal switching on cycle.

### 4.2.8 Selecting and displaying values

**Button**


- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*)
- The software version is displayed.

**Display**

**FB55 Version:**  
A900\_XXXVVVYYWWU

You have now the option to display the value of all menus that are listed in the *chapter «Program structure»*.

**1. Selecting the main menu**

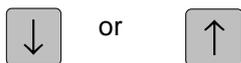

- Use the "arrow" buttons to select the main menu. The corresponding designation is displayed.  
Paging forwards: "Down" button  
Paging backwards: "Up" button



**Example:** To select the menu «Settings for mocha delivery» press the "Down" button 5 times.

**Mocha Settings**  
↑↓ Input \*)


**2. Selecting the submenu**



- After selection of the main menu use the "Input" button to change to the list of submenus.

- The menu «Mild mocha» is displayed. It is the first submenu in the group «Settings for mocha delivery».

**Mocha: mild**  
6g (0.5-20.0g) \*)

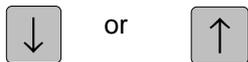

- Use the "arrow" buttons to select the required submenu  
Paging forwards: "Down" button  
Paging backwards: "Up" button



**Example:** To select the submenu «Strong mocha» press the "Input" button twice. The menu «Strong mocha» is displayed

**Mocha : strong**  
8g (0.5-20.0g) \*)



- With the "Input" button you can return to the main menus.

\*) Not with dispensers for tea delivery

## 4.2.8 Selecting and displaying values

**CAUTION:** Only actuate the buttons mentioned here. Otherwise you could accidentally change values.



If you have changed a value accidentally you can restore the manufacturer's setting (see chap. «Resetting the manufacturer's settings»).

- You can quit the programming mode as described in chap. «Quitting the programming mode with the service device». This is possible during every step in the menus.

## 4.2.9 Changing values and checking the setting

### Button

- Activate the programming mode (see chap. «Access to the programming mode with the service device»).
- Select a menu (see chap. «Selecting and displaying values»).
- The designation of the selected menu and the set value are displayed.

### Display

#### Changing the setting

- Press the "Clear" button. The value is erased.
- Enter a new value via the numerical keyboard.

#### Checking the setting:



- Press the "Down" button, the next menu is displayed.



- Press the "Up" button, the menu which was set by you is displayed. Check the value.
- Quit the programming mode (see chap. «Quitting the programming mode with the service device») or Select a new menu (see chap. «Selecting and displaying values»).

#### 4.2.10 Resetting to the manufacturer's settings

Button		Display
	2x	- Activate the programming mode ( <i>see chap. «Access to the programming mode with the service device»</i> ).
		- Select the submenu that shall be reset to the manufacturer setting ( <i>see chap. «Selecting and displaying values»</i> ). The designation and the set value for this menu are displayed.
		- Press the "Clear" button twice. The selected submenu is reset to the manufacturer's setting.
		- Check the setting ( <i>see chap. «Changing values and checking the setting»</i> ).
		- Switch the dispenser off with the main switch to quit the programming mode ( <i>see chap. «Quitting the programming mode with the service device»</i> ) <u>or</u> Select a new menu ( <i>see chap. «Selecting and displaying values»</i> ).

#### 4.2.11 Display of the total number of delivered beverage portions

Button		Display
	1x	
	<ul style="list-style-type: none"><li>- Press the "Down" button once.</li><li>- Press the "Input" button to access the submenu.</li><li>- The number of beverage portions delivered in total is indicated. It is not possible to reset or adjust the display.</li><li>- Quit the programming mode (<i>see chap. «Quitting the programming mode with the service device»</i>) <u>or</u> Select a new menu for adjustment (<i>see chap. «Selecting and changing values»</i>).</li></ul>	

### 4.2.12 Display of the paid delivered portions of coffee or tea

**Button**




1x



1x

- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button once.
- Press the "Input" button to access the submenus.
- Press the "Down" button twice.
- The number of paid delivered portions of coffee or tea is indicated. It is not possible to reset or adjust the display.
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*) or Select a new menu for adjustment (*see chap. «Selecting and changing values»*).

**Display**

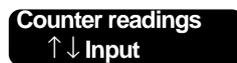

### 4.2.13 Display of the free delivered portions of coffee or tea

#### Button



1x



2x

- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button once.
- Press the "Input" button to access the submenu.
- Press the "Down" button 2 times.
- The number of free delivered portions of coffee or tea is indicated. It is not possible to reset or adjust the display.
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*)  
or  
Select a new menu for adjustment (*see chap. «Selecting and changing values»*).

#### Display



### 4.2.14 Display of the paid delivered portions of mocha \*)

**Button**



1x



3x

- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button once.
- Press the "Input" button to access the submenus.
- Press the "Down" button 3 times.
- The number of paid delivered portions of mocha is indicated. It is not possible to reset or adjust the display.
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*)  
or  
Select a new menu for adjustment (*see chap. «Selecting and changing values»*).

**Display**



\*) Not with dispensers for tea delivery

#### 4.2.15 Display of the free delivered portions of mocha \*)

Button		Display
 1x 	<ul style="list-style-type: none"> <li>- Activate the programming mode (<i>see chap. «Access to the programming mode with the service device»</i>).</li> <li>- Press the "Down" button once.</li> <li>- Press the "Input" button to access the submenus.</li> </ul>	<div style="background-color: black; color: white; padding: 2px; border: 1px solid black; margin-bottom: 5px;"> <b>Counter readings</b>            ↑↓ Input         </div> <div style="background-color: black; color: white; padding: 2px; border: 1px solid black; margin-bottom: 5px;"> <b>Total machine</b>            NR=#####         </div> <div style="background-color: black; color: white; padding: 2px; border: 1px solid black;"> <b>Mocha</b>            FREE NR =#####         </div>
 4x	<ul style="list-style-type: none"> <li>- Press the "Down" button 4 times.</li> <li>- The number of free delivered portions of mocha is indicated. It is not possible to reset or adjust the display.</li> <li>- Quit the programming mode (<i>see chap. «Quitting the programming mode with the service device»</i>)  <u>or</u>            Select a new menu for adjustment (<i>see chap. «Selecting and changing values»</i>).</li> </ul>	

\*) Not with dispensers for tea delivery

### 4.2.16 Display of the paid delivered portions of hot water

**Button**



1x



5x

- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button once.
- Press the "Input" button to access the submenu.
- Press the "Down" button 5 times.
- The number of paid portions of hot water is indicated. It is not possible to reset or adjust the display.
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*) or Select a new menu for adjustment (*see chap. «Selecting and changing values»*).

**Display**

Counter readings

↑↓ Input

Total machine

NR=#####

Hot water

PAID NR =#####

#### 4.2.17 Display of the free delivered portions of hot water

##### Button



1x



6x

- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button once.
- Press the "Input" button to access the submenu.
- Press the "Down" button 6 times.
- The number of free delivered portions of hot water is indicated. It is not possible to reset or adjust the display.
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*)  
or  
Select a new menu for adjustment (*see chap. «Selecting and changing values»*).

##### Display

Counter readings  
↑↓ Input


Total machine  
NR=#####

Hot water  
FREE NR =#####

### 4.2.18 Display of the paid delivered portions of coffee or tea in pots

Button	-	Display
<div style="display: flex; align-items: center; margin-bottom: 5px;"> <div style="border: 1px solid gray; padding: 2px 5px; margin-right: 5px;">↓</div> <div style="margin-left: 10px;">1x</div> </div> <div style="display: flex; align-items: center; margin-bottom: 5px;"> <div style="border: 1px solid gray; padding: 2px 5px; margin-right: 5px;">Input</div> <div style="margin-left: 10px;"></div> </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid gray; padding: 2px 5px; margin-right: 5px;">↓</div> <div style="margin-left: 10px;">7x</div> </div>	<ul style="list-style-type: none"> <li>- Activate the programming mode (<i>see chap. «Access to the programming mode with the service device»</i>).</li> <li>- Press the "Down" button once.</li> <li>- Press the "Input" button to access the submenu.</li> <li>- Press the "Down" button 7 times.</li> <li>- The number of paid delivered portions of coffee or tea in pots is indicated. It is not possible to reset or adjust the display.</li> <li>- Quit the programming mode (<i>see chap. «Quitting the programming mode with the service device»</i>) <u>or</u> Select a new menu for adjustment (<i>see chap. «Selecting and changing values»</i>).</li> </ul>	<div style="background-color: black; color: white; padding: 2px; margin-bottom: 2px;">Counter readings</div> <div style="background-color: black; color: white; padding: 2px; margin-bottom: 2px;">↑↓ Input</div> <div style="background-color: black; color: white; padding: 2px; margin-bottom: 2px;">Total machine</div> <div style="background-color: black; color: white; padding: 2px; margin-bottom: 2px;">NR=#####</div> <div style="background-color: black; color: white; padding: 2px; margin-bottom: 2px;">Coffee multibrew</div> <div style="background-color: black; color: white; padding: 2px;">PAID NR =#####</div>

#### 4.2.19 Display of the free delivered portions of coffee or tea in pots

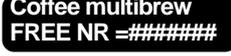
Button		Display
	1x	
		
	8x	
	<ul style="list-style-type: none"> <li>- Activate the programming mode (<i>see chap. «Access to the programming mode with the service device»</i>).</li> <li>- Press the "Down" button once.</li> <li>- Press the "Input" button to access the submenu.</li> <li>- Press the "Down" button 8 times.</li> <li>- The number of free delivered portions of coffee or tea in pots is indicated. It is not possible to reset or adjust the display.</li> <li>- Quit the programming mode (<i>see chap. «Quitting the programming mode with the service device»</i>) <u>or</u> Select a new menu for adjustment (<i>see chap. «Selecting and changing values»</i>).</li> </ul>	

### 4.2.20 Display of the paid delivered portions of mocha in pots \*)

Button	-	Activate the programming mode ( <i>see chap. «Access to the programming mode with the service device»</i> ).	Display
 1x	-	Press the "Down" button once.	
	-	Press the "Input" button to access the submenu.	
 9x	-	Press the "Down" button 9 times.	
	-	The number of paid delivered portions of mocha in pots is indicated. It is not possible to reset or adjust the display.	
	-	Quit the programming mode ( <i>see chap. «Quitting the programming mode with the service device»</i> ) <u>or</u> Select a new menu for adjustment ( <i>see chap. «Selecting and changing values»</i> ).	

\*) Not with dispensers for tea delivery

#### 4.2.21 Display of free delivered portions of mocha in pots \*)

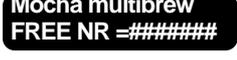
Button	-	Activate the programming mode ( <i>see chap. «Access to the programming mode with the service device»</i> ).	Display
 1x	-	Press the "Down" button once.	
	-	Press the "Input" button to access the submenu.	
 10x	-	Press the "Down" button 10 times.	
	-	The number of free delivered portions of mocha in pots is indicated. It is not possible to reset or adjust the display.	
	-	Quit the programming mode ( <i>see chap. «Quitting the programming mode with the service device»</i> ) <u>or</u> Select a new menu for adjustment ( <i>see chap. «Selecting and changing values»</i> ).	

\*) Not with dispensers for tea delivery

### 4.2.22 Display of paid delivered portions of hot water in pots

Button	-	Display
<div style="display: flex; align-items: center; margin-bottom: 5px;"> <div style="border: 1px solid gray; padding: 2px 5px; margin-right: 5px;">↓</div> <div style="margin-left: 10px;">1x</div> </div> <div style="display: flex; align-items: center; margin-bottom: 5px;"> <div style="border: 1px solid gray; padding: 2px 5px; margin-right: 5px;">Input</div> <div style="margin-left: 10px;"></div> </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid gray; padding: 2px 5px; margin-right: 5px;">↓</div> <div style="margin-left: 10px;">11x</div> </div>	<ul style="list-style-type: none"> <li>- Activate the programming mode (<i>see chap. «Access to the programming mode with the service device»</i>).</li> <li>- Press the "Down" button once.</li> <li>- Press the "Input" button to access the submenu.</li> <li>- Press the "Down" button 11 times.</li> <li>- The number of paid delivered portions of hot water in pots is indicated. It is not possible to reset or adjust the display.</li> <li>- Quit the programming mode (<i>see chap. «Quitting the programming mode with the service device»</i>) <u>or</u> Select a new menu for adjustment (<i>see chap. «Selecting and changing values»</i>).</li> </ul>	<div style="background-color: black; color: white; padding: 2px; margin-bottom: 2px;">Counter readings ↑↓ Input</div> <div style="background-color: black; color: white; padding: 2px; margin-bottom: 2px;">Total machine NR=#####</div> <div style="background-color: black; color: white; padding: 2px;">Hot water multibrew PAID NR =#####</div>

### 4.2.23 Display of free delivered portions of hot water in pots

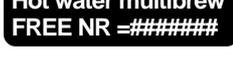Button	-	Display
 1x	<ul style="list-style-type: none"> <li>- Activate the programming mode (<i>see chap. «Access to the programming mode with the service device»</i>).</li> </ul>	
	<ul style="list-style-type: none"> <li>- Press the "Down" button once.</li> <li>- Press the "Input" button to access the submenu.</li> </ul>	
 12x	<ul style="list-style-type: none"> <li>- Press the "Down" button 12 times.</li> <li>- The number of free delivered portions of hot water in pots is indicated. It is not possible to reset or adjust the display.</li> <li>- Quit the programming mode (<i>see chap. «Quitting the programming mode with the service device»</i>) <u>or</u> Select a new menu for adjustment (<i>see chap. «Selecting and changing values»</i>).</li> </ul>	

### 4.2.24 Display of the product quantity delivered in total

**Button**





1x



13x (or 12x )

- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button once.
- Press the "Input" button to access the submenu.
- Press the "Down" button 13 times.
- The total product quantity in kg is indicated that has been delivered with the dispenser. It is not possible to reset or adjust the display.
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*) or Select a new menu for adjustment (*see chap. «Selecting and changing values»*).

**Display**

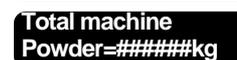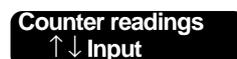

#### 4.2.25 Display of the portion quantities delivered in total

##### Button



1x

14x (or 11x )

- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button once.
- Press the "Input" button to access the submenu.
- Press the "Down" button 14 times.
- The total number of beverage portions that have been delivered with this dispenser is indicated in I. The delivered portions of hot water are included in this display. It is not possible to reset or adjust the display.
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*)  
or  
Select a new menu for adjustment (*see chap. «Selecting and changing values»*).

##### Display

Counter readings

↑↓ Input

Total machine  
NR=#####

Total machine  
RTD =#####

### 4.2.26 Display of the product quantity for coffee or tea delivered in total

Button	-	Display
 1x 	<ul style="list-style-type: none"> <li>- Activate the programming mode (<i>see chap. «Access to the programming mode with the service device»</i>).</li> <li>- Press the "Down" button once.</li> <li>- Press the "Input" button to access the submenus.</li> </ul>	<div style="background-color: black; color: white; padding: 2px; border: 1px solid black;"> <b>Counter readings</b>                      ↑↓ Input                 </div> <div style="background-color: black; color: white; padding: 2px; border: 1px solid black;"> <b>Total machine</b>                      NR=#####                 </div> <div style="background-color: black; color: white; padding: 2px; border: 1px solid black;"> <b>Coffee</b>                      Powder =#####kg                 </div>
 15x (or 10x  )	<ul style="list-style-type: none"> <li>- Press the "Down" button 15 times.</li> <li>- The total product quantity for coffee or tea that has been delivered with this dispenser is indicated in kg. It is not possible to reset or adjust the display.</li> <li>- Quit the programming mode (<i>see chap. «Quitting the programming mode with the service device»</i>)                      or                      Select a new menu for adjustment (<i>see chap. «Selecting and changing values»</i>).</li> </ul>	

### 4.2.27 Display of the portions of coffee or tea delivered in total

Button		Display
 1x	<ul style="list-style-type: none"> <li>- Activate the programming mode (<i>see chap. «Access to the programming mode with the service device»</i>).</li> <li>- Press the "Down" button once.</li> </ul>	<div style="background-color: black; color: white; padding: 2px; border-radius: 5px;">                     Counter readings                      ↑↓ Input                 </div>
	<ul style="list-style-type: none"> <li>- Press the "Input" button to access the submenu.</li> </ul>	<div style="background-color: black; color: white; padding: 2px; border-radius: 5px;">                     Total machine                      NR=#####                 </div>
 16x (or 9x  )	<ul style="list-style-type: none"> <li>- Press the "Down" button 16 times.</li> <li>- The total of coffee or tea portions (in l) that has been delivered with this dispenser is shown. It is not possible to reset or adjust the display.</li> <li>- Quit the programming mode (<i>see chap. «Quitting the programming mode with the service device»</i>) <u>or</u> Select a new menu for adjustment (<i>see chap. «Selecting and changing values»</i>).</li> </ul>	<div style="background-color: black; color: white; padding: 2px; border-radius: 5px;">                     Coffee                      RTD =##### l                 </div>

### 4.2.28 Display of the product quantity of mocha delivered in total \*)

Button		Display
	1x	<div style="background-color: black; color: white; padding: 2px; border: 1px solid black;">                     Counter readings                      ↑↓ Input                 </div>
<div style="border: 1px solid black; padding: 2px; width: fit-content;">Input</div>		<div style="background-color: black; color: white; padding: 2px; border: 1px solid black;">                     Total machine                      NR=#####                 </div>
	17x (or 8x  )	<div style="background-color: black; color: white; padding: 2px; border: 1px solid black;">                     Mocha                      Powder =#####kg                 </div>
	<ul style="list-style-type: none"> <li>- Activate the programming mode (<i>see chap. «Access to the programming mode with the service device»</i>).</li> <li>- Press the "Down" button once.</li> <li>- Press the "Input" button to access the submenus.</li> <li>- Press the "Down" button 17 times.</li> <li>- The total of the mocha product quantity (in kg) that has been delivered with this dispenser is shown. It is not possible to reset or adjust the display.</li> <li>- Quit the programming mode (<i>see chap. «Quitting the programming mode with the service device»</i>)  <u>or</u>                      Select a new menu for adjustment (<i>see chap. «Selecting and changing values»</i>).</li> </ul>	

\*) Not possible with dispensers for tea delivery.

#### 4.2.29 Display of the mocha portions delivered in total \*)

Button		Display
 1x 	<ul style="list-style-type: none"> <li>- Activate the programming mode (<i>see chap. «Access to the programming mode with the service device»</i>).</li> <li>- Press the "Down" button once.</li> <li>- Press the "Input" button to access the submenus.</li> </ul>	<div style="background-color: black; color: white; padding: 2px; border: 1px solid black; margin-bottom: 2px;"> <b>Counter readings</b>            ↑↓ Input         </div> <div style="background-color: black; color: white; padding: 2px; border: 1px solid black; margin-bottom: 2px;"> <b>Total machine</b>            NR=#####         </div> <div style="background-color: black; color: white; padding: 2px; border: 1px solid black;"> <b>Mocha</b>            RTD =##### l         </div>
 18x (or 7x  )	<ul style="list-style-type: none"> <li>- Press the "Down" button 18 times.</li> <li>- The total of mocha portions (in l) that has been delivered with this dispenser is shown. It is not possible to reset or adjust the display.</li> <li>- Quit the programming mode (<i>see chap. «Quitting the programming mode with the service device»</i>)  <u>or</u>            Select a new menu for adjustment (<i>see chap. «Selecting and changing values»</i>).</li> </ul>	

\*) Not possible with dispensers for tea delivery.

### 4.2.30 Display of the total number of hot water portions delivered

Button	-	Display
 1x   19x (or 6x  )	<ul style="list-style-type: none"> <li>- Activate the programming mode (<i>see chap. «Access to the programming mode with the service device»</i>).</li> <li>- Press the "Down" button once.</li> <li>- Press the "Input" button to access the submenus.</li> <li>- Press the "Down" button 19 times.</li> <li>- The total of hot water portions (in l) that has been delivered with this dispenser is shown. It is not possible to reset or adjust the display.</li> <li>- Quit the programming mode (<i>see chap. «Quitting the programming mode with the service device»</i>) or Select a new menu for adjustment (<i>see chap. «Selecting and changing values»</i>).</li> </ul>	<div style="background-color: black; color: white; padding: 2px; border: 1px solid black; margin-bottom: 2px;">Counter readings ↑↓ Input</div> <div style="background-color: black; color: white; padding: 2px; border: 1px solid black; margin-bottom: 2px;">Total machine NR=#####</div> <div style="background-color: black; color: white; padding: 2px; border: 1px solid black;">Hot water =##### l</div>

### 4.2.31 Display of the total of the delivered coffee or tea product quantity in multibrew mode

Button	-	Display
 1x	<ul style="list-style-type: none"> <li>- Activate the programming mode (<i>see chap. «Access to the programming mode with the service device»</i>).</li> <li>- Press the "Down" button once.</li> </ul>	<div style="background-color: black; color: white; padding: 2px; border: 1px solid black;">                     Counter readings                      ↑↓ Input                 </div>
<div style="border: 1px solid black; padding: 2px; width: fit-content;">Input</div>	<ul style="list-style-type: none"> <li>- Press the "Input" button to access the submenus.</li> </ul>	<div style="background-color: black; color: white; padding: 2px; border: 1px solid black;">                     Total machine                      NR=#####                 </div>
 20x (or 5x  )	<ul style="list-style-type: none"> <li>- Press the "Down" button 20 times.</li> <li>- The total of the coffee or tea product quantity (in kg) that has been delivered with this dispenser in multibrew mode is shown. It is not possible to reset or adjust the display.</li> <li>- Quit the programming mode (<i>see chap. «Quitting the programming mode with the service device»</i>) <u>or</u> Select a new menu for adjustment (<i>see chap. «Selecting and changing values»</i>).</li> </ul>	<div style="background-color: black; color: white; padding: 2px; border: 1px solid black;">                     Coffee multibrew                      Powder =##### kg                 </div>

### 4.2.32 Display of the total of the delivered coffee or tea portions (multibrew mode)

Button		Display
 1x 	<ul style="list-style-type: none"> <li>- Activate the programming mode (<i>see chap. «Access to the programming mode with the service device»</i>).</li> <li>- Press the "Down" button once.</li> <li>- Press the "Input" button to access the submenus.</li> </ul>	<div style="background-color: black; color: white; padding: 2px; border: 1px solid black;">Counter readings ↑↓ Input</div> <div style="background-color: black; color: white; padding: 2px; border: 1px solid black;">Total machine NR=#####</div> <div style="background-color: black; color: white; padding: 2px; border: 1px solid black;">Coffee multibrew RTD=##### l</div>
 21x (or 4x  )	<ul style="list-style-type: none"> <li>- Press the "Down" button 21 times.</li> <li>- The total of the delivered coffee or tea portions (in l) that has been delivered with this dispenser in multibrew mode is shown. It is not possible to reset or adjust the display.</li> <li>- Quit the programming mode (<i>see chap. «Quitting the programming mode with the service device»</i>) or Select a new menu for adjustment (<i>see chap. «Selecting and changing values»</i>).</li> </ul>	

### 4.2.33 Display of the total of the delivered mocha product quantity in multibrew mode \*)

Button	-	Display
<div style="display: flex; align-items: center; margin-bottom: 10px;"> <div style="border: 1px solid gray; padding: 2px 5px; margin-right: 5px;">↓</div> <div style="margin-left: 10px;">1x</div> </div> <div style="display: flex; align-items: center; margin-bottom: 10px;"> <div style="border: 1px solid gray; padding: 2px 5px; margin-right: 5px;">Input</div> <div style="margin-left: 10px;"></div> </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid gray; padding: 2px 5px; margin-right: 5px;">↓</div> <div style="margin-left: 10px;">22x (or 3x</div> <div style="border: 1px solid gray; padding: 2px 5px; margin-left: 5px; margin-right: 5px;">↑</div> <div style="margin-left: 5px;">)</div> </div>	<ul style="list-style-type: none"> <li>- Activate the programming mode (<i>see chap. «Access to the programming mode with the service device»</i>).</li> <li>- Press the "Down" button once.</li> <li>- Press the "Input" button to access the submenus.</li> <li>- Press the "Down" button 22 times.</li> <li>- The total of the mocha product quantity (in kg) that has been delivered with this dispenser in multibrew mode is shown. It is not possible to reset or adjust the display.</li> <li>- Quit the programming mode (<i>see chap. «Quitting the programming mode with the service device»</i>) or Select a new menu for adjustment (<i>see chap. «Selecting and changing values»</i>).</li> </ul>	<div style="background-color: black; color: white; padding: 5px; margin-bottom: 5px; border-radius: 3px;"> <b>Counter readings</b>                      ↑↓ Input                 </div> <div style="background-color: black; color: white; padding: 5px; margin-bottom: 5px; border-radius: 3px;"> <b>Total machine</b>                      NR=#####                 </div> <div style="background-color: black; color: white; padding: 5px; border-radius: 3px;"> <b>Mocha multibrew powder =#####kg</b> </div>

\*) Not possible with dispensers for tea delivery.

### 4.2.34 Display of the total of the delivered mocha portions (multibrew mode) \*)

**Button**



1x



23x (or 2x



- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button once.
- Press the "Input" button to access the submenu.
- Press the "Down" button 23 times.
- The total of the delivered mocha portions (in l) that has been delivered with this dispenser in multibrew mode is shown. It is not possible to reset or adjust the display.
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*) or Select a new menu for adjustment (*see chap. «Selecting and changing values»*).

**Display**

Counter readings

↑↓ Input

Total machine

NR=#####

Mocha multibrew

RTD =##### l

\*) Not possible with dispensers for tea delivery.

### 4.2.35 Display of the total of the delivered hot water portions (multibrew mode)

Button	-	Display
 1x 	<ul style="list-style-type: none"> <li>- Activate the programming mode (<i>see chap. «Access to the programming mode with the service device»</i>).</li> <li>- Press the "Down" button once.</li> <li>- Press the "Input" button to access the submenu.</li> </ul>	<div style="background-color: black; color: white; padding: 2px; border: 1px solid black; margin-bottom: 2px;"> <b>Counter readings</b>                      ↑↓ Input                 </div> <div style="background-color: black; color: white; padding: 2px; border: 1px solid black; margin-bottom: 2px;"> <b>Total machine</b>                      NR=#####                 </div> <div style="background-color: black; color: white; padding: 2px; border: 1px solid black;"> <b>Hot water multi.</b>                      =#####                   </div>
 24x (od 1x  )	<ul style="list-style-type: none"> <li>- Press the "Down" button 24 times.</li> <li>- The total of the delivered hot water portions (in l) that has been delivered with this dispenser in multibrew mode is shown. It is not possible to reset or adjust the display.</li> <li>- Quit the programming mode (<i>see chap. «Quitting the programming mode with the service device»</i>)                      or                      Select a new menu for adjustment (<i>see chap. «Selecting and changing values»</i>).</li> </ul>	

### 4.2.36 Changing the dispenser over from coffee to tea

**Button**




2x



- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button twice.
- Press the "Input" button to access the submenu.
- In this menu the device can be changed over from delivering coffee to delivering tea and vice versa.  
 Setting range:           00 for coffee  
                                   01 for tea  
 Manufacturer's setting: 00
- To change the setting:  
 Actuate the "Clear" button to erase the setting then enter the new value.
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*)  
or  
 Select a new menu for adjustment (*see chap. «Selecting and changing values»*).

**Display**

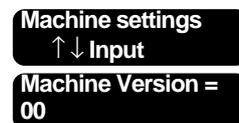

### 4.2.37 Calibration of the brewer valve

**Button**

- Activate the programming mode (see chap. «Access to the programming mode with the service device»).
- Remove the product container.
- Pull the supply hose of the brewer valve off the brewer and position it into a suitable container.

**Display**



The set values in these menus must not be changed. If an adjustment is necessary it is done directly on the valve. (see chap. 6)

**WARNING: The delivered water can be hot. Risk of being scalded.**

 3x  
  
 1x  
  


- Press the "Down" button 3 times.
- Press the "Input" button to access the submenu.
- Press the "Down" button once.
- Press the safety switch and keep it pressed. Simultaneously press the «0» button. The dispenser delivers water for a pre-determined time.
- Measure the water quantity in ml.
- The dispenser is adjusted in such a way that now 140 ml must be delivered. If the delivery is not 140 ml the adjustment of the brewer valve must be changed (see chap. 6). Repeat the procedure with the service device after the readjustment of the brewer valve.
- Calibration of the brewer valve is now completed. Fasten the supply hose of the brewer valve to the brewer.

Valve Calibrat.  
 ↑↓ Input  
 Brewer Valve  
 028 ml/sec.  
 Cal. BrewValve to  
 140 ml : Press 0



Every change is saved immediately. To reset a value to the manufacturer's setting see chap. «Resetting to the manufacturer's settings».

- Quit the programming mode (see chap. «Quitting the programming mode with the service device») or Select a new menu for adjustment (see chap. «Selecting and changing values»).

### 4.2.38 Calibration of the hot water valve

**Button**

- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Position a suitable container underneath the outlet.

**Display**



The set values in these menus must not be changed. If an adjustment is necessary it is done directly on the valve.

**WARNING: The delivered water can be hot. Risk of being scalded.**



3x



2x



- Press the "Down" button 3 times.
- Press the "Input" button to access the submenus.
- Press the "Down" button twice.
- Press the "Down" button again.
- Press the safety switch and keep it pressed. Simultaneously press the «0» button. The dispenser delivers water for a pre-determined time.
- Measure the water quantity in ml.
- The dispenser is adjusted in such a way that now 140 ml must be delivered. If the delivery is not 140 ml the adjustment of the hot water valve must be changed (see chap. 6). Repeat the procedure with the service device after the readjustment of the hot water valve.
- Press the "Clear" button to erase the set value. Enter the measured value in ml via the keyboard of the service device.
- Calibration of the hot water valve is now completed.




Every change is saved immediately. To reset a value to the manufacturer's setting see *chap. «Resetting to the manufacturer's settings»*.

- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*) or Select a new menu for adjustment (*see chap. «Selecting and changing values»*).

### 4.2.39 Calibration of the product quantity

**Button**

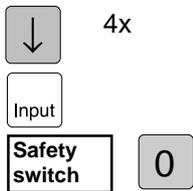

- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Remove the brewing cylinder and position a container underneath the dosing system.
- Press the "Down" button 4 times.
- Press the "Input" button to access the submenus.
- Press the safety switch and keep it pressed. Simultaneously press the «0» button. The dispenser delivers product for a pre-determined time.
- Measure the water quantity in g.
- Press the "Clear" button to erase the set value. Enter the measured value in ml via the keyboard of the service device.
- Calibration of the product quantity is now completed.




Every change is saved immediately. To reset a value to the manufacturer's setting see *chap. «Resetting to the manufacturer's settings»*.

Checking the adjustment:

- Press the "Input" button. The main menu is displayed.
- Press the "Input" button again. The display changes back to submenu that has been adjusted. Check the adjustment.
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*)  
or  
Select a new menu for adjustment (*see chap. «Selecting and changing values»*).

**Display**

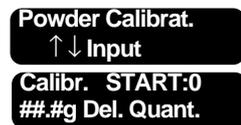

### 4.2.40 Setting the beverage strength for mild mocha via the product quantity with test delivery \*)

Button		Display
 5x  	<ul style="list-style-type: none"> <li>- Activate the programming mode (<i>see chap. «Access to the programming mode with the service device»</i>).</li> <li>- Press the "Down" button 5 times.</li> <li>- Press the "Input" button to access the submenus.</li> <li>- Press the "Clear" button to erase the set value.</li> <li>- Enter the product quantity for mild mocha in g via the keyboard of the service device.                      Setting range: 0.5–20.0 g                      Manufacturer's setting: 6 g</li> </ul>	<p><b>Mocha Settings</b>                      ↑↓ Input</p> <p><b>Mocha: mild</b>                      06.0g ( 0.5-20.0g )</p>
 5x (or 3x  ) <div style="border: 1px solid black; padding: 2px; display: inline-block; margin: 5px 0;"><b>Safety switch</b></div> 	<ul style="list-style-type: none"> <li>- Press the "down" button 5 times.</li> <li>- Press the safety switch and keep it pressed. Position a suitable container underneath the outlet. Press the «0» button, a test delivery of mild mocha is carried out. Check the beverage.</li> </ul>	<p><b>Testdeliv. mild</b>                      Start: 0</p>
 5x (or 3x  )	<ul style="list-style-type: none"> <li>- The beverage is not satisfactory: press the "Up" button 5 times and enter a new product quantity for mild mocha. Carry out another test delivery.</li> <li>- The beverage is satisfactory: check the setting.</li> </ul>	
	<p> Every change is saved immediately. To reset a value to the manufacturer's setting see <i>chap. «Resetting to the manufacturer's settings»</i>.</p>	
 5x (or 3x  )	<p>Checking the adjustment:</p> <ul style="list-style-type: none"> <li>- Press the "Up" button 5 times. The display changes back to the value that has just been set. Check the adjustment</li> <li>- Quit the programming mode (<i>see chap. «Quitting the programming mode with the service device»</i>)                      or                      Select a new menu for adjustment (<i>see chap. «Selecting and changing values»</i>).</li> </ul>	<p><b>Mocha: mild</b>                      06.0g ( 0.5-20.0g )</p>

\*) Not with dispensers for tea delivery

### 4.2.41 Setting the beverage strength for normal mocha via the product quantity with test delivery \*)

**Button**



5x




1x




- Activate the programming mode (see chap. «Access to the programming mode with the service device»).
- Press the "Down" button 5 times.
- Press the "Input" button to access the submenus.
- Press the "Down" button once.
- Press the "Clear" button to erase the set value.
- Enter the product quantity for normal mocha in g via the keyboard of the service device.  
Setting range: 0.5–20.0 g  
Manufacturer's setting: 7 g

**Display**

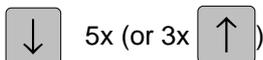


- Press the "down" button 5 times.
- Press the safety switch and keep it pressed. Position a suitable container underneath the outlet. Press the «0» button, a test delivery of normal mocha is carried out. Check the beverage.

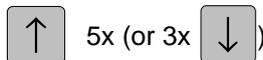

- The beverage is not satisfactory: press the "Up" button 5 times and enter a new product quantity for normal mocha. Carry out another test delivery.
- The beverage is satisfactory: check the setting.



Every change is saved immediately. To reset a value to the manufacturer's setting see chap. «Resetting to the manufacturer's settings».

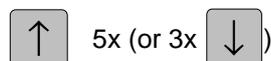

**Checking the adjustment:**

- Press the "Up" button 5 times. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (see chap. «Quitting the programming mode with the service device») or Select a new menu for adjustment (see chap. «Selecting and changing values»).



\*) Not with dispensers for tea delivery

### 4.2.42 Setting the beverage strength for strong mocha via the product quantity with test delivery \*)

<p><b>Button</b></p>	<ul style="list-style-type: none"> <li>- Activate the programming mode (<i>see chap. «Access to the programming mode with the service device»</i>).</li> </ul>	<p><b>Display</b></p>
<p> 5x</p>	<ul style="list-style-type: none"> <li>- Press the "Down" button 5 times.</li> </ul>	<div style="background-color: black; color: white; padding: 2px; text-align: center;"> <b>Mocha Settings</b>                  ↑↓ Input             </div>
<p></p>	<ul style="list-style-type: none"> <li>- Press the "Input" button to access the submenus.</li> </ul>	<div style="background-color: black; color: white; padding: 2px; text-align: center;"> <b>Mocha: mild</b>                  06.0g ( 0.5-20.0g )             </div>
<p> 2x</p>	<ul style="list-style-type: none"> <li>- Press the "Down" button twice.</li> </ul>	<div style="background-color: black; color: white; padding: 2px; text-align: center;"> <b>Mocha : strong</b>                  08.0g ( 0.5-20.0g )             </div>
<p></p>	<ul style="list-style-type: none"> <li>- Press the "Clear" button to erase the set value.</li> </ul>	
	<ul style="list-style-type: none"> <li>- Enter the product quantity for strong mocha in g via the keyboard of the service device.                      Setting range:           0.5–20.0 g                      Manufacturer's setting:   8 g</li> </ul>	
<p> 5x (or 3x  )</p>	<ul style="list-style-type: none"> <li>- Press the "down" button 5 times.</li> </ul>	
<p></p>	<ul style="list-style-type: none"> <li>- Press the safety switch and keep it pressed. Position a suitable container underneath the outlet. Press the «0» button, a test delivery of strong mocha is carried out. Check the beverage.</li> </ul>	<div style="background-color: black; color: white; padding: 2px; text-align: center;"> <b>Testdeliv. strong</b>                  Start: 0             </div>
<p></p>		
<p> 5x (or 3x  )</p>	<ul style="list-style-type: none"> <li>- The beverage is not satisfactory: press the "Up" button 5 times and enter a new product quantity for strong mocha. Carry out another test delivery.</li> <li>- The beverage is satisfactory: check the setting.</li> </ul>	
	<p> Every change is saved immediately. To reset a value to the manufacturer's setting see <i>chap. «Resetting to the manufacturer's settings»</i>.</p>	
<p> 5x (or 3x  )</p>	<p>Checking the adjustment:</p> <ul style="list-style-type: none"> <li>- Press the "Up" button 5 times. The display changes back to the value that has just been set. Check the adjustment</li> <li>- Quit the programming mode (<i>see chap. «Quitting the programming mode with the service device»</i>) <u>or</u> Select a new menu for adjustment (<i>see chap. «Selecting and changing values»</i>).</li> </ul>	<div style="background-color: black; color: white; padding: 2px; text-align: center;"> <b>Mocha : strong</b>                  08.0g ( 0.5-20.0g )             </div>

\*) Not with dispensers for tea delivery

### 4.2.43 Setting the portion size for mocha \*)

**Button**

- Activate the programming mode (see chap. «Access to the programming mode with the service device»).

**Display**




5x

- Press the "Down" button 5 times.



- Press the "Input" button to access the submenus.

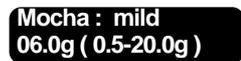

3x

- Press the "Down" button 3 times.



- Press the "Clear" button to erase the set value.

- Enter the portion size in ml via the keyboard of the service device.

Setting range: 50–240 ml  
 Manufacturer's setting: 90 ml



Every change is saved immediately. To reset a value to the manufacturer's setting see chap. «Resetting to the manufacturer's settings».

The portion size influences the beverage strength. If necessary carry out a test delivery for the 3 types of mocha. If necessary change the beverage strength via the product quantity (see there).

Checking the adjustment:



- Press the "Up" button. The display changes to the previous menu.



- Press the "Down" button. The display changes back to the value that has just been set. Check the adjustment



- Quit the programming mode (see chap. «Quitting the programming mode with the service device») or Select a new menu for adjustment (see chap. «Selecting and changing values»).

\*) Not with dispensers for tea delivery

### 4.2.44 Setting the brewing time for mocha \*)

Button		Display
 5x 	<ul style="list-style-type: none"> <li>- Activate the programming mode (see chap. «Access to the programming mode with the service device»).</li> <li>- Press the "Down" button 5 times.</li> <li>- Press the "Input" button to access the submenus.</li> </ul>	<div style="background-color: black; color: white; padding: 2px; margin-bottom: 2px;">Mocha Settings ↑↓ Input</div> <div style="background-color: black; color: white; padding: 2px; margin-bottom: 2px;">Mocha : mild 06.0 g ( 0.5-20.0g )</div> <div style="background-color: black; color: white; padding: 2px;">Mocha Top Stop 2.7s ( 0-9.9s )</div>
 4x 	<ul style="list-style-type: none"> <li>- Press the "Down" button 4 times.</li> <li>- Press the "Clear" button to erase the set value.</li> <li>- Enter the brewing time in sec. via the keyboard of the service device.                      Setting range:           0–9.9 sec.                      Manufacturer's setting:   2.7 sec.</li> </ul>	
	 Every change is saved immediately. To reset a value to the manufacturer's setting see chap. «Resetting to the manufacturer's settings».	
 	<p>Checking the adjustment:</p> <ul style="list-style-type: none"> <li>- Press the "Up" button. The display changes to the previous menu.</li> <li>- Press the "Down" button. The display changes back to the value that has just been set. Check the adjustment</li> <li>- Quit the programming mode (see chap. «Quitting the programming mode with the service device») <u>or</u> Select a new menu for adjustment (see chap. «Selecting and changing values»).</li> </ul>	<div style="background-color: black; color: white; padding: 2px; margin-bottom: 2px;">Mocha water 090ml ( 50-240ml )</div> <div style="background-color: black; color: white; padding: 2px;">Mocha Top Stop 2.7s ( 0-9.9s )</div>

\*) Not with dispensers for tea delivery

#### 4.2.45 Settings for coffee or tea

##### Button



6x



- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button 6 times.
- Press the "Input" button to access the submenu.
- The settings for
  - the beverage strength for mild, normal and strong coffee,
  - the portion size for coffee or tea,
  - the brewing time for coffee or tea,
  - the test deliveries for the three types of coffee or tea,
  - the check of the setting

is done in the same way as the corresponding settings for mocha (see there). The manufacturer's settings and setting ranges are given in the *chap. «Program structure»*.



Every change is saved immediately. To reset a value to the manufacturer's setting see *chap. «Resetting to the manufacturer's settings»*.

##### Display

Coffee Settings  
↑↓ Input

Coffee : mild  
06.0g ( 0.5-20.0g )

### 4.2.46 Delivery mode for hot water

**Button**



7x



- Activate the programming mode (see chap. «Access to the programming mode with the service device»).

- Press the "Down" button 7 times.
- Press the "Input" button to access the submenu.
- Press the "Clear" button to erase the set value.
- Enter the delivery mode via the keyboard of the service device.  
 Setting range:           0 (continuous),  
                                   1 (portioned)  
 Manufacturer's setting:  0

**Display**



**WARNING:** There is an increased risk of being scalded when the delivery is set to 1 portion. When the hot water button has been actuated hot water is delivered until the set quantity has been reached.



Every change is saved immediately. To reset a value to the manufacturer's setting see chap. «Resetting to the manufacturer's settings».


Checking the adjustment:



- Press the "Down" button. The display changes to the next submenu.



- Press the "Up" button. The display changes back to the value that has just been set. Check the adjustment

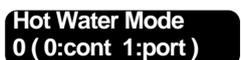



- Quit the programming mode (see chap. «Quitting the programming mode with the service device») or Select a new menu for adjustment (see chap. «Selecting and changing values»).

### 4.2.47 Portion size for hot water with test delivery


**Button**

- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button 7 times.
- Press the "Input" button to access the submenus.
- Press the "Down" button once.
- Press the "Clear" button to erase the set value.
- Enter the portion size for hot water in ml via the keyboard of the service device.  
 Setting range: 50–250 ml  
 Manufacturer's setting: 130 ml

**Display**

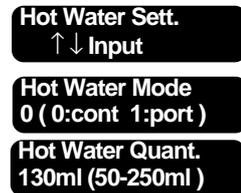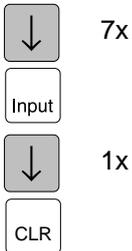

The delivery mode for hot water must be set to "portioned".

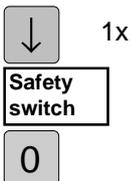

- Press the "Down" button once.
- Press the safety switch and keep it pressed. Position a suitable container underneath the outlet. Press the «0» button, a test delivery of hot water is carried out. Check the water quantity.



- The water quantity is not correct: press the "Up" button once and correct the setting. Carry out another test delivery.
- The water quantity is correct: check the setting.

Every change is saved immediately. To reset a value to the manufacturer's setting see *chap. «Resetting to the manufacturer's settings»*.



- Checking the adjustment:
- Press the "Up" button. The display changes back to the value that has just been set. Check the adjustment
  - Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*)  
 or  
 Select a new menu for adjustment (*see chap. «Selecting and changing values»*).



### 4.2.48 Setting the water quantity for the rinsing process

**Button**



8x



- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button 8 times.
- Press the "Input" button to access the submenu.
- Press the "Clear" button to erase the set value.
- Enter the water quantity for the rinsing process in ml via the keyboard of the service device.  
 Setting range: 50–240 ml  
 Manufacturer's setting: 130 ml

**Display**




Every change is saved immediately. To reset a value to the manufacturer's setting *see chap. «Resetting to the manufacturer's settings»*.

Checking the adjustment:



- Press the "Down" button. The display changes to the next submenu.
- Press the "Up" button. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*)  
 or  
 Select a new menu for adjustment (*see chap. «Selecting and changing values»*).

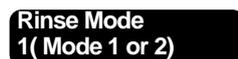

### 4.2.49 Setting the mode for the rinsing process

**Button**



8x




1x



- Activate the programming mode (see chap. «Access to the programming mode with the service device»).
- Press the "Down" button 8 times.
- Press the "Input" button to access the submenus.
- Press "Down" button once.
- Press the "Clear" button to erase the set value.
- Enter the mode for the rinsing porocess via the keyboard of the service device.  
 Setting range: 1 = step by step rinsing process  
 2 = rinsing process without stop  
 Manufacturer's setting: 1

**Display**

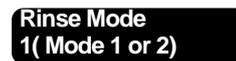

Every change is saved immediately. To reset a value to the manufacturer's setting see chap. «Resetting to the manufacturer's settings».

Checking the adjustment:



- Press the "Up" button. The display changes to the previous submenu.




- Press the "Down" button. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (see chap. «Quitting the programming mode with the service device») or  
 Select a new menu for adjustment (see chap. «Selecting and changing values»).




### 4.2.50 Setting the boiler temperature

**Button**

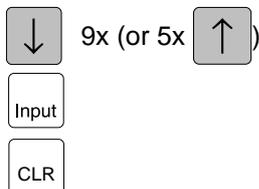

- Activate the programming mode (see chap. «Access to the programming mode with the service device»).
- Press the "Down" button 9 times.
- Press the "Input" button to access the submenu.
- Press the "Clear" button to erase the set value.
- Enter required value in degree C via the keyboard of the service device.  
 Setting range: 75 °C–97 °C  
 Manufacturer's setting: 96 °C

**Display**

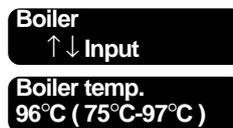


Every change is saved immediately. To reset a value to the manufacturer's setting see chap. «Resetting to the manufacturer's settings».

Checking the adjustment:



- Press the "Down" button. The display changes to the next submenu.
- Press the "Up" button. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (see chap. «Quitting the programming mode with the service device») or Select a new menu for adjustment (see chap. «Selecting and changing values»).

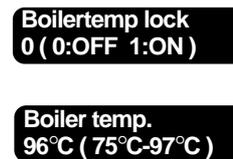

### 4.2.51 Enabling /disabling delivery at low temperature

**Button**



9x (or 5x



1x



- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button 9 times.
- Press the "Input" button to access the submenus.
- Press "Down" button once.
- Press the "Clear" button to erase the set value.
- Enable or disable delivery at low temperature via the keyboard of the service device.  
 Setting range:     1 = delivery disabled  
                       0 = delivery enabled  
 Manufacturer's setting: 0

**Display**



**CAUTION:** If delivery at low temperature is enabled it is possible to deliver cold beverages. In this case observe local regulations.



Every change is saved immediately. To reset a value to the manufacturer's setting *see chap. «Resetting to the manufacturer's settings»*.

Checking the adjustment:



- Press the "Down" button. The display changes to the next submenu.



- Press the "Up" button. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*)  
 or  
 Select a new menu for adjustment (*see chap. «Selecting and changing values»*).



### 4.2.52 Setting the max. filling time of the boiler at start up

**Button**



9x (or 5x )




2x



- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button 9 times.
- Press the "Input" button to access the submenu.
- Press the "Down" button twice.
- Press the "Clear" button to erase the set value.
- Enter the max. filling time for the boiler at start up in sec. via the keyboard of the service device.  
 Setting range: 100–400 sec.  
 Manufacturer's setting: 120 sec.

**Display**

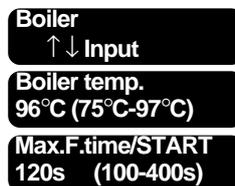

Every change is saved immediately. To reset a value to the manufacturer's setting *see chap. «Resetting to the manufacturer's settings»*.

Checking the adjustment:



- Press the "Down" button. The display changes to the next menu.



- Press the "Up" button. The display changes back to the value that has just been set. Check the adjustment




- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*)  
 or  
 Select a new menu for adjustment (*see chap. «Selecting and changing values»*).

### 4.2.53 Setting the max. filling time of the boiler during operation

Button		Display
 9x (or 5x  ) 	<ul style="list-style-type: none"> <li>- Activate the programming mode (<i>see chap. «Access to the programming mode with the service device»</i>).</li> <li>- Press the "Down" button 9 times.</li> <li>- Press the "Input" button to access the submenus.</li> </ul>	<div style="background-color: black; color: white; padding: 2px; border: 1px solid black;">Boiler ↑↓ In..put</div> <div style="background-color: black; color: white; padding: 2px; border: 1px solid black;">Boiler temp. 96°C (75°C-97°C)</div>
 3x (or 2x  ) 	<ul style="list-style-type: none"> <li>- Press the "Down" button 3 times</li> <li>- Press the "Clear" button to erase the set value.</li> <li>- Enter the max. filling time for the boiler during operation in sec. via the keyboard of the service device.                      Setting range:                    30–60 sec.                      Manufacturer's setting:        45 sec.</li> </ul>	<div style="background-color: black; color: white; padding: 2px; border: 1px solid black;">Max.F.time/NORM. 60s (30-60s)</div>
	<p>Every change is saved immediately. To reset a value to the manufacturer's setting see <i>chap. «Resetting to the manufacturer's settings»</i>.</p>	
	<p>Checking the adjustment:</p> <ul style="list-style-type: none"> <li>- Press the "Down" button. The display changes to the next menu.</li> </ul>	<div style="background-color: black; color: white; padding: 2px; border: 1px solid black;">Min. Evapor. time 10 min (5-90min)</div>
	<ul style="list-style-type: none"> <li>- Press the "Up" button. The display changes back to the value that has just been set. Check the adjustment</li> <li>- Quit the programming mode (<i>see chap. «Quitting the programming mode with the service device»</i>)                      or                      Select a new menu for adjustment (<i>see chap. «Selecting and changing values»</i>).</li> </ul>	<div style="background-color: black; color: white; padding: 2px; border: 1px solid black;">Max.F.time/NORM. 60s (30-60s)</div>


### 4.2.54 Setting the leak control

**Button**

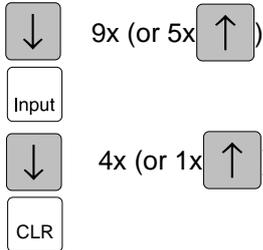

- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button 9 times.
- Press the "Input" button to access the submenus.
- Press the "Down" button 4 times.
- Press the "Clear" button to erase the set value.
- Enter the leak check for the boiler in min. via the keyboard of the service device.  
 Setting range: 10–90 min.  
 Manufacturer's setting: 50 min.


**Display**

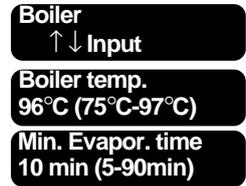

Every change is saved immediately. To reset a value to the manufacturer's setting *see chap. «Resetting to the manufacturer's settings»*.


Checking the adjustment:

- Press the "Up" button. The display changes to the previous menu.
- Press the "Down" button. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*) or Select a new menu for adjustment (*see chap. «Selecting and changing values»*).

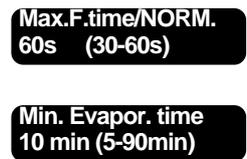


### 4.2.55 Activation / deactivation of the sensor for cup / pot delivery

**Button**

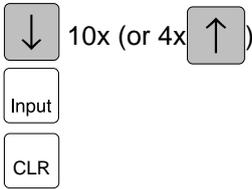

- Activate the programming mode (see chap. «Access to the programming mode with the service device»).
- Press the "Down" button 10 times.
- Press the "Input" button to access the submenus.
- Press the "Clear" button to erase the set value.
- Activate or deactivate the sensor for cup / pot delivery via the keyboard of the service device.  
 Setting range:     1 = sensor activated  
                       0 = sensor deactivated  
 Manufacturer's setting: 1

**Display**

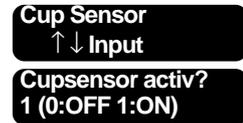

**WARNING:** If the sensor is disabled beverages and hot water are delivered even when there is no vessel in the delivery area. There is an increased risk of being scalded.

 Every change is saved immediately. To reset a value to the manufacturer's setting see chap. «Resetting to the manufacturer's settings».


Checking the adjustment:

- Press the "Down" button. The display changes to the next menu.
- Press the "Up" button. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (see chap. «Quitting the programming mode with the service device») or  
 Select a new menu for adjustment (see chap. «Selecting and changing values»).




### 4.2.56 Activation / deactivation of the sensor for pot delivery

**Button**

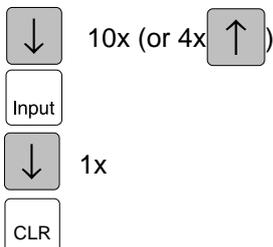

- Activate the programming mode (see chap. «Access to the programming mode with the service device»).
- Press the "Down" button 10 times.
- Press the "Input" button to access the submenu.
- Press the "Down" button once.
- Press the "Clear" button to erase the set value.
- Activate or deactivate the sensor for pot delivery via the keyboard of the service device.  
 Setting range: 1 = sensor activated  
 0 = sensor deactivated  
 Manufacturer's setting: 1

**Display**

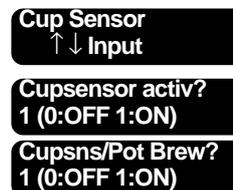

**WARNING:** If the sensor is disabled beverages and hot water are delivered even when there is no vessel in the delivery area. Do not swing the cup carrier into the dispenser and actuate a delivery button when there is no vessel in the delivery area. There is an increased risk of being scalded.



Every change is saved immediately. To reset a value to the manufacturer's setting see chap. «Resetting to the manufacturer's settings».

Checking the adjustment:



- Press the "Up" button. The display changes to the previous menu.
- Press the "Down" button. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (see chap. «Quitting the programming mode with the service device») or  
 Select a new menu for adjustment (see chap. «Selecting and changing values»).



### 4.2.57 Selection of the payment system

**Button**



11x (or 3x )



- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button 11 times.
- Press the "Input" button to access the submenus.
- Press the "Clear" button to erase the set value.
- Select the payment system via the keyboard of the service device.  
 Setting range:           0 = none  
                                   1 = Mars  
                                   2 = NRI G13  
                                   3 = Executive  
 Manufacturer's setting: 0

**Display**




Every change is saved immediately. To reset a value to the manufacturer's setting see *chap. «Resetting to the manufacturer's settings»*.

Checking the adjustment:



- Press the "Down" button. The display changes to the next menu.

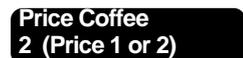

- Press the "Up" button again. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*) or Select a new menu for adjustment (*see chap. «Selecting and changing values»*).



### 4.2.58 Price setting for coffee or tea


**Button**



This setting is only possible when a payment system is connected.

**Display**

These settings are valid for coin modules of type 1 or 2

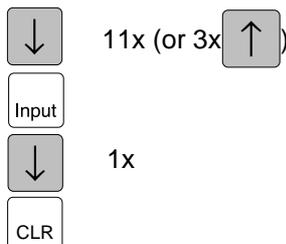

- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button 11 times.
- Press the "Input" button to access the submenu.
- Press the "Down" button once.
- Press the "Clear" button to erase the set value.
- Select the price for coffee via the keyboard of the service device.  
 Setting range: 1, 2  
 Manufacturer's setting: 2



Every change is saved immediately. To reset a value to the manufacturer's setting see *chap. «Resetting to the manufacturer's settings»*.

Checking the adjustment:



- Press the "Down" button. The display changes to the next menu.
- Press the "Up" button. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*) or Select a new menu for adjustment (*see chap. «Selecting and changing values»*).



### 4.2.59 Price setting for mocha \*)

**Button**



This setting is only possible when a payment system is connected.

**Display**

These settings are valid for coin modules of type 1 or 2

- Activate the programming mode (see chap. «Access to the programming mode with the service device»).



11x (or 3x )



- Press the "Down" button 11 times.
- Press the "Input" button to access the submenus.



2x

- Press the "Down" button twice.
- Press the "Clear" button to erase the set value.



- Select the price for mocha via the keyboard of the service device.  
 Setting range: 1, 2  
 Manufacturer's setting: 2



Every change is saved immediately. To reset a value to the manufacturer's setting see chap. «Resetting to the manufacturer's settings».

Checking the adjustment:





- Press the "Down" button. The display changes to the next menu.



- Press the "Up" button. The display changes back to the value that has just been set. Check the adjustment

- Quit the programming mode (see chap. «Quitting the programming mode with the service device») or  
 Select a new menu for adjustment (see chap. «Selecting and changing values»).

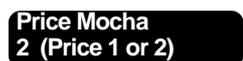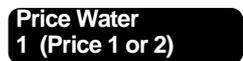

\*) Not with dispensers for tea delivery

### 4.2.60 Price setting for hot water


Button



This setting is only possible when a payment system is connected.

Display

These settings are valid for coin modules of type 1 or 2

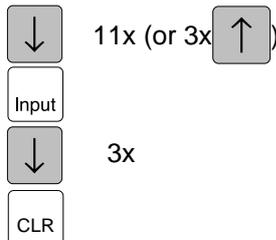


- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button 11 times.
- Press the "Input" button to access the submenus.
- Press the "Down" button 3 times.
- Press the "Clear" button to erase the set value.
- Select the price for hot water via the keyboard of the service device.  
 Setting range: 1, 2  
 Manufacturer's setting: 1




Every change is saved immediately. To reset a value to the manufacturer's setting *see chap. «Resetting to the manufacturer's settings»*.

Checking the adjustment:

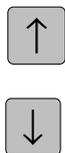

- Press the "Up" button. The display changes to the previous menu.
- Press the "Down" button. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*)  
 or  
 Select a new menu for adjustment (*see chap. «Selecting and changing values»*).

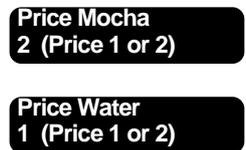

### 4.2.61 Setting the price numbers for a portion of mild coffee or tea

Button



This setting is only possible when a payment system is connected.

Display

These settings are valid for coin modules of type 3.

- Activate the programming mode (see chap. «Access to the programming mode with the service device»).

 11x (or 3x  )  
  
 4x  


- Press the "Down" button 11 times.
- Press the "Input" button to access the submenus.
- Press the "Down" button 4 times.
- Press the "Clear" button to erase the set value.
- Select the price number for a portion of mild coffee or tea via the keyboard of the service device.  
 Setting range: 1–14\*  
 Manufacturer's setting: 1

**Payment**  
 ↑↓ Input  
**Coin Mechanism**  
 0 (0 - 3)  
**Coffee mild**  
 01 (Price 1–14)



Every change is saved immediately. To reset a value to the manufacturer's setting see chap. «Resetting to the manufacturer's settings».

Checking the adjustment:


- Press the "Up" button. The display changes to the previous menu.
- Press the "Down" button. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (see chap. «Quitting the programming mode with the service device») or Select a new menu for adjustment (see chap. «Selecting and changing values»).

**Price Water**  
 1 (Price 1 or 2)  
**Coffee mild**  
 01 (Price 1–14)

\* When setting the price numbers, the maximum number of prices that can be handled by the payment system must be taken into consideration (see operating instructions of the payment systems).

### 4.2.62 Setting the price numbers for a portion of normal coffee or tea


Button




This setting is only possible when a payment system is connected.

Display

These settings are valid for coin modules of type 3.

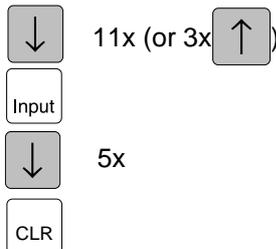

- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button 11 times.
- Press the "Input" button to access the submenus.
- Press the "Down" button 5 times.
- Press the "Clear" button to erase the set value.
- Select the price number for a portion of normal coffee or tea via the keyboard of the service device.  
 Setting range: 1–14\*  
 Manufacturer's setting: 2

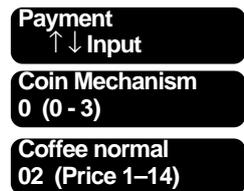

Every change is saved immediately. To reset a value to the manufacturer's setting *see chap. «Resetting to the manufacturer's settings»*.

Checking the adjustment:



- Press the "Up" button. The display changes to the previous menu.
- Press the "Down" button. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*)  
 or  
 Select a new menu for adjustment (*see chap. «Selecting and changing values»*).



\* When setting the price numbers, the maximum number of prices that can be handled by the payment system must be taken into consideration (see operating instructions of the payment systems).

### 4.2.63 Setting the price numbers for a portion of strong coffee or tea

Button




This setting is only possible when a payment system is connected.

Display

These settings are valid for coin modules of type 3.

- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).

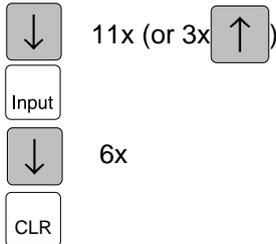


- Press the "Down" button 11 times.
- Press the "Input" button to access the submenus.
- Press the "Down" button 6 times.
- Press the "Clear" button to erase the set value.
- Select the price number for a portion of strong coffee or tea via the keyboard of the service device.  
 Setting range: 1–14\*  
 Manufacturer's setting: 3




Every change is saved immediately. To reset a value to the manufacturer's setting *see chap. «Resetting to the manufacturer's settings»*.

Checking the adjustment:

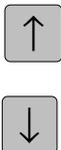

- Press the "Up" button. The display changes to the previous menu.
- Press the "Down" button. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*) or Select a new menu for adjustment (*see chap. «Selecting and changing values»*).

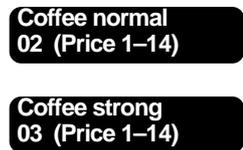

\* When setting the price numbers, the maximum number of prices that can be handled by the payment system must be taken into consideration (see operating instructions of the payment systems).

### 4.2.64 Setting the price numbers for a portion of mild mocha \*)


Button



This setting is only possible when a payment system is connected.

Display

These settings are valid for coin modules of type 3.

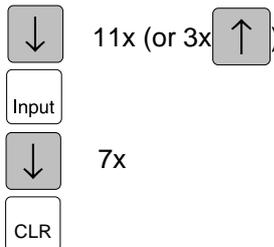

- Activate the programming mode (see chap. «Access to the programming mode with the service device»).
- Press the "Down" button 11 times.
- Press the "Input" button to access the submenus.
- Press the "Down" button 7 times.
- Press the "Clear" button to erase the set value.
- Select the price number for a portion of mild mocha via the keyboard of the service device.  
Setting range: 1–14\*  
Manufacturer's setting: 4



Every change is saved immediately. To reset a value to the manufacturer's setting see chap. «Resetting to the manufacturer's settings».

Checking the adjustment:



- Press the "Up" button. The display changes to the previous menu.
- Press the "Down" button. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (see chap. «Quitting the programming mode with the service device») or  
Select a new menu for adjustment (see chap. «Selecting and changing values»).



\*) Not with dispensers for tea delivery

\* When setting the price numbers, the maximum number of prices that can be handled by the payment system must be taken into consideration (see operating instructions of the payment systems).

### 4.2.65 Setting the price numbers for a portion of normal mocha \*)

Button




This setting is only possible when a payment system is connected.

Display

These settings are valid for coin modules of type 3.

- Activate the programming mode (see chap. «Access to the programming mode with the service device»).

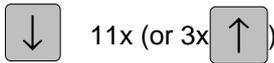

- Press the "Down" button 11 times.



- Press the "Input" button to access the submenus.



- Press the "Down" button 8 times.




- Press the "Clear" button to erase the set value.

- Select the price number for a portion of normal mocha via the keyboard of the service device.

Setting range: 1–14\*

Manufacturer's setting: 5

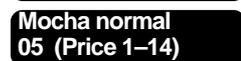

Every change is saved immediately. To reset a value to the manufacturer's setting see chap. «Resetting to the manufacturer's settings».

Checking the adjustment:



- Press the "Up" button. The display changes to the previous menu.



- Press the "Down" button. The display changes back to the value that has just been set. Check the adjustment



- Quit the programming mode (see chap. «Quitting the programming mode with the service device»)

or

Select a new menu for adjustment (see chap.

«Selecting and changing values»).

\*) Not with dispensers for tea delivery

\* When setting the price numbers, the maximum number of prices that can be handled by the payment system must be taken into consideration (see operating instructions of the payment systems).

### 4.2.66 Setting the price numbers for a portion of strong mocha \*)


Button



This setting is only possible when a payment system is connected.

Display

These settings are valid for coin modules of type 3.

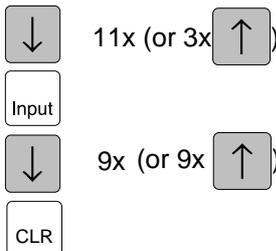


- Activate the programming mode (see chap. «Access to the programming mode with the service device»).
- Press the "Down" button 11 times.
- Press the "Input" button to access the submenu.
- Press the "Down" button 9 times.
- Press the "Clear" button to erase the set value.
- Select the price number for a portion of strong mocha via the keyboard of the service device.  
Setting range: 1–14\*  
Manufacturer's setting: 6




Every change is saved immediately. To reset a value to the manufacturer's setting see chap. «Resetting to the manufacturer's settings».



- Checking the adjustment:
- Press the "Up" button. The display changes to the previous menu.

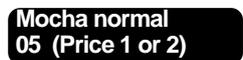

- Press the "Down" button. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (see chap. «Quitting the programming mode with the service device») or  
Select a new menu for adjustment (see chap. «Selecting and changing values»).

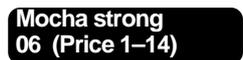

\*) Not with dispensers for tea delivery

\* When setting the price numbers, the maximum number of prices that can be handled by the payment system must be taken into consideration (see operating instructions of the payment systems).

### 4.2.67 Setting the price numbers for a pot of mild coffee or tea (multi-brew)

Button




This setting is only possible when a payment system is connected.

Display

These settings are valid for coin modules of type 3.


- Activate the programming mode (see chap. «Access to the programming mode with the service device»).

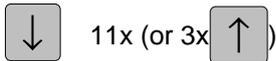

- Press the "Down" button 11 times.



- Press the "Input" button to access the submenus.

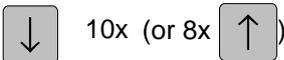

- Press the "Down" button 10 times.



- Press the "Clear" button to erase the set value.

- Select the price number for a pot of mild coffee or tea via the keyboard of the service device.

Setting range: 1–14\*

Manufacturer's setting: 7



Every change is saved immediately. To reset a value to the manufacturer's setting see chap. «Resetting to the manufacturer's settings».

Checking the adjustment:



- Press the "Up" button. The display changes to the previous menu.



- Press the "Down" button. The display changes back to the value that has just been set. Check the adjustment

- Quit the programming mode (see chap. «Quitting the programming mode with the service device»)

or

Select a new menu for adjustment (see chap.

«Selecting and changing values»).



\* When setting the price numbers, the maximum number of prices that can be handled by the payment system must be taken into consideration (see operating instructions of the payment systems).

### 4.2.68 Setting the price numbers for a pot of normal coffee or tea (multi-brew)


Button




This setting is only possible when a payment system is connected.

Display

These settings are valid for coin modules of type 3.

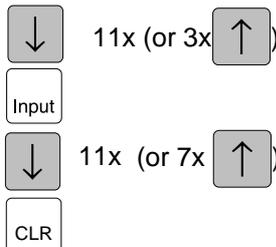

- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button 11 times.
- Press the "Input" button to access the submenu.
- Press the "Down" button 11 times.
- Press the "Clear" button to erase the set value.
- Select the price number for a pot of normal coffee or tea via the keyboard of the service device.  
 Setting range: 1–14\*  
 Manufacturer's setting: 8

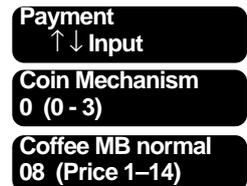


Every change is saved immediately. To reset a value to the manufacturer's setting *see chap. «Resetting to the manufacturer's settings»*.

Checking the adjustment:



- Press the "Up" button. The display changes to the previous menu.
- Press the "Down" button. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*)  
 or  
 Select a new menu for adjustment (*see chap. «Selecting and changing values»*).

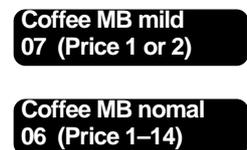

\* When setting the price numbers, the maximum number of prices that can be handled by the payment system must be taken into consideration (see operating instructions of the payment systems).

### 4.2.69 Setting the price numbers for a pot of strong coffee or tea (multi-brew)

Button



This setting is only possible when a payment system is connected.

Display

These settings are valid for coin modules of type 3.

- Activate the programming mode (see chap. «Access to the programming mode with the service device»).



11x (or 3x



- Press the "Down" button 11 times.



- Press the "Input" button to access the submenu.



12x (or 6x



- Press the "Down" button 12 times.



- Press the "Clear" button to erase the set value.

- Select the price number for a pot of strong coffee or tea via the keyboard of the service device.

Setting range: 1–14\*

Manufacturer's setting: 9



Every change is saved immediately. To reset a value to the manufacturer's setting see chap. «Resetting to the manufacturer's settings».

Checking the adjustment:



- Press the "Up" button. The display changes to the previous menu.



- Press the "Down" button. The display changes back to the value that has just been set. Check the adjustment

- Quit the programming mode (see chap. «Quitting the programming mode with the service device»)

or

Select a new menu for adjustment (see chap.

«Selecting and changing values»).



\* When setting the price numbers, the maximum number of prices that can be handled by the payment system must be taken into consideration (see operating instructions of the payment systems).

### 4.2.70 Setting the price numbers for a pot of mild mocha (multi-brew) \*)


Button



This setting is only possible when a payment system is connected.

Display

These settings are valid for coin modules of type 3.

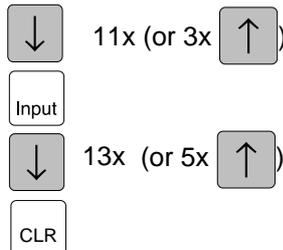

- Activate the programming mode (see chap. «Access to the programming mode with the service device»).
- Press the "Down" button 11 times.
- Press the "Input" button to access the submenu.
- Press the "Down" button 13 times.
- Press the "Clear" button to erase the set value.
- Select the price number for a pot of mild mocha via the keyboard of the service device.  
 Setting range: 1–14\*  
 Manufacturer's setting: 10




Every change is saved immediately. To reset a value to the manufacturer's setting see chap. «Resetting to the manufacturer's settings».

Checking the adjustment:



- Press the "Up" button. The display changes to the previous menu.
- Press the "Down" button. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (see chap. «Quitting the programming mode with the service device») or  
 Select a new menu for adjustment (see chap. «Selecting and changing values»).

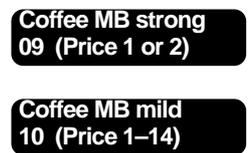

\*) Not with dispensers for tea delivery

\* When setting the price numbers, the maximum number of prices that can be handled by the payment system must be taken into consideration (see operating instructions of the payment systems).

### 4.2.71 Setting the price numbers for a pot of normal mocha (multi-brew) \*)

Button



This setting is only possible when a payment system is connected.

Display

These settings are valid for coin modules of type 3.

- Activate the programming mode (see chap. «Access to the programming mode with the service device»).



11x (or 3x ↑)



- Press the "Down" button 11 times.



- Press the "Input" button to access the submenus.



14x (or 4x ↑)



- Press the "Down" button 14 times.



- Press the "Clear" button to erase the set value.

- Select the price number for a pot of normal mocha via the keyboard of the service device.

Setting range: 1–14\*

Manufacturer's setting: 11



Every change is saved immediately. To reset a value to the manufacturer's setting see chap. «Resetting to the manufacturer's settings».

Checking the adjustment:



- Press the "Up" button. The display changes to the previous menu.



- Press the "Down" button. The display changes back to the value that has just been set. Check the adjustment

- Quit the programming mode (see chap. «Quitting the programming mode with the service device»)

or

Select a new menu for adjustment (see chap. «Selecting and changing values»).



\*) Not with dispensers for tea delivery

\* When setting the price numbers, the maximum number of prices that can be handled by the payment system must be taken into consideration (see operating instructions of the payment systems).

### 4.2.72 Setting the price numbers for a pot of strong mocha (multi-brew) \*)


Button



This setting is only possible when a payment system is connected.

Display

These settings are valid for coin modules of type 3.

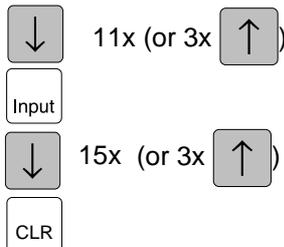


- Activate the programming mode (see chap. «Access to the programming mode with the service device»).
- Press the "Down" button 11 times.
- Press the "Input" button to access the submenu.
- Press the "Down" button 15 times.
- Press the "Clear" button to erase the set value.
- Select the price number for a pot of strong mocha via the keyboard of the service device.  
Setting range: 1–14\*  
Manufacturer's setting: 12



Every change is saved immediately. To reset a value to the manufacturer's setting see chap. «Resetting to the manufacturer's settings».



- Checking the adjustment:
- Press the "Up" button. The display changes to the previous menu.
  - Press the "Down" button. The display changes back to the value that has just been set. Check the adjustment
  - Quit the programming mode (see chap. «Quitting the programming mode with the service device») or  
Select a new menu for adjustment (see chap. «Selecting and changing values»).

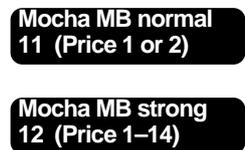

\*) Not with dispensers for tea delivery

\* When setting the price numbers, the maximum number of prices that can be handled by the payment system must be taken into consideration (see operating instructions of the payment systems).

### 4.2.73 Setting the price numbers for a portion of hot water

Button



This setting is only possible when a payment system is connected.

Display

These settings are valid for coin modules of type 3.

- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).

 11x (or 3x )  
  
 16x (or 2x )  


- Press the "Down" button 11 times.
- Press the "Input" button to access the submenu.
- Press the "Down" button 16 times.
- Press the "Clear" button to erase the set value.
- Select the price number for a portion of hot water via the keyboard of the service device.  
 Setting range: 1–14\*  
 Manufacturer's setting: 13

**Payment**  
 ↑↓ Input  
**Coin Mechanism**  
 0 (0 - 3)  
**Water portion**  
 13 (Price 1–14)



Every change is saved immediately. To reset a value to the manufacturer's setting *see chap. «Resetting to the manufacturer's settings»*.

Checking the adjustment:


- Press the "Up" button. The display changes to the previous menu.
- Press the "Down" button. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*)  
 or  
 Select a new menu for adjustment (*see chap. «Selecting and changing values»*).

**Mocha MB strong**  
 12 (Price 1–14)  
**Water portion**  
 13 (Price 1–14)

\* When setting the price numbers, the maximum number of prices that can be handled by the payment system must be taken into consideration (see operating instructions of the payment systems).

### 4.2.74 Setting the price numbers for a pot of hot water (multi-brew)


Button




This setting is only possible when a payment system is connected.

Display

These settings are valid for coin modules of type 3.

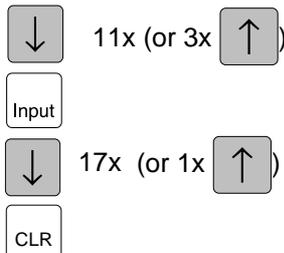


- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button 11 times.
- Press the "Input" button to access the submenu.
- Press the "Down" button 17 times.
- Press the "Clear" button to erase the set value.
- Select the price number for a pot of hot water via the keyboard of the service device.  
 Setting range: 1–14\*  
 Manufacturer's setting: 14

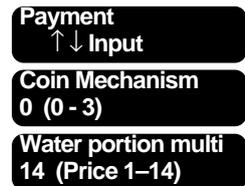


Every change is saved immediately. To reset a value to the manufacturer's setting *see chap. «Resetting to the manufacturer's settings»*.

Checking the adjustment:

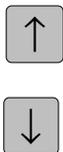


- Press the "Up" button. The display changes to the previous menu.
- Press the "Down" button. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*)  
 or  
 Select a new menu for adjustment (*see chap. «Selecting and changing values»*).

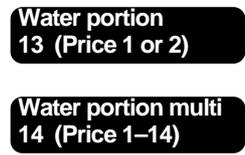

\* When setting the price numbers, the maximum number of prices that can be handled by the payment system must be taken into consideration (see operating instructions of the payment systems).

### 4.2.75 Setting the starting number for multibrew

**Button**

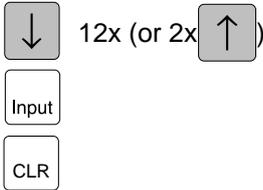

- Activate the programming mode (*see chap. «Access to the programming mode with the service device»*).
- Press the "Down" button 12 times.
- Press the "Input" button to access the submenu.
- Press the "Clear" button to erase the set value.
- Select the starting number for multibrew via the keyboard of the service device.  
 Setting range: 0–9  
 Manufacturer's setting: 5

**Display**




Every change is saved immediately. To reset a value to the manufacturer's setting *see chap. «Resetting to the manufacturer's settings»*.

Checking the adjustment:




- Press the "Input" button. The display changes back to the main menu.
- Press the "Input" button again. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (*see chap. «Quitting the programming mode with the service device»*)  
or  
 Select a new menu for adjustment (*see chap. «Selecting and changing values»*).

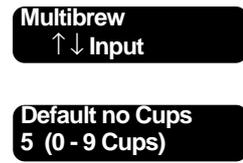


### 4.2.76 Setting the programming for the operating panel

**Button**

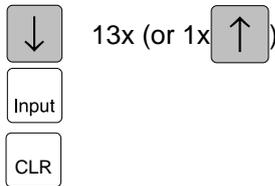

- Activate the programming mode (see chap. «Access to the programming mode with the service device»).
- Press the "Down" button 13 times.
- Press the "Input" button to access the submenus.
- Press the "Clear" button to erase the set value.
- Select the starting number for multibrew via the keyboard of the service device.  
 Setting range:           1 = programming enabled  
                               2 = programming disabled  
 Manufacturer's setting: 1

**Display**

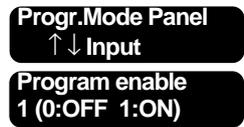

 Every change is saved immediately. To reset a value to the manufacturer's setting see chap. «Resetting to the manufacturer's settings».

Checking the adjustment:



- Press the "Input" button. The display changes back to the main menu.



- Press the "Input" button again. The display changes back to the value that has just been set. Check the adjustment
- Quit the programming mode (see chap. «Quitting the programming mode with the service device») or Select a new menu for adjustment (see chap. «Selecting and changing values»).

