

Printer Configuration Procedure

For Printer Kits **4951.15006** (UK), **4951.15011** (German) and **4951.15014** (France)

Note: on the control panel of the printer, the buttons are titled (left to right) 'Blank', 'Paper Feed', '1'(on) and '0'(off). On earlier models, the left most button had a 'D' character.

Plug printer charger into printer and connect charger to mains supply.

Place a paper roll in the holder of the printer and feed the end of the paper into the printer mechanism.

Turn the printer on by pressing the '1' button, and feed the paper through using the Paper Feed button.

Turn the printer off by pressing the '0' button.

Whilst holding the 'Blank' button on the printer, turn the printer on using the '1' button. The printer should power up and print out its existing configuration.

The 'Data bits' should be set to 7. If it is not, then press the 'Blank' button until 'Data bits :- 7' is printed.

Press the Paper Feed button to move to the next parameter. If the parameter is not at the correct value, press the 'Blank' button until it is. Once the parameter is correct, press the Paper Feed button.

Set all the parameters as follows;

Data bits :- 7

Parity :- Even

Baud-rate :- 1200

Country :- UK or France or Germany (as appropriate)

Print mode :- Text

Auto-off :-5 min.

Emulation :- Standard

DTR :- Normal

When all parameters are correctly set, press both the 'Blank' and 'Paper Feed' buttons at the same time. This stores the parameters within the printer and prints out the stored values.