

INTRODUCTION

The installation procedure for the MM-5 and MM-6 Models are virtually identical. The MM-6 incorporates improved door release latches which are opened as shown.


STEREO ROUND SOUND SYSTEM CONNECTION CHART

Connections for the MM-6 are identical to those for the MM-5 with the exception of the added tweeters. Refer to the connections chart on the next page for MM-6 sound system connections.


CHECKOUT AND PRICING

Pricing


The credit and pricing arrangement for the MM-6 is different from the MM-5 due to the slide switches on the service control center. If a change in pricing is desired, refer to the price of play programming procedure on page 7.

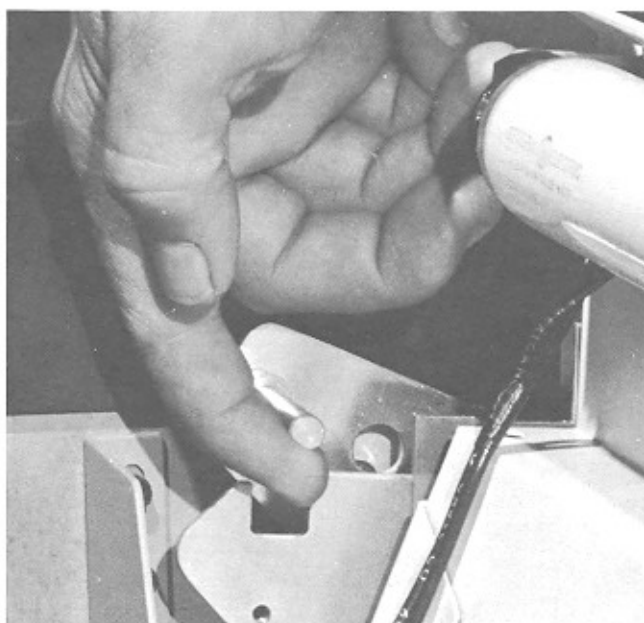

FRONT DOOR LATCH

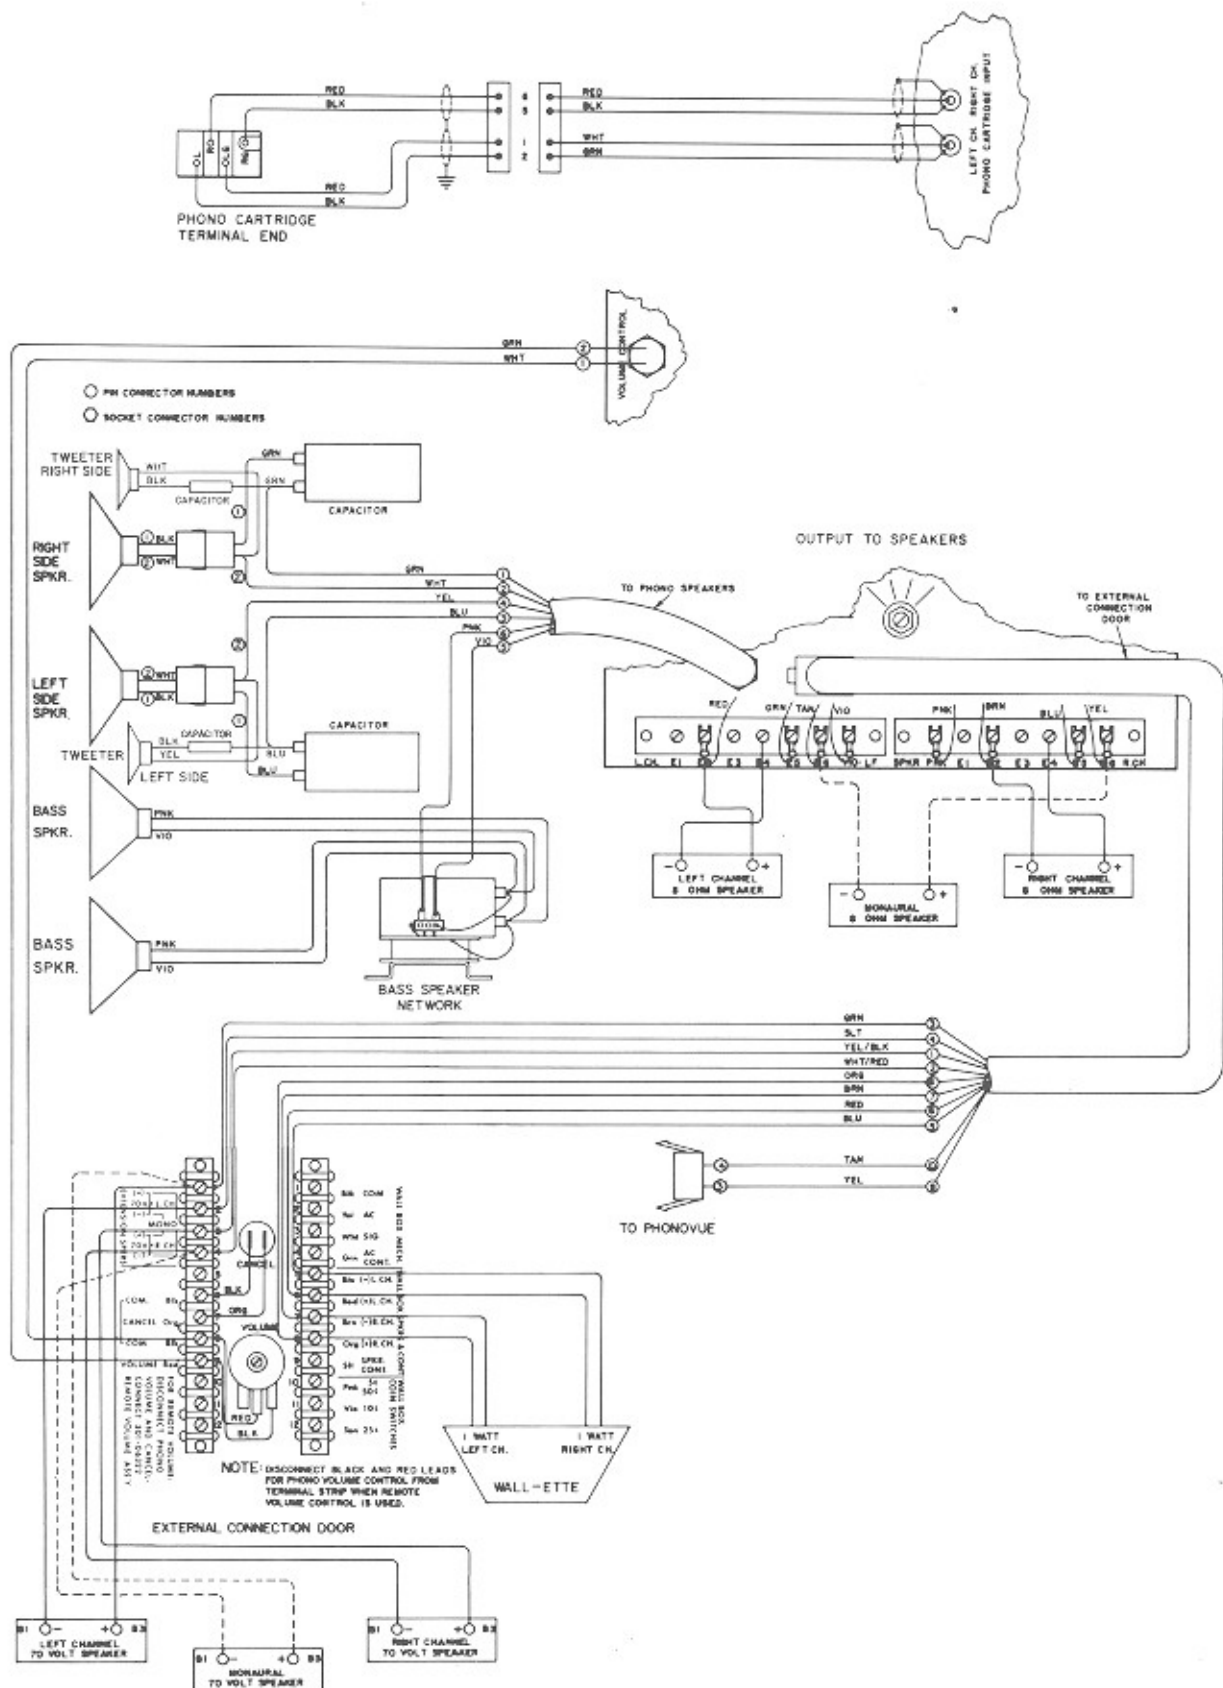

STEREO ROUND SOUND SYSTEM

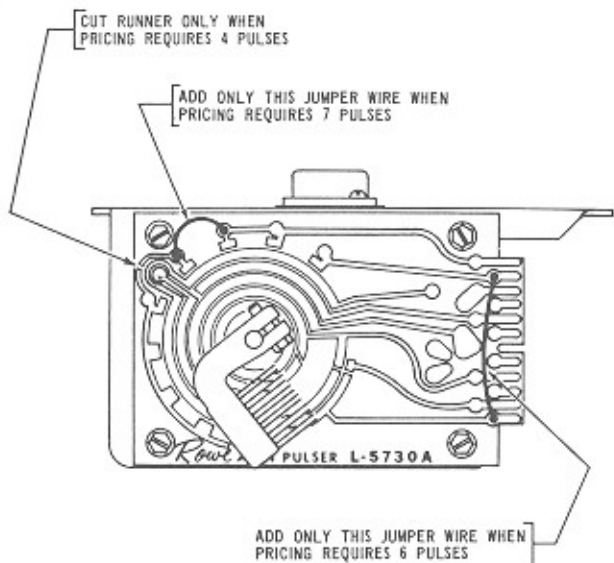
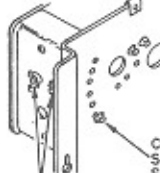







| STEP | | | |
|------|---|--|----------|
| 1 | SELECT PRICE CARD FROM COMBINATIONS SHOWN | 1 STANDARD PLAYS QUARTER 2 PLAYS HALF DOLLAR . . 5 PLAYS ALBUM SIDES QUARTER 1 PLAY HALF DOLLAR . . 2 PLAYS PLUS 1 STANDARD PLAY <small>200-14744</small> | |
| | | STANDARD PLAYS QUARTER 2 PLAYS HALF DOLLAR . . 5 PLAYS PHONOVIEW MOVIES OR ALBUM SIDES QUARTER 1 PLAY HALF DOLLAR . . 2 PLAYS PLUS 1 STANDARD PLAY <small>200-66467</small> | |
| 2 | CREDIT UNIT - FRONT VIEW CREDIT STOP COIL MOUNTING SCREWS CREDIT STOP SCREW CREDIT UNIT - REAR VIEW CANCEL STOP COIL MOUNTING SCREWS CANCEL STOP SCREW | 4 CREDIT STOP COIL SLOT 3 2 09 08 07 CREDIT STOP SCREW HOLE 06 05 04 03 02 | |
| | | 3 CANCEL STOP COIL SLOT 2 1 06 05 04 CANCEL STOP SCREW HOLE 03 02 01 | |
| 3 | NICKEL DIVERTER POSITION COIN ACCEPTORS FREE BLOCKED NATIONAL FREE BLOCKED | FREE OR BLOCKED | |
| 4 | NICKELS AND DIMES REJECTED? SEE SUPPLEMENT SHEET F-14097 | YES | |
| 5 | PRICE SWITCH SETTINGS SW 1 1 2 3 SW 2 4 5 6 SW 3 7 8 | SWITCH # 1 | 1 |
| | | SWITCH # 2 | 4 |
| | | SWITCH # 3 | 7 |
| 6 | EXTRA PLAY SWITCH POSITION IF MAF MONEY METER IS USED | NO | |
| 7 | IF NO MONEY METER IS USED, IS BONUS RELAY REQUIRED? | NO | |
| 8 | 200-66390 2-QUARTER CREDIT WHEEL REQUIRED? | NO | |

* THIS PRICING REQUIRES CREDIT UNIT WIPER TO BE ADJUSTED TO MINUS ONE CREDIT WHEN TURNED ALL THE WAY COUNTER-CLOCKWISE MANUALLY.

G PROCEDURE

| 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|---|--|--|---|---|---|---|
| STANDARD PLAYS QUARTER.....2 PLAYS HALF DOLLAR OR 2 QUARTERS...5 PLAYS DOLLAR BILL...14 PLAYS ALBUM SIDES QUARTER.....1 PLAY HALF DOLLAR OR 2 QUARTERS...2 PLAYS PLUS 1 STANDARD PLAY DOLLAR BILL...7 PLAYS 200-66475 | STANDARD PLAYS QUARTER.....2 PLAYS HALF DOLLAR OR 2 QUARTERS...5 PLAYS DOLLAR BILL...12 PLAYS ALBUM SIDES QUARTER.....1 PLAY HALF DOLLAR OR 2 QUARTERS...2 PLAYS PLUS 1 STANDARD PLAY DOLLAR BILL...6 PLAYS 200-66469 | STANDARD PLAYS QUARTER.....2 PLAYS HALF DOLLAR OR 2 QUARTERS...5 PLAYS ALBUM SIDES QUARTER.....1 PLAY HALF DOLLAR OR 2 QUARTERS...2 PLAYS PLUS 1 STANDARD PLAY 200-14602 | STANDARD PLAYS QUARTER.....2 PLAYS 2 QUARTERS...5 PLAYS 4 QUARTERS...11 PLAYS 200-66472 | STANDARD PLAYS QUARTER.....2 PLAYS HALF DOLLAR OR 2 QUARTERS...5 PLAYS DOLLAR BILL...11 PLAYS ALBUM SIDES QUARTER.....1 PLAY HALF DOLLAR OR 2 QUARTERS...2 PLAYS PLUS 1 STANDARD PLAY DOLLAR BILL...5 PLAYS PLUS 1 STANDARD PLAY 200-14604 | STANDARD PLAYS QUARTER.....2 PLAYS HALF DOLLAR OR 2 QUARTERS...6 PLAYS 200-66473 | STANDARD PLAYS QUARTER.....2 PLAYS HALF DOLLAR OR 2 QUARTERS...6 PLAYS DOLLAR BILL...14 PLAYS ALBUM SIDES QUARTER.....1 PLAY HALF DOLLAR OR 2 QUARTERS...3 PLAYS 200-66478 |
| STANDARD PLAYS QUARTER.....2 PLAYS HALF DOLLAR OR 2 QUARTERS...5 PLAYS DOLLAR BILL...14 PLAYS PHONOVOUE MOVIES OR ALBUM SIDES QUARTER.....1 PLAY HALF DOLLAR OR 2 QUARTERS...2 PLAYS PLUS 1 STANDARD PLAY DOLLAR BILL...7 PLAYS 200-66468 | THIS PRICING REQUIRES 401-05801 2-QUARTER ADAPTER SWITCH SETTING - 2 | STANDARD PLAYS QUARTER.....2 PLAYS HALF DOLLAR OR 2 QUARTERS...5 PLAYS DOLLAR BILL...14 PLAYS ALBUM SIDES QUARTER.....1 PLAY HALF DOLLAR OR 2 QUARTERS...2 PLAYS PLUS 1 STANDARD PLAY DOLLAR BILL...7 PLAYS 200-66470 | STANDARD PLAYS QUARTER.....2 PLAYS HALF DOLLAR OR 2 QUARTERS...5 PLAYS 200-66471 | STANDARD PLAYS QUARTER.....2 PLAYS HALF DOLLAR OR 2 QUARTERS...5 PLAYS DOLLAR BILL...11 PLAYS PHONOVOUE MOVIES OR ALBUM SIDES QUARTER.....1 PLAY HALF DOLLAR OR 2 QUARTERS...2 PLAYS PLUS 1 STANDARD PLAY DOLLAR BILL...5 PLAYS PLUS 1 STANDARD PLAY 200-66474 | STANDARD PLAYS QUARTER.....2 PLAYS HALF DOLLAR OR 2 QUARTERS...6 PLAYS ALBUM SIDES QUARTER.....1 PLAY HALF DOLLAR OR 2 QUARTERS...3 PLAYS 200-66476 | |
| THIS PRICING REQUIRES WIRING CHANGE IN BILL ACCEPTOR FOR 7 PULSES SEE AT LEFT | THIS PRICING REQUIRES WIRING CHANGE IN BILL ACCEPTOR FOR 6 PULSES SEE AT LEFT | STANDARD PLAYS QUARTER.....2 PLAYS HALF DOLLAR OR 2 QUARTERS...5 PLAYS PHONOVOUE MOVIES OR ALBUM SIDES QUARTER.....1 PLAY HALF DOLLAR OR 2 QUARTERS...2 PLAYS PLUS 1 STANDARD PLAY 200-66471 | | THIS PRICING REQUIRES WIRING CHANGE IN BILL ACCEPTOR FOR 4 PULSES SEE AT LEFT | STANDARD PLAYS QUARTER.....2 PLAYS 2 QUARTERS...6 PLAYS 4 QUARTERS...14 PLAYS 200-66477 | THIS PRICING REQUIRES WIRING CHANGE IN BILL ACCEPTOR FOR 4 PULSES SEE AT LEFT |
| 2 | 2 | 3 | 3 | 3 | 4* | 4* |
| 5 | 5 | 6 | 6 | 6 | 8* | 8* |
| 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| 2 | 2 | 2 | 1 | 2 | 2 | 2 |
| FREE OR BLOCKED | FREE OR BLOCKED | FREE OR BLOCKED | FREE OR BLOCKED | FREE OR BLOCKED | FREE OR BLOCKED | FREE OR BLOCKED |
| YES | YES | YES | YES | YES | YES | YES |
| 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| 4 | 4 | 4 | 4 | 4 | 4 | 4 |
| 7 | 7 | 7 | 7 | 7 | 7 | 7 |
| NO | NO | NO | NO | NO | NO | NO |
| NO | NO | NO | NO | NO | NO | NO |
| NO | NO | YES | YES | YES | YES | YES |

| STEP | | 9 | 10 | 11 | 12 |
|----------|--|--|--|---|---|
| 1 | SELECT PRICE CARD FROM COMBINATIONS SHOWN | STANDARD PLAYS 10¢.....1 PLAY QUARTER.....3 PLAYS HALF DOLLAR..7 PLAYS ALBUM SIDES QUARTER.....1 PLAY HALF DOLLAR..2 PLAYS PLUS 1 STANDARD PLAY 200-74807 | STANDARD PLAYS 10¢.....1 PLAY QUARTER.....3 PLAYS HALF DOLLAR..7 PLAYS DOLLAR BILL..15 PLAYS ALBUM SIDES QUARTER.....1 PLAY HALF DOLLAR..2 PLAYS PLUS 1 STANDARD PLAY DOLLAR BILL...5 PLAYS 200-74802 | STANDARD PLAYS 10¢.....1 PLAY QUARTER.....3 PLAYS HALF DOLLAR..6 PLAYS ALBUM SIDES QUARTER.....1 PLAY HALF DOLLAR..2 PLAYS 200-66487 | STANDARD PLAYS 10¢.....1 PLAY QUARTER.....3 PLAYS HALF DOLLAR..6 PLAYS ALBUM SIDES QUARTER.....1 PLAY PLUS 1 ST HALF DOLLAR..2 PLAYS 200-66487 |
| 2 | <p>CREDIT UNIT - FRONT VIEW</p>  <p>CREDIT STOP COIL MOUNTING SCREWS CREDIT STOP SCREW</p> <p>CREDIT UNIT - REAR VIEW</p>  <p>CANCEL STOP COIL MOUNTING SCREWS CANCEL STOP SCREW</p> <p>4 CREDIT STOP COIL SLOT 3 2</p> <p>09 08 07 06 05 04 03 02</p> <p>3 CANCEL STOP COIL SLOT 2 1</p> <p>06 05 04 03 02 01</p> | STANDARD PLAYS 10¢.....1 PLAY QUARTER.....3 PLAYS HALF DOLLAR..7 PLAYS PHONOVUE MOVIES OR ALBUM SIDES QUARTER.....1 PLAY HALF DOLLAR..2 PLAYS PLUS 1 STANDARD PLAY 200-66479 | STANDARD PLAYS 10¢.....1 PLAY QUARTER.....3 PLAYS HALF DOLLAR..7 PLAYS DOLLAR BILL..15 PLAYS PHONOVUE MOVIES OR ALBUM SIDES QUARTER.....1 PLAY HALF DOLLAR..2 PLAYS PLUS 1 STANDARD PLAY DOLLAR BILL...5 PLAYS 200-66480 | | STANDARD PLAYS 10¢.....1 PLAY QUARTER.....3 PLAYS HALF DOLLAR..7 PLAYS PHONOVUE MOVIES OR ALBUM SIDES QUARTER.....1 PLAY PLUS 1 ST HALF DOLLAR..2 PLAYS 200-66480 |
| | | | 3 | 3 | 4 |
| | | | 7 | 6 | 9 |
| | | | 1 | 1 | 1 |
| | | | 3 | 3 | 3 |
| 3 | <p>NICKEL DIVERTER POSITION</p> <p>COIN ACCEPTORS NATIONAL</p>  <p>FREE</p>  <p>BLOCKED</p> | | FREE | FREE | FR |
| 4 | NICKELS AND DIMES REJECTED? SEE SUPPLEMENT SHEET F-14097 | | NO | NO | N |
| 5 | <p>PRICE SWITCH SETTINGS</p> <p>SW 1  SWITCH # 1</p> <p>SW 2  SWITCH # 2</p> <p>SW 3  SWITCH # 3</p> | | 2 | 2 | 2 |
| | | | 5 | 5 | 5 |
| | | | 7 | 7 | 7 |
| 6 | EXTRA PLAY SWITCH POSITION IF MAF MONEY METER IS USED | | NO | NO | N |
| 7 | IF NO MONEY METER IS USED, IS BONUS RELAY REQUIRED? | | NO | NO | N |

| | 13 | 14 | 15 |
|--|--|--|---|
| AYS PLAY PLAYS PLAYS ES PLAY D PLAY PLAYS | STANDARD PLAYS 15¢.....1 PLAY QUARTER.....2 PLAYS HALF DOLLAR...5 PLAYS ALBUM SIDES QUARTER.....1 PLAY HALF DOLLAR...3 PLAYS 200-66484 | STANDARD PLAYS QUARTER.....2 PLAYS HALF DOLLAR...5 PLAYS DOLLAR BILL...11 PLAYS ALBUM SIDES QUARTER.....1 PLAY HALF DOLLAR...3 PLAYS DOLLAR BILL...6 PLAYS 200-66486 | STANDARD PLAYS 10¢.....1 PLAY QUARTER.....3 PLAYS HALF DOLLAR...7 PLAYS DOLLAR BILL...15 PLAYS 200-66487 |
| AYS PLAY PLAYS PLAYS WIES IDES PLAY D PLAY PLAYS | STANDARD PLAYS 15¢.....1 PLAY QUARTER.....2 PLAYS HALF DOLLAR...5 PLAYS DOLLAR BILL...11 PLAYS ALBUM SIDES QUARTER.....1 PLAY HALF DOLLAR...3 PLAYS DOLLAR BILL...6 PLAYS 200-66485 | | STANDARD PLAYS 10¢.....1 PLAY QUARTER.....3 PLAYS HALF DOLLAR...7 PLAYS 200-66488 |
| | 2 | 2 | 3 |
| | 6 | 6 | 7 |
| | 3 | 3 | 1 |
| | 6 | 6 | 1 |
| E | BLOCKED | FREE OR BLOCKED | FREE |
| | NO | YES | NO |
| | 3 | 3 | 2 |
| | 6 | 6 | 5 |
| | 8 | 8 | 7 |
| | YES | YES | NO |
| | YES | YES | NO |