






ES5100 Brewer cleaning procedure

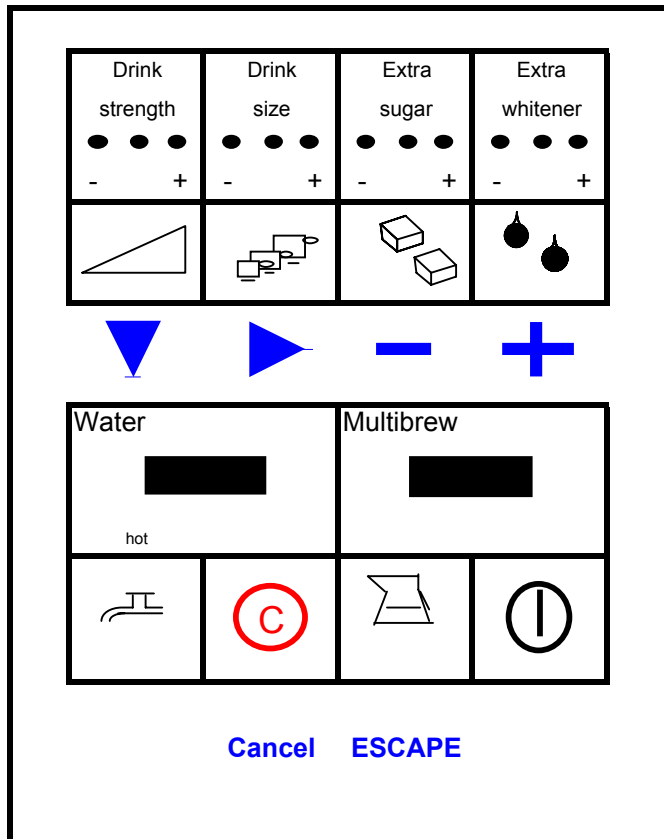

- 1, Open door (Total counters appear on display)
- 2, Press  once or twice if "canister setting" appears (Rinse appears in the display)
- 3, Press  twice (Rinse brewer with stop appears in the display)
- 4, Close door and press  (Display shows clean friction rings)
- 5, Open door and remove brewer cover plate (Slacken knurled nut)
- 6, Clean base of brewer (Use a soft brush)
- 7, Close door, pause for 5 seconds and re-open
- 8, Clean top of brewer (Again use soft brush)
- 9, Close door, pause for 5 seconds and re-open
- 10, Insert cleaning tablet into brewer chamber and refit cover plate (Re-tighten knurled nut)
- 11, Close door (placing a 1.5 litre container on pot stand)
- 12, Press  (Machine will complete cleaning and rinse cycle)
- 13, Press **ESCAPE** until display shows operating mode